



# DYNAMIX DC-48 A/SA

48 ports ADSL 2+ DSLAM



User Manual

<b>List of Figures .....</b>	<b>vii</b>
<b>List of Tables.....</b>	<b>viii</b>
<b>About This Manual.....</b>	<b>1</b>
<b>What's the difference between ATM based DSLAM and IP based DSLAM?.....</b>	<b>3</b>
<b>1 Introduction.....</b>	<b>6</b>
<b>1.1 General.....</b>	<b>6</b>
<b>1.2 Dynamix DC-48A/SA Overview .....</b>	<b>7</b>
<b>1.3 Dynamix DC-48A/SA Application .....</b>	<b>10</b>
<b>1.4 Dynamix DC-48A/SA Features .....</b>	<b>11</b>
1.4.1 Cost Saving Solution for SMB.....	11
1.4.2 Excellent Management with Security .....	11
1.4.3 Advanced Function for Broadband Service Offering.....	11
<b>1.5 Dynamix DC-48A/SA Specifications .....</b>	<b>12</b>
<b>2 Getting Started .....</b>	<b>14</b>
<b>2.1 General.....</b>	<b>14</b>
<b>2.2 Unpacking your Dynamix DC-48A/SA .....</b>	<b>15</b>
<b>2.3 Hardware Installation .....</b>	<b>16</b>
2.3.1 Safety Instruction .....	16
2.3.2 Dynamix DC-48A/SA Rear Panel Connection .....	17
2.3.3 Dynamix DC-48A/SA Front Panel Connection .....	18
<b>2.4 Ways of Management Connection .....</b>	<b>19</b>
2.4.1 EMS(Element Management System).....	19
2.4.2 Command Line Interface (CLI).....	20
2.4.3 Telnet Client .....	20
<b>3 EMS Configuration .....</b>	<b>21</b>
<b>3.1 EMS Functions .....</b>	<b>21</b>
3.1.1 Installation.....	22
3.1.2 Un-installation of EMS .....	27
3.1.3 Starting the System.....	29
3.1.4 Logging into the System .....	30
3.1.5 Terminating the System .....	31
3.1.6 Logging out the Current Session .....	31

---

<b>3.2</b>	<b>Windows Arrangement .....</b>	<b>31</b>
3.2.1	Cascade.....	32
3.2.2	Next Window.....	32
3.2.3	Previous Window .....	32
3.2.4	Arrange Icons .....	32
<b>3.3</b>	<b>Help .....</b>	<b>33</b>
<b>3.4</b>	<b>Tools Menu Introduction.....</b>	<b>34</b>
3.4.1	Environmental Options.....	34
3.4.2	Territory manager configuration .....	37
3.4.3	Agent Manager Configuration .....	39
3.4.4	Telnet .....	43
3.4.5	Ping.....	45
3.4.6	User Manager window .....	46
<b>4</b>	<b>Manage the Dynamix DC-48A/SA .....</b>	<b>50</b>
<b>4.1</b>	<b>Activate Function Management Windows.....</b>	<b>50</b>
4.1.1	Function management Windows.....	51
<b>4.2</b>	<b>Default Setting.....</b>	<b>52</b>
<b>4.3</b>	<b>System Information.....</b>	<b>53</b>
<b>4.4</b>	<b>Current Event .....</b>	<b>54</b>
<b>4.5</b>	<b>System .....</b>	<b>58</b>
4.5.1	Commit and Reboot.....	58
<b>4.6</b>	<b>Configuration.....</b>	<b>59</b>
4.6.1	VLAN Configuration .....	59
4.6.2	Ethernet Configuration .....	60
4.6.3	Static Multicast Configuration.....	62
4.6.4	IGMP Snooping.....	64
4.6.5	SNTP Configuration .....	64
<b>4.7</b>	<b>DSL.....</b>	<b>65</b>
4.7.1	Profile Configuration .....	65
4.7.2	Port Configuration .....	68
<b>4.8</b>	<b>DSL Performance Management .....</b>	<b>70</b>
4.8.1	Physical Layer Info.....	71
4.8.2	Channel Layer Info.....	72
4.8.3	Physical Layer PM .....	73
4.8.4	Channel Layer PM .....	75
<b>5</b>	<b>System Administration with CLI.....</b>	<b>78</b>
<b>5.1</b>	<b>Notation Conventions .....</b>	<b>78</b>

---

<b>5.2</b>	<b>Command Structure</b> .....	<b>78</b>
<b>5.3</b>	<b>Glossary of Terms and Acronyms</b> .....	<b>79</b>
<b>5.4</b>	<b>CLI Command Brief Description</b> .....	<b>80</b>
5.4.1	Calling Commands.....	81
<b>5.5</b>	<b>Commands Group Description</b> .....	<b>82</b>
5.5.1	Interface Commands.....	82
5.5.2	ATM Interface Commands .....	85
5.5.3	ATM VC Commands .....	87
5.5.4	AAL5 VC Statistics Commands.....	90
5.5.5	ATM VC Statistics Commands .....	91
5.5.6	Ethernet Commands .....	92
5.5.7	EOA Commands .....	96
5.5.8	GVRP Port Info Commands.....	98
5.5.9	VLAN Static Commands .....	99
5.5.10	Vlan curr info Commands .....	100
5.5.11	VLAN Port Stats Commands.....	102
5.5.12	Transparent Bridging Table Commands.....	102
5.5.13	IP Route Table Commands .....	106
5.5.14	IP Net to Media Table Commands .....	106
5.5.15	Bridge Mode Commands .....	107
5.5.16	DHCP Client Commands .....	108
5.5.17	Multicast Forwarding Table Commands.....	110
5.5.18	Bridge Static Unicast Commands .....	111
5.5.19	Bridge Static Multicast Commands .....	111
5.5.20	Bridge mcast fwdunreg commands.....	114
5.5.21	ridge tbg traps Commands.....	115
5.5.22	Bridge Port Table Commands .....	116
5.5.23	Bridge Port Stats Table Commands .....	120
5.5.24	Bridge Port Cap Commands .....	121
5.5.25	Ping Commands .....	122
5.5.26	ADSL Line Profile Commands .....	123
5.5.27	ADSL Line Intf Commands .....	134
5.5.28	DSL System Commands.....	135
5.5.29	ADSL Cap Commands.....	136
5.5.30	ADSL Alarm Profile Commands .....	137
5.5.31	ADSL ATUR Trapsext Commands .....	141
5.5.32	ADSL ATUC Trapsext Commands .....	142
5.5.33	ADSL Alarm Profilext Commands .....	143
5.5.34	ADSL ATUC Physical Commands.....	143
5.5.35	ADSL ATUC Channel Commands.....	145
5.5.36	ADSL ATUC Channel Interval Commands.....	147
5.5.37	ADSL ATUC Trap Commands.....	148
5.5.38	ADSL ATUC Perf Commands .....	149
5.5.39	ADSL ATUC Interval Commands .....	149
5.5.40	ADSL ATUR Physical Commands.....	150
5.5.41	ADSL ATUR Channel Commands.....	150
5.5.42	ADSL ATUR Trap Commands.....	150
5.5.43	ADSL ATUR Perf Commands .....	150
5.5.44	ADSL ATUR Interval Commands .....	151

---

5.5.45	ADSL ATUR Chanperf Commands .....	152
5.5.46	ADSL ATUR Chanintrvl Commands .....	153
5.5.47	System Configuration Save And Restore Commands .....	153
5.5.48	System Control Table Commands .....	154
5.5.49	System Info Commands.....	156
5.5.50	System manu info Commands.....	159
5.5.51	System reboot info command .....	161
5.5.52	System Size Commands.....	162
5.5.53	System Stats Commands.....	166
5.5.54	System Traps Commands.....	167
5.5.55	ACL Global Macentry Commands .....	167
5.5.56	ACL Port Macentry Commands .....	169
5.5.57	SNTP Cfg Commands .....	170
5.5.58	SNTP Stats Commands .....	170
5.5.59	SNTP servaddr Commands .....	171
5.5.60	SNMP Comm Commands.....	172
5.5.61	SNMP Host Commands.....	173
5.5.62	SNMP Stats Commands .....	175
5.5.63	SNMP Traphost Commands .....	177
5.5.64	File Commands.....	178
5.5.65	Other Commands.....	183
<b>6</b>	<b>Examples of Frequently Used CLI.....</b>	<b>187</b>
<b>6.1</b>	<b>Dynamix DC-48A/SA Default Settings .....</b>	<b>187</b>
<b>6.2</b>	<b>Modify the system IP .....</b>	<b>187</b>
<b>6.3</b>	<b>Set System Time .....</b>	<b>189</b>
<b>6.4</b>	<b>VLAN .....</b>	<b>193</b>
<b>6.5</b>	<b>Enable the Stacking .....</b>	<b>199</b>
<b>6.6</b>	<b>Modify the Downstream/ Upstream Rate.....</b>	<b>200</b>
<b>6.7</b>	<b>Enable SNMP function .....</b>	<b>207</b>
<b>6.8</b>	<b>LACP aggr.....</b>	<b>207</b>
<b>6.9</b>	<b>Multicast.....</b>	<b>211</b>
<b>6.10</b>	<b>ACL.....</b>	<b>211</b>
<b>6.11</b>	<b>IP Filter .....</b>	<b>212</b>
<b>6.12</b>	<b>DHCP filter .....</b>	<b>214</b>
<b>6.13</b>	<b>FTP filter.....</b>	<b>216</b>
<b>6.14</b>	<b>HTTP filter .....</b>	<b>217</b>

---

---

## List of Figures

---

Figure 0-1 PPPoE application in Traditional ATM-based ADSL Network.....	3
Figure 0-2 PPPoE application in Dynamix DC-48A/SA with Ethernet-All-The-Way Network .....	4
Figure 1-1 48-port model front view.....	7
Figure 1-2 24-port model front view.....	8
Figure 1-3 48-port model rear View .....	8
Figure 1-4 24-port model rear view .....	8
Figure 1-5 Dynamix DC-48A/SA LED Identification .....	9
Figure 2-1 Dynamix DC-48A/SA Rear Panel Connection .....	17
Figure 2-2 Dynamix DC-48A/SA Front Panel Connections.....	18

---

## List of Tables

---

Table 1-1 Dynamix DC-48A/SA LED Description .....	9
Table 3-1 Agent Management Field Definition .....	41
Table 3-2 User Manager Field Definition .....	46
Table 3-3 Register-Security Field Definition .....	49
Table 4-1 Sysinfo field definition .....	53
Table 4-2 Outstanding Event Window Field Definitions .....	56
Table 4-3 Closed Event Window Field Definition .....	57
Table 4-4 VLAN Configuration Field Definitions .....	60
Table 4-5 Ethernet Configuration Field Definitions .....	62
Table 4-6 VLAN Configuration Field Definitions .....	63
Table 4-7 Line Profile Field Definitions .....	66
Table 4-8 Alarm Profile Field Definitions .....	68
Table 4-9 Port Configuration Field Definitions .....	70
Table 4-10 Physical Layer Info Field Definitions .....	71
Table 4-11 Channel Layer Information Field Definitions .....	72
Table 4-12 Current Phy-Layer PM Information Field Definitions .....	74
Table 4-13 Current Channel-Layer PM Information Field Definitions .....	76
Table 4-1 CLI Command - Action List .....	80
Table A-1 Dynamix DC-48A/SA CID port pin assignment .....	219
Table A-2 RS-232 DB9 pin assignment (for PC to CID port connection) .....	219
Table A-3 Dynamix DC-48A/SA management port pin assignment .....	219
Table A-4 Uplink and downlink port (Xn) pin assignment .....	220
Table A-5 24 ports ADSL LINE Connector pin assignment .....	220
Table A-6 24 ports POTS splitter PHONE Connector pin assignment .....	221

---

## About This Manual

---

### Audience

This book is intended for anyone who installs, manages, and configures the Dynamix DC-48A/SA via CID/RS-232 or Telnet/Ethernet CLI command interface. The Dynamix DC-48A/SA is a standalone IP-based DSLAM which can concentrate and manage 48 or 24 ADSL ports, according to different model.

You must have a basic understanding of Dynamix DC-48A/SA ADSL2/2+ and Layer 2 concentrator related technologies, be knowledgeable about data communications, and familiar with VT-100 terminal emulation tools.

### Purpose

This book describes how to install, manage, and configure the Dynamix DC-48A/SA system via CLI command Line interface through CID/RS-232 interface or Telnet/Ethernet interface.

### Organization

This book provides task-based instructions for installing and using the CLI interface to configure and administrate the Dynamix DC-48A/SA System.

The manual is organized as follows:

Chapter	Title & Description
1	<b>Introduction</b> Provides an overview of Dynamix DC-48A/SA System, including features, fuctions, and applications of the Dynamix DC-48A/SA.
2	<b>Getting Started</b> Presents platform and system requirements as well as procedures and instructions for installing the Dynamix DC-48A/SA.
3	<b>EMS Configuration</b> Describes how to build up the EMS environment.
4	<b>Manage the Dynamix DC-48A/SA</b> Describes how to manage a specified Dynamix DC-48A/SA via EMS.
5	<b>System Administration with CLI</b> Provides all the instructions and procedures necessary for you to Administer your Dynamix DC-48A/SA with CLI interface.
6	<b>Frequently Used CLI Examples</b> help users to be familiar with frequently used CLI commands
Appendix A	Describes the pin assignment for Dynamix DC-48A/SA



## Document Conventions

Commands descriptions use these conventions:

[ ]	Elements in square brackets are optional
< >	Essential values
< x   y   z >	Alternative keywords are grouped in < > and separated by vertical bars
Others	
Note	Means reader take note. Notes contain helpful suggestions.

## What's the difference between ATM based DSLAM and IP based DSLAM?

Fig 0-1 & Fig 0-2 display the differences between traditional ATM-based DSLAM and Dynamix DC-48A/SA in PPPoE application sample.

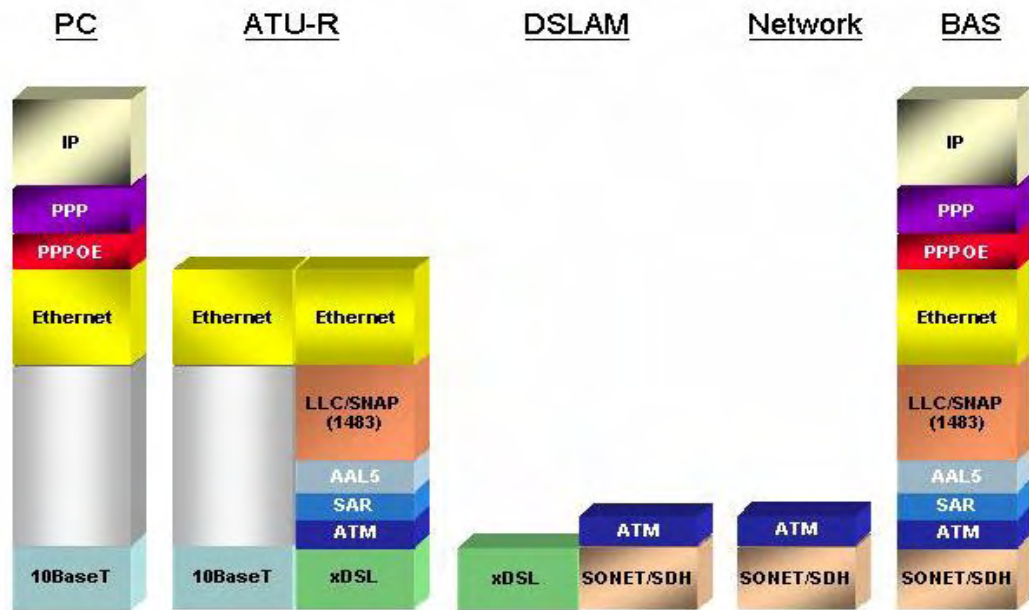


Figure 0-1 PPPoE application in Traditional ATM-based ADSL Network

As Fig 0-1 displays, in traditional ATM-based ADSL network, the user application information is encapsulated by ADSL CPE into ATM cells in pre-defined VC(Virtual Channel, PVC), and then upstream the ATM cells to DSLAM via ADSL link. (In this example, the user information (PPPoE encapsulated) is encapsulated by ATU-R using RFC-1483 Bridge-mode encapsulation format.)

All the ATM cells belong to the specified VC is concentrated by the DSLAM, and switched in the ATM network clouds, to the defined destination (ISPs or Offices), at there the ATM cells and PPPoE frames is resolved by the Broadband Access Server, and the user application information is serviced.

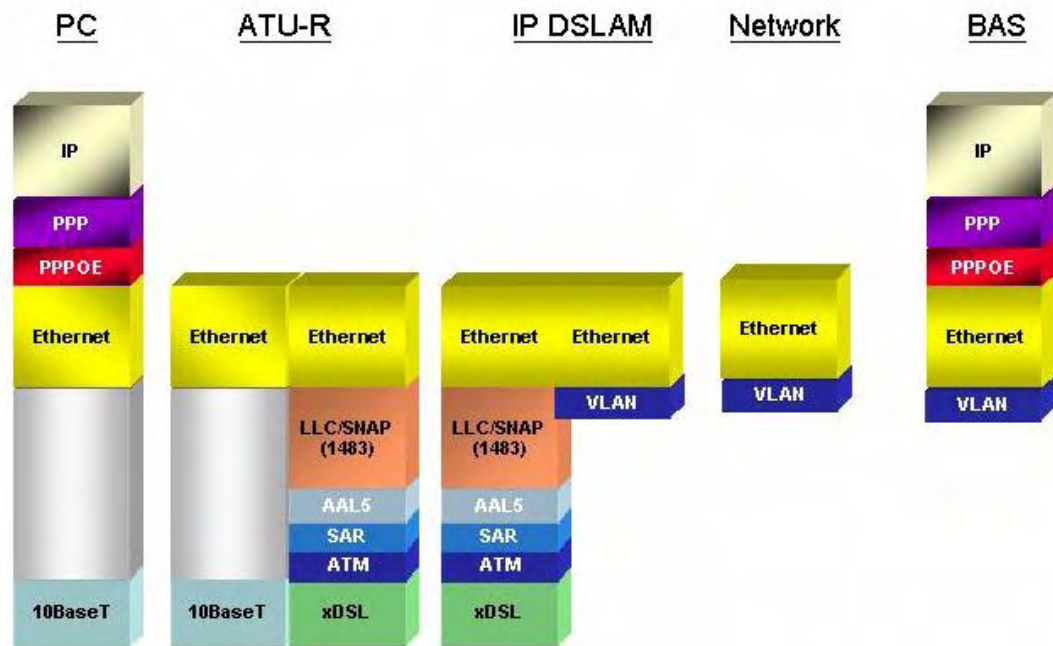


Figure 0-2 PPPoE application in Dynamix DC-48A/SA with Ethernet-All-The-Way Network

In addition to traditional ATM-based ADSL network. As Fig 0-2 displays, the user application information is still encapsulated by ADSL CPE into ATM cells in pre-defined VC (Virtual Channel, PVC), and then upstream the ATM cells to DSLAM via ADSL link.

In the Dynamix DC-48A/SA, all the ATM cells belong to the specified VC are decapsulated back to the original PPPoE encapsulated Ethernet packet (if VLAN-mode of the specified ADSL port is disabled), or mapped to the pre-defined Ethernet-VLAN packets (if VLAN-mode of the specified ADSL port is enabled). Dynamix DC-48A/SA concentrates all Ethernet-with/without VLAN-tag packets from 48/24 ports' ADSL and uplinks to ISP's Ethernet-All-The-Way network. The PPPoE frames will be resolved at Broadband Access Server (BAS), and the user application information was serviced.

The Dynamix DC-48A/SA supports ADSL CPE Bridge-mode. For future FW upgrade, the Dynamix DC-48A/SA can act as BRAS to process user application information directly.

Dynamix DC-48A/SA provides Ethernet-with/without VLAN tag to ATM-PVC mapping feature for the ISP to isolate user's data with security and to provide lots of service enhancement capabilities. Dynamix DC-48A/SA

supports 8 ATM PVC links for each ADSL/ADSL2/2+ CPE.

# 1

## Introduction

---

### 1.1 General

This chapter will help you understand the function and application of your Dynamix DC-48A/SA. It covers

- **Dynamix DC-48A/SA Overview**

This section describes the overview of your Dynamix DC-48A/SA. The Dynamix DC-48A/SA is cost effective solution for you to complete immediate implementation of multiple of services in private and public networks.

- **Dynamix DC-48A/SA Application**

Dynamix DC-48A/SA can be applied in MTU/MDU/MHU and Ethernet-all-the-way application.

- **Dynamix DC-48A/SA Features**

This section describes the features of Dynamix DC-48A/SA and its specification.

## 1.2 Dynamix DC-48A/SA Overview

Using the latest xDSL technology, **Dynamix DC-48A/SA** offers Internet service providers a very cost-effective solution for immediate implementation of multiple services in private and public networks. Currently, according to different port density, there are 2 models available: 48-port and 24-port. User can deploy different Dynamix DC-48A/SA to satisfy their application requirements.

Dynamix DC-48A/SA it acts as a standalone IP-based DSLAM, which can concentrate and manage up to 48/24 ADSL/ADSL2/2+ lines. User can use local RS-232 CID and/or remote TELNET/SNMP to manage the Dynamix DC-48A/SA directly.

Since the ATM backbone coverage is not so general in the real broadband network environment. Instead of traditional DSLAM system provides ATM uplink interface, the Dynamix DC-48A/SA concentrates 48/24 ports of the ATM over ADSL traffic which is encapsulated by ADSL CPEs, and maps each user's ata encapsulated in ATM-PVC to Ethernet-with/without VLAN-tag packet (depends on the VLAN was enabled or not for the specified ATM ports), and then uplink to Telco or ISP directly, User can enable VLAN-PVC mapping capability for each ADSL/ADSL2/2+ port independently. The Dynamix DC-48A/SA acts as bridge for the ADSL/ADSL2/2+ ports without enabling the VLAN-PVC mapping feature. Dynamix DC-48A/SA provides both Ethernet-VLAN and non-VLAN to ATM-PVC mapping feature and bridge mode for the ISP to isolate user's data with security and to provide lots of service enhancement capabilities. Dynamix DC-48A/SA supports 8 ATM PVC links for each ADSL/ADSL2/2+ CPE. Following figures are front view of 48-port and 24-port models.



Figure 1-1 Dynamix DC-48A/SA model front view



Figure 1-2 24-port model front view

As Fig 1-1 and 1-2 display, in the front view of Dynamix DC-48A/SA, there are several LEDs to indicate current system and link status and one replaceable uplink/downlink module with three Giga TX/LX Ethernet interfaces for uplink, downlink, and local management.

Through the uplink Ethernet, the Dynamix DC-48A/SA can be stacked and managed via SNMP as one entity.

As Fig 1-3 and 1-4 displays, in the rear-panel, there is one power adaptor, both -42V ~ -56V DC or 90V ~ 240V AC power module can be selected. For 48-port model, there are two sets of DSL & POTS 50-pin Centronic connectors. Each set provides 24-port with built-in POTS-splitter ADSL/ADSL2/2+ module, totally 48 ADSL/ADSL2/2+ CPE users supported in one Dynamix DC-48A/SA.

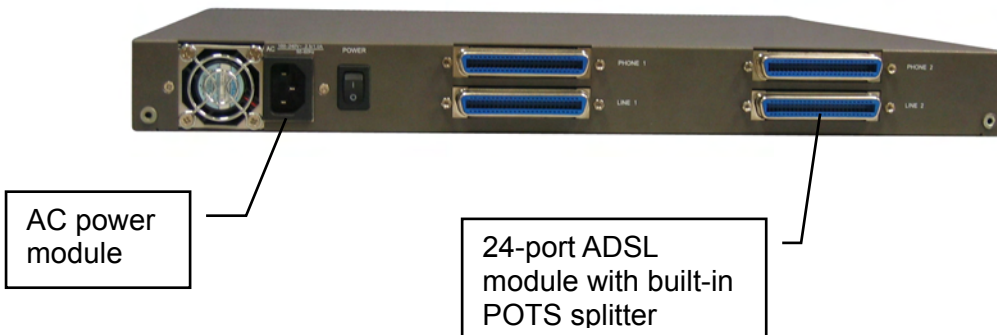


Figure 1-3 48-port model rear View

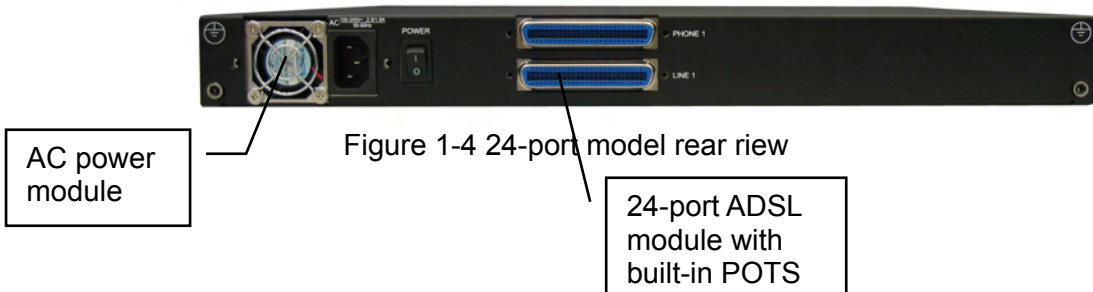


Figure 1-4 24-port model rear view

Fig 1-5 displays the LED identification of Dynamix DC-48A/SA, and Table-1 describes its color definition and status description.



Figure 1-5 Dynamix DC-48A/SA LED Identification

Table 1-1 Dynamix DC-48A/SA LED Description

<LED ID>	Color	Description
POWER	Green	Lit when power on.
MAINT	Yellow	Lit when maintenance commands were issued.
ALARM	Red	Lit when MJ/MN events happen.
MASTER	Green	Lit when system was acted as management master for stacking application (future feature).
100/Act	Green/ Blinking	Blink when information is transmitted through 100Mbps MGNT Ethernet interface.
1000/ACT	Green/ Blinking	Blink when information is transmitted through 1000 Mbps uplink Ethernet interface.
GIGA	Green/ Blinking	Blink when information is transmitted through 1000FX uplink Ethernet interface.
ACT	Green/ Blinking	Giga uplink is activated.
ADSL1 – ADSL48	Green/ Orange/ No Light Red	Lit Solid Green when ADSL link is in active state; when the specified ADSL link is in connection training state; LED off when ADSL link is not in service Lit Red when loss of signal occurs.

**Note:** Do not power off your Dynamix DC-48A/SA when LEDs “MAINT”, “ALARM” and “FAULT” are blinking simultaneously.


The replaceable 10/100/1000BaseT or FX uplink/subtend module design provides the flexibility of the network implementation. Up to 8 IP DSLAMs can be cascaded and managed as one unit

LAN Side (Uplink or Extension Side)	
	1*1000BaseT-MGNT + 2*1000BaseT
	1*1000BaseT-MGNT+1*1000BaseT+ 1*1000Fx(SX/LX)



### 1.3 Dynamix DC-48A/SA Application

As the following figure shown, Dynamix DC-48A/SA is equipped with 48 or 24 ADSL/ADSL2/2+ ports with built-in POTS splitters so that it provides broadband data service over existing copper wires without affecting the conventional voice service. Dynamix DC-48A/SA, therefore, is a perfect solution for both central office co-location and MTU/MHU markets.

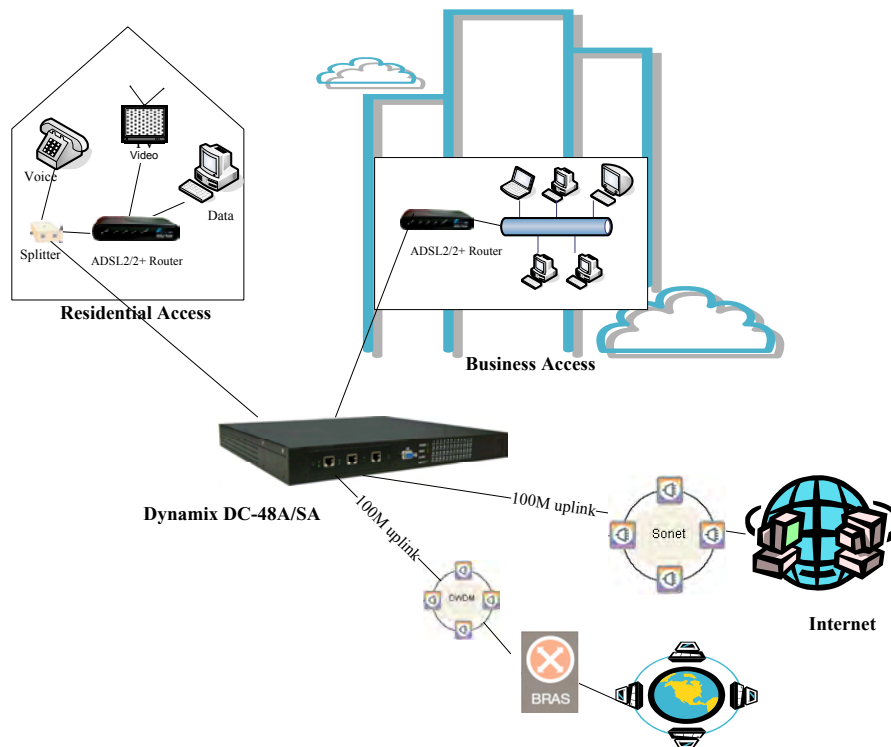

## **1.4 Dynamix DC-48A/SA Features**

### **1.4.1 Cost Saving Solution for SMB**

48/24 ports ADSL/ADSL2/ADSL2+ Subscriber Interface

100/1000BaseT or Fx Uplink/Subtend Interface (module selectable)

Build in POTS Splitter

Subtending capability allows up to 8 units to be cascaded and managed as one unit

### **1.4.2 Excellent Management with Security**

Microsoft NT/SNMP-based GUI EMS

Local RS-232 CLI, and Ethernet SNMP/TELNET management

Remote in-band SNMP/TELNET management

3-level user privilege for system management

SNMP v1, v2c, v3

Firmware upload/download via FTP or TFTP

### **1.4.3 Advanced Function for Broadband Service Offering**

IGMP snooping

Support up to 8 VCs, 128 MAC address per xDSL ports

Support up to 64\*128 MAC address & 2K Multicast MAC address per Dynamix DC-48A/SA system

Support 512 VLAN(any value in 4096)

Support Static VLAN and Port-based VLAN

Configurable packet size (64 to 1536)

Security : VLAN filtering, MAC Filtering, IP Filtering, Access Control List by MAC and IP address

Spanning Tree (802.1d) compliant




Traffic prioritization (802.1p)


Rate limiting by MAC and IP address

uplink Aggregation (802.3ad)

Future(SW upgrade) BRAS support 802.1x, DHCP Server & Relay, PPPoE, MPLS, VLAN-based VPN, L3 router feature, L2TP

### 1.5 Dynamix DC-48A/SA Specifications

<p><b>System Architecture</b></p> <ul style="list-style-type: none"> <li>▶ 48/24 ports ADSL/ADSL2/ADS2+/SHDSL subscriber interface with built-in POTS Splitter</li> <li>▶ One 1000BaseT MGNT+ Two 1000BaseT or one Giga LX Uplink/Subtend Interface (module selectable)</li> <li>▶ Subtending capability allows up to 8 units to be cascaded and managed as one unit</li> <li>▶ Telco-50 pin Centronic connector for ADSL+POTS IN and POTS OUT</li> </ul>	<p><b>ADSL/ADSL2/ADSL2+ Interface</b></p> <ul style="list-style-type: none"> <li>▶ Downstream DMT data rate from 32 kb/s up to 25 Mb/s; Upstream DMT data rate from 32 kb/s to 1 Mb/s</li> <li>▶ Comply with ITU G.992.1 (G.DMT),; G.DMT.bis; ITU G.992.2 (G.Lite); ANSI T1.413 issue 2; ITU G.994.1 (G.handshake) for ADSL, G.992.3 for ADSL2, and G.992.5 for ADSL2+</li> <li>▶ Extended power management capabilities to optimize power consumption for each application</li> <li>▶ Maximum reach exceeding 20Kft(6.1Km)</li> </ul>
<p><b>Protocol Handling Capability</b></p> <ul style="list-style-type: none"> <li>▶ 8 VCs per xDSL ports</li> <li>▶ 128 MAC address per xDSL ports</li> <li>▶ 64*128 MAC address</li> <li>▶ 2K Multicast MAC address</li> <li>▶ 512 VLAN(any value in 4096) support</li> <li>▶ Configurable packet size (64 to 1542)</li> </ul>	<p><b>Management</b></p> <ul style="list-style-type: none"> <li>▶ Microsoft NT/SNMP-based GUI EMS</li> <li>▶ Local RS-232 CLI, and Ethernet SNMP/TELNET management</li> <li>▶ Remote in-band SNMP/TELNET management</li> <li>▶ Firmware upload/download via FTP or TFTP</li> <li>▶ SNMP v1, v2c, v3</li> </ul>
<p><b>LAN Side (Uplink or Extension Side)</b></p>	
	<p>1* 1000BaseT-MGNT + 2*1000BaseT</p>
	<p>1*1000BaseT-MGNT+1*1000BaseT+ 1*1000Fx(SX/LX/LH/ZX)</p>
	<p>1*10/100BaseT-MGNT+2*100FX(SM/MM)</p>

	<p>1* 10/100BaseT-MGNT + 2*10/100BaseT-UPLINK</p>
<p style="text-align: center;"><b>ATM MIBs</b></p> <ul style="list-style-type: none"> <li>▶ RFC 1514, 2515 DEFINITIONS OF MANAGED OBJECTS FOR ATM MANAGEMENT</li> </ul>	<p style="text-align: center;"><b>Private MIBs</b></p> <ul style="list-style-type: none"> <li>▶ ANY SPECIFIC PRIVATE TRAPS</li> </ul>
<p style="text-align: center;"><b>Physical condition</b></p> <ul style="list-style-type: none"> <li>▶ Dimension: 400mm(D)x440mm(W)x44mm(H)</li> <li>▶ Weight: 6.8kg</li> </ul>	<p style="text-align: center;"><b>Protocol</b></p> <ul style="list-style-type: none"> <li>▶ STP; IGMP snooping; GMRP; GVRP; LACP; LACP marker; SNMP/UDP/IP/MAC/Ethernet</li> </ul>
<p style="text-align: center;"><b>Power</b></p> <ul style="list-style-type: none"> <li>▶ AC Power: auto ranging 90~240 VAC, 50-60 Hz, IEC connector</li> <li>▶ DC Power: -42~-56 VDC</li> <li>▶ Power Consumption: 150 watts</li> </ul>	<p style="text-align: center;"><b>Operating Environment</b></p> <ul style="list-style-type: none"> <li>▶ Operating Temperature: 0°~50 °C, 32°~122 °F</li> <li>▶ Storage Temperature: -30c°~70 °C, -22°~158 °F</li> <li>▶ Humidity: 5% to 90% RH non-condensing</li> </ul>

# 2

## Getting Started

---

### 2.1 General

This chapter provides the installation instruction for the hardware installation and system configuration of your Dynamix DC-48A/SA so that you can start up quickly. It includes the following sections:

▶ **Unpacking your Dynamix DC-48A/SA**

This section describes how to unpacking your Dynamix DC-48A/SA, and part number explanation.

▶ **Hardware Installation**

This section describes the power connection, loop connection and CID connection.

▶ **Ways of management connection**

This section describes how to engage in management connection by CLI and Telnet.

## 2.2 Unpacking your Dynamix DC-48A/SA

This section describes how to unpack your Dynamix DC-48A/SA. For a box of Dynamix DC-48A/SA, there may contain the following materials:

1. Dynamix DC-48A/SA
2. Mounting bracket package
3. RJ-45 Ethernet cable
4. Power cord (AC power module only)
5. RS 232 cable to facilitate the connection between CID and PC
6. CD including user manual and Quick Start Guide
7. A copy of Quick Start Guide
8. Accessory package

- ▶ Any other accessories requested at time of ordering.

Check the contents of the package and inspect the unit for any signs of damage. Report any defect to vendor's customer service representative. Retain all packing materials for future shipment.

## 2.3 Hardware Installation

The Dynamix DC-48A/SA can be installed in a standard 19-inch rack, by using the mounting brackets provided.

Mount the shelf on the rack using the large screws provided.

Follows the following procedures to connect and wire the system.

### 2.3.1 Safety Instruction

The following is the safety instructions for Dynamix DC-48A/SA before installation:

1. Read and follows all warning notices and instructions of this user manual.
2. The maximum recommended operating temperature for the Dynamix DC-48A/SA is 50°C. Care must be taken to allow sufficient air circulation or space between units when the Dynamix DC-48A/SA is installed inside a closed rack assembly and racks should safely support the combined weight of all Dynamix DC-48A/SA.
3. The connections and equipment that supply power to the Dynamix DC-48A/SA should be capable of operating safely with the maximum power requirements of the Dynamix DC-48A/SA. In the event of a power overload, the supply circuits and supply wiring should not become hazardous.
4. The AC adapter must plug in to the right supply voltage. Make sure that the supplied AC voltage is correct and stable. If the input AC voltage is over 10% lower than the standard may cause the Dynamix DC-48A/SA to malfunction.
5. Do not allow anything to rest on the power cord of the AC adapter, and do not locate the product where anyone can walk on the power cord.
6. Generally, when installed after the final configuration, the product must comply with the applicable safety standards and regulatory requirements of the country in which it is installed. If necessary, consult for technical support.

7. A rare condition can create a voltage potential between the earth grounds of two or more buildings. If products installed in separate building are interconnected, the voltage potential can cause a hazardous condition. Consult a qualified electrical consultant to determine whether or not this phenomenon exists and, if necessary, implement corrective action before interconnecting the products. If the equipment is to be used with telecommunications circuit, take the following precautions:

Never install telephone wiring during a lightning storm.

Never install telephone jacks in wet location unless the jack is specially designed for wet location.

Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.

Use caution when installing or modifying telephone lines (other than a cordless telephone) during an electrical storm. There is a remote risk of electric shock from lightning.

Do not use a telephone or other equipment connected to telephone lines to report a gas leak in the vicinity of the leak.

### 2.3.2 Dynamix DC-48A/SA Rear Panel Connection

The following figure shows the rear panel connection of Dynamix DC-48A/SA:

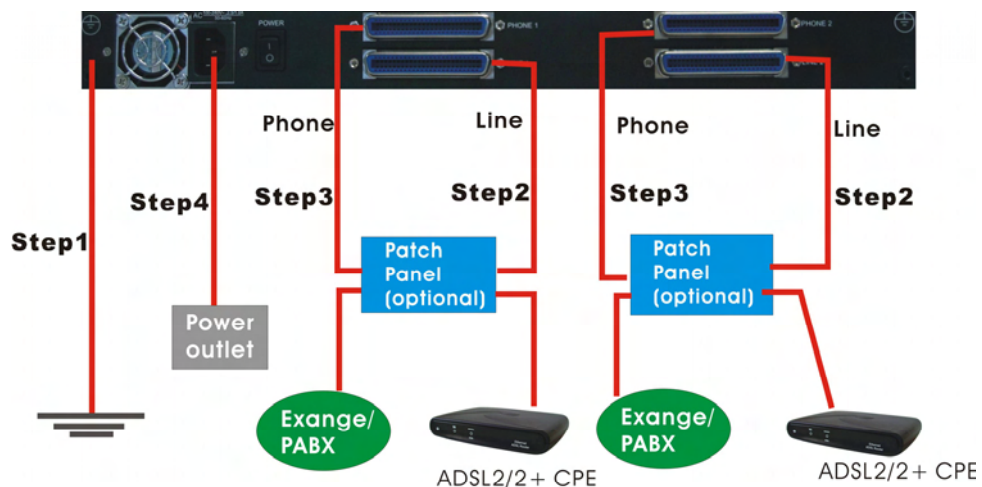


Figure 2-1 Dynamix DC-48A/SA Rear Panel Connection



**Step 1:** Ground the Dynamix DC-48A/SA by connecting a grounded wire (option).

**Step 2:** Connect the ADSL line connector, a 50-pin centronic connector, of Dynamix DC-48A/SA to CPE by using telco cable. Each line connector supports 24 ports of ADSL/ADSL2/2+ for Data path from MDF(Main Distribution Frame).

**Step 3:** Connect the phone connector, a 50-pin centronic connector, of Dynamix DC-48A/SA to Exchange/PBX by using telco cable. phone connector is an optional module supporting Voice path to Exchange/PBX; it must be along with Line Connector.

**Step 4:** Connect the power adapter and plug it into an outlet.

### 2.3.3 Dynamix DC-48A/SA Front Panel Connection

Connect the uplink port of Dynamix DC-48A/SA to internet or downlink to the other Dynamix DC-48A/SA for stacking by using the RJ-45 cable. Furthermore, connect the CID port to the management station's CID port by using the RS-232 cable or connect the MGT port to the management station's Ethernet port by using RJ-45 in order to administer your Dynamix DC-48A/SA through CLI or GUI EMS.

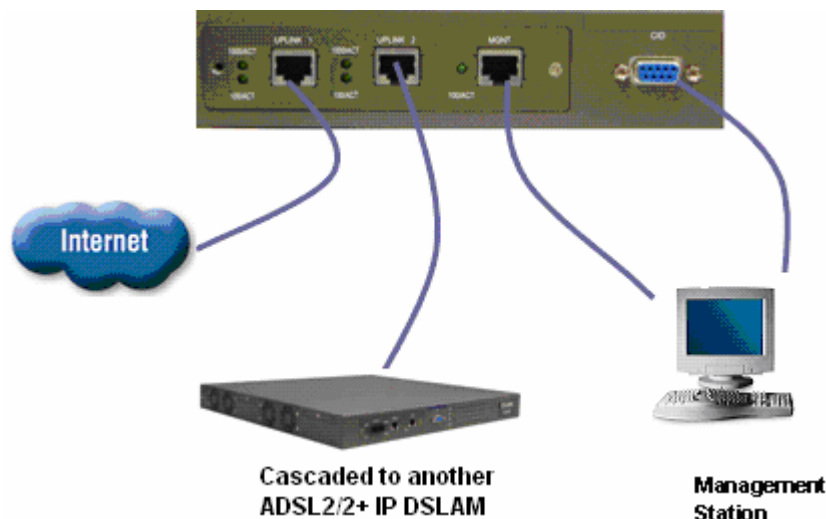


Figure 2-2 Dynamix DC-48A/SA Front Panel Connections

**Note:** Please refer to Appendix A: pin assignment of telco cable, RJ-45 and RS-232 cable for those connectors' pin assignment.

## 2.4 Ways of Management Connection


This section will tell you how to connect and manage your Dynamix DC-48A/SA through CLI and EMS.

### 2.4.1 EMS(Element Management System)

The **E**lement **M**anagement **S**ystem (EMS) is more user- friendly than CLI for your configuring Dynamix DC-48A/SA. The HTML files embedded in Dynamix DC-48A/SA are dynamically linked to the system's functional command sets. You can access a specified Dynamix DC-48A/SA through EMS.

Perform initial configuration procedures as follows:

1. Click the EMS icon on the screen of autorun to install EMS into your PC.
2. Before you start to connect to EMS, it is necessary that your PC's IP and Dynamix DC-48A/SA's IP are in the same group. **Note:** Dynamix DC-48A/SA's default MGNT IP is 192.168.100.111
3. Create management IPs into the Dynamix DC-48A/SA so that the authorized IP agent can manage Dynamix DC-48A/SA through EMS. Connect to Dynamix DC-48A/SA with RS-232 or Ethernet cable, and then write the IPs into Dynamix DC-48A/SA by telnet or CLI. Input the following commands sequentially:
  - a. create snmp comm community public
  - b. create snmp host IP 192.168.100. xxx community public, where 192.168.100.xxx is the IP of your PC.
  - c. create snmp traphost ip 192.168.100.xxx community public version v1, where 192.168.100.xxx is the IP of your PC.

**Note:** if to use CLI, bits per second, data bits, parity, and flow control should be set as 9600, 8, none and 1 respectively.
4. Launch the EMS and then log in with the "**Admin**" for both user name and password. Click on  to enter the EMS system. Log in as usual. (User account: **Admin**; Password: **Admin**)

## 2.4.2 Command Line Interface (CLI)

The Command Line Interface is the most primary character based configuration interface. Some of configurations not provided in Baliff can be configured through CLI. You can access CLI from the terminal emulation software.

The procedure of connecting to the CLI is as follows:

Start up the terminal emulation software on the management station.

If necessary, reconfigure the terminal-emulation software to match the switch console port settings.

Bits per second	9600
Data bits	8
Parity	None
Stop bits	1
Flow control	None

Enter **Admin** when prompted for a user name and password. The Dynamix DC-48A/SA prompt appears when you have logged in to the management interface successfully.

## 2.4.3 Telnet Client

Dynamix DC-48A/SA supports only one Telnet client that you can use to connect with. Telnet provides a simple terminal emulation that allows you to see and interact with the CLI of Dynamix DC-48A/SA. As with any remote connection, the network interface IP address for the Dynamix DC-48A/SA must be established.

# 3

## EMS Configuration

---

This Chapter describes how to install and set up the environment of EMS. Once you finish it, a specified Dynamix DC-48A/SA can be managed remotely. Next chapter will introduce how to manage the Dynamix DC-48A/SA through EMS.

### 3.1 EMS Functions

EMS is divided into the task-oriented functional groups as follows, which are further described in subsequent sections.

**Session:** Allow you to start and to terminate a session as well as to shutdown the system.

Logout: Allow you to terminate current session without shutting down the system.

Exit: Allow you to shut down the system.

**Tools:** Allow you to perform the following tools.

Environmental options: allow you to define SNMP, Desktop and Surveillance.

Territory Manager: Used to define the territory.

Agent Manager: Used to define agent IP addresses.

Telnet: allow you to login the CID screen of a specific agent IP address.

Ping: used to check whether a particular Dynamix DC-48A/SA is current connected to the agent or not.

User manager: Allow you to define a user profile, including login ID and security level.

**Windows:** allow users to manage daughter windows in the EMS.

Cascade: allow users to cadcade Windows.

Next Window: allow users to switch to next window.

Previous Window: allow users to switch to previous window.

Arrang Icons: those minimized icons will be located in the bottom of EMS.

**Help:** allow users to view the software version.

About: software version is displayed.

### 3.1.1 Installation

#### ▶ Hardware and Software Requirements

The following checklist provides the minimum hardware and software required to operate EMS.

Windows NT/2000/XP

Autorun CD


2GB Hard disk with a minimum of 650 MB of free space


An ethernet card.


Super VGA (800 x 600 resolution) or higher with 256 colors


CD-ROM drive

## ► Installing EMS


1. Insert Autorun CD into CD –ROM Drive.
2. From the autorun screen, double click the EMS icon to start the installation process.
3. The welcome window of EMS Setup appears. Click on  to continue.

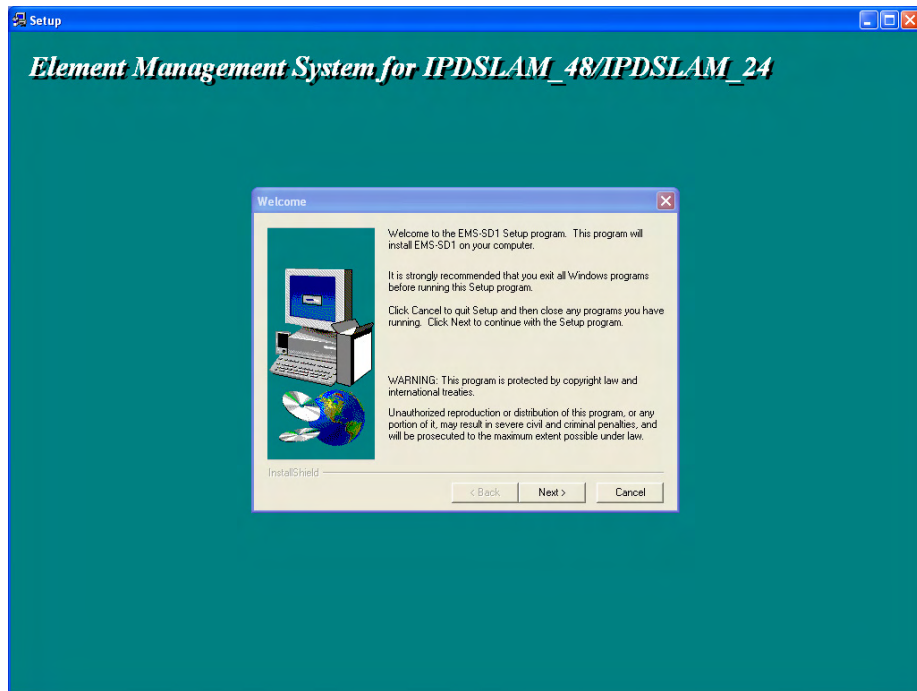


4. When the user information input window appears, enter your name and company name respectively, and then click on  to continue.

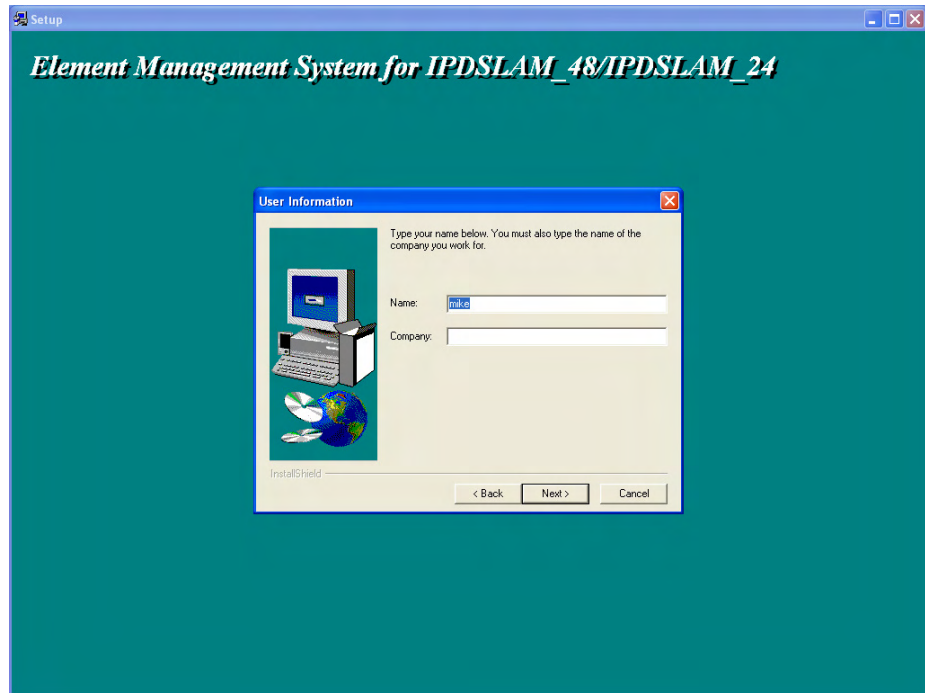



**Note:** please uninstall previous version of EMS if you want to install a new version.


5. When the Destination Location window appears, click the Browse button to change the installation destination directory or simply use the default setting "C:\Program Files\EMS\EMS-SD1". Then, click on  to continue,



6. When the Select Program Folder window appears, you may either choose the default program folder, “EMS\EMS-SD1”, or enter the name you prefer. Then, click on  to continue,

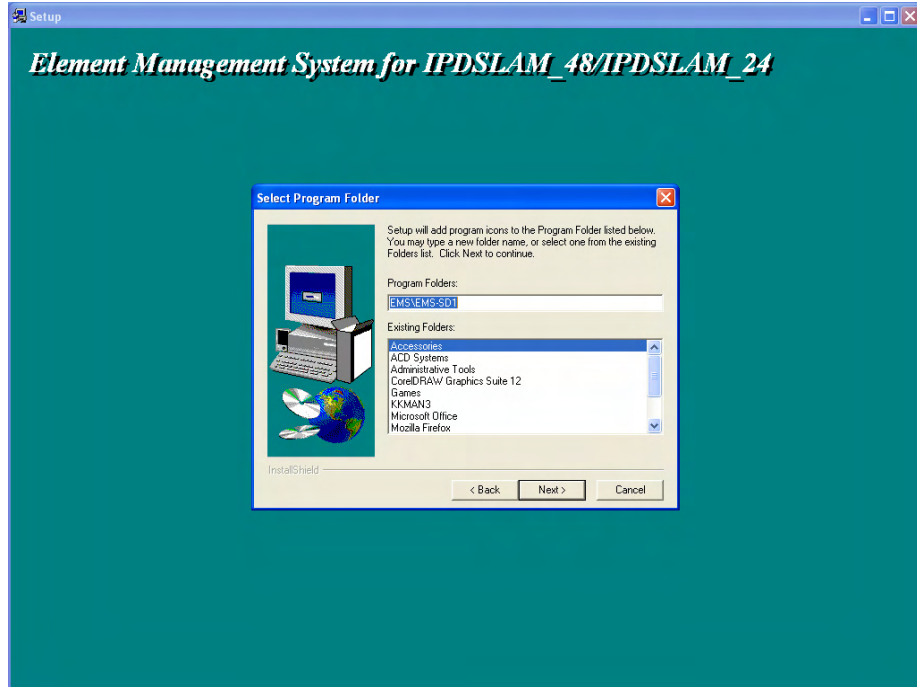


7. When the Start Copying Files window appears, you can confirm your current settings, if you are satisfied with the settings, click on  to start copying files.

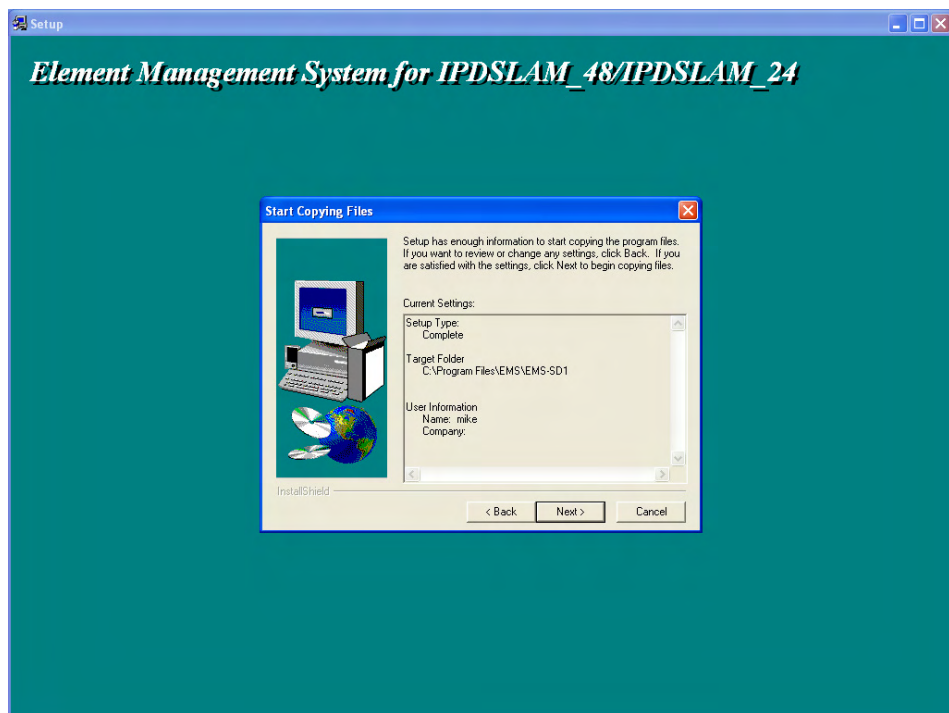





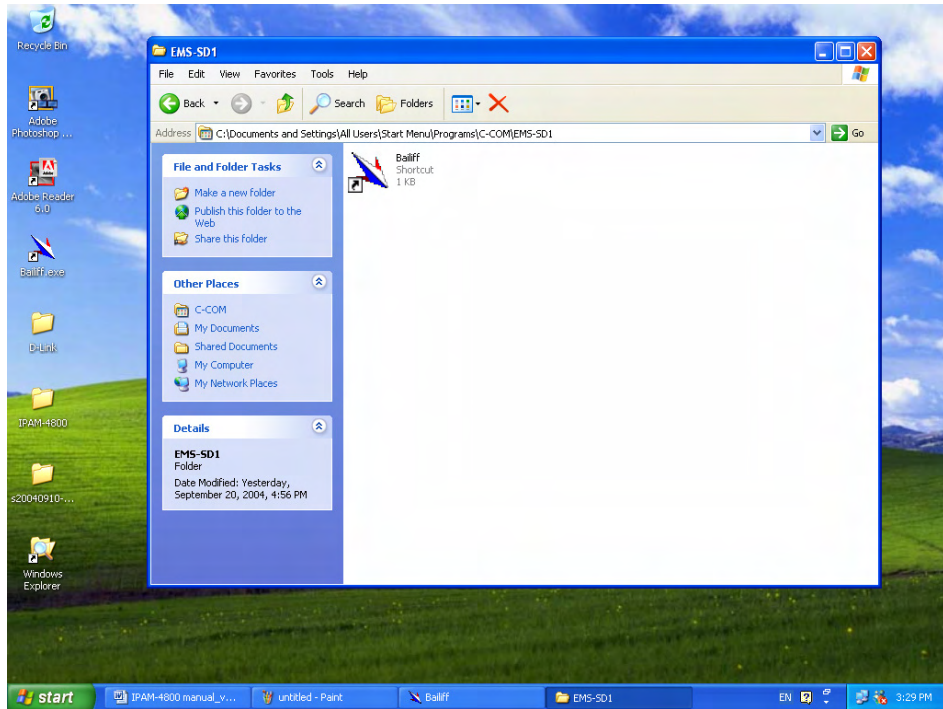
- When Setup Process Status window appears, the installation process is now in progress. This window displays a bar indicating the percentage of completion for the current installation. In addition, the names of the files being installed appear above the bar until the installation is complete.

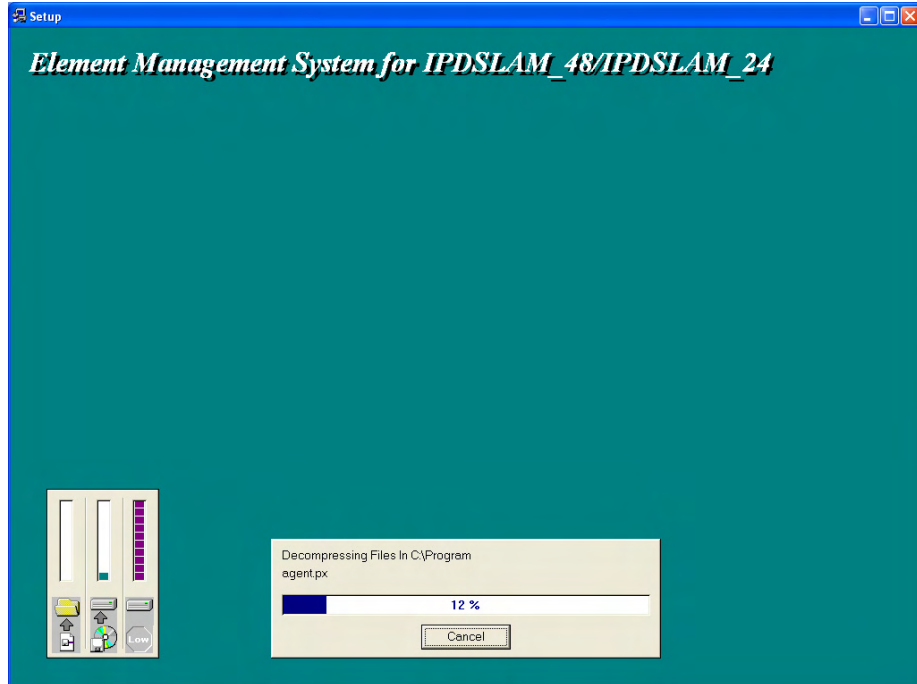

- At the end of the installation process, the following "FINISH" window presents. Simply click on  to complete setup. Now the installation of EMS software is completed.

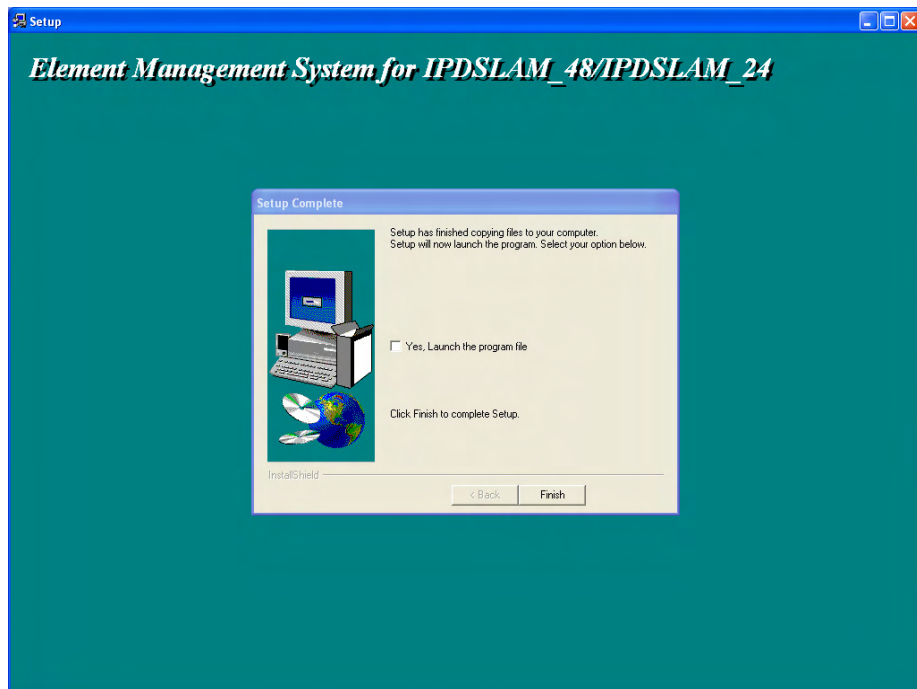


10. After finishing the installation process, a shortcut of EMS is displayed on the desktop. Click on  to activate EMS directly.




### 3.1.2 Un-installation of EMS


1. Double click the Add/Remove Programs icon in **Control Panel** to run the un-installation procedure.

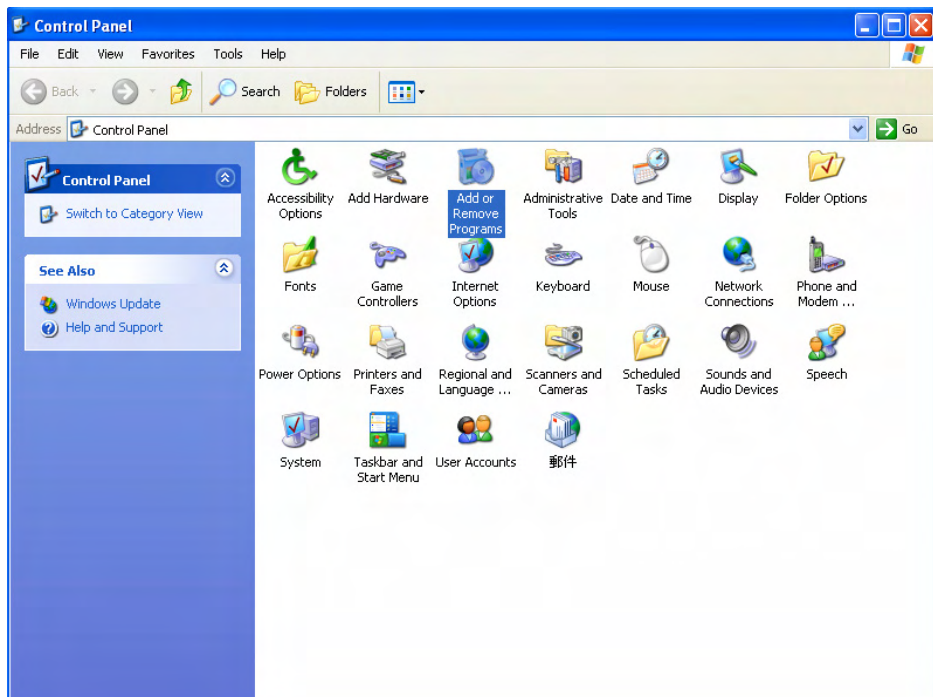


- In Add/Remove Programs Properties dialogue box, selecting the “EMS-SD1” folder and then click on  to remove EMS.

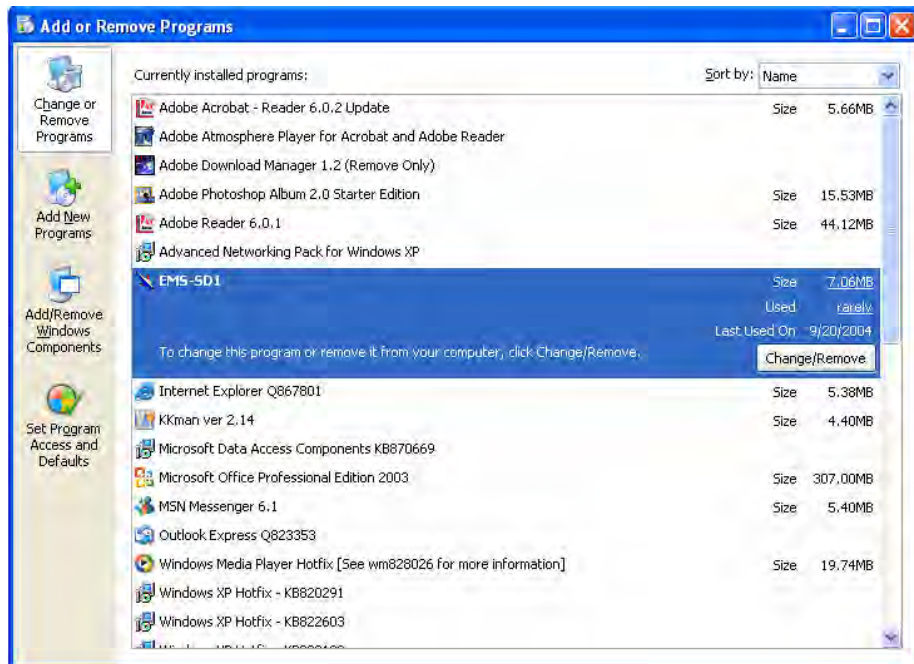

- After your clicking on , the following dialogue box then prompts to you for confirmation. Click on  to continue the removal process.

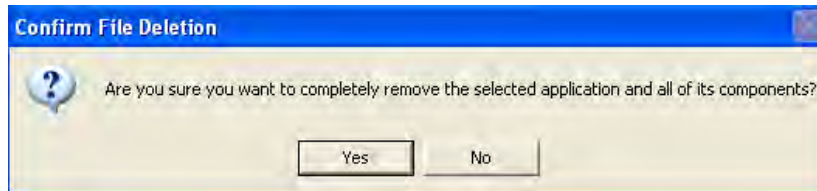


- The following window, “un-installation completion status” appears. Click  to complete the removal process when  become enable, indicating that the process is completed.

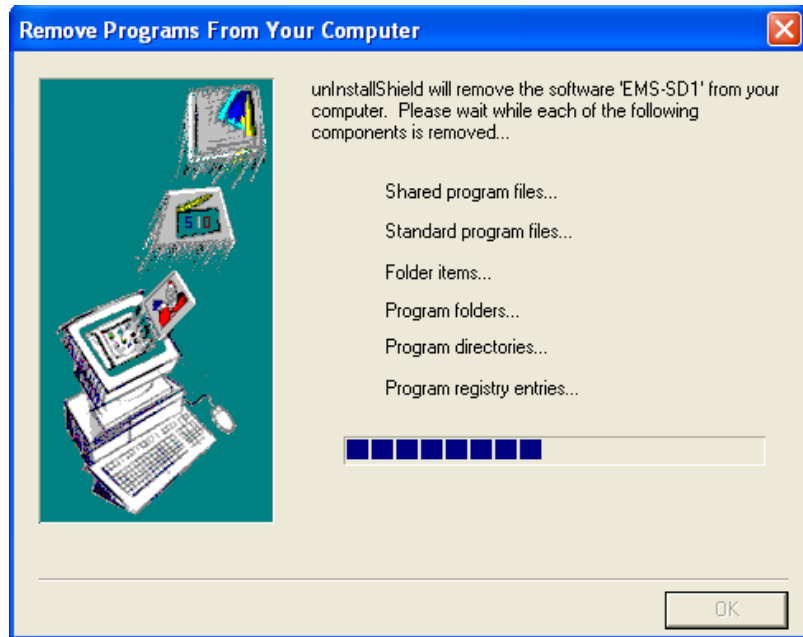

### 3.1.3 Starting the System


Users can activate the EMS either from Promgrame manger or clicking the shortcut icon on the desktop. From Program Manager, choose the “EMS” program group in the Program Manager window. Then, choose the “EMS-SD1” program item to launch the program.


**Note:** before starting EMS, the SNMP comm command should be configured as “rw” via CLI so that read-write permissions are given to managers. For detailed instruction, refer to page 172.

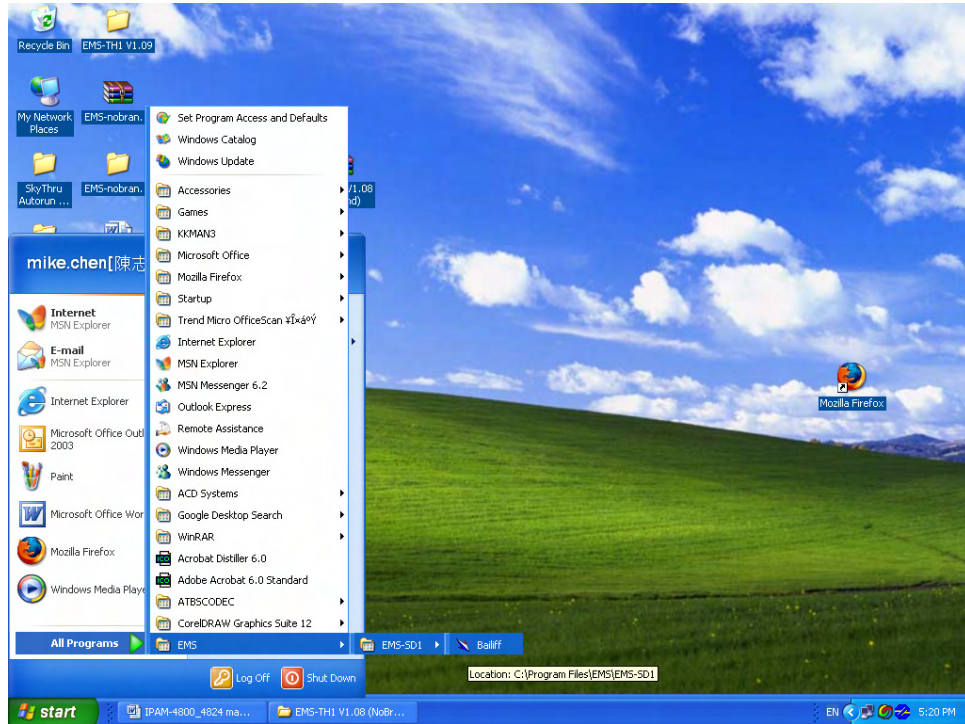

### 3.1.4 Logging into the System


1. Once the system is started, the **Login window** then prompts as follows.

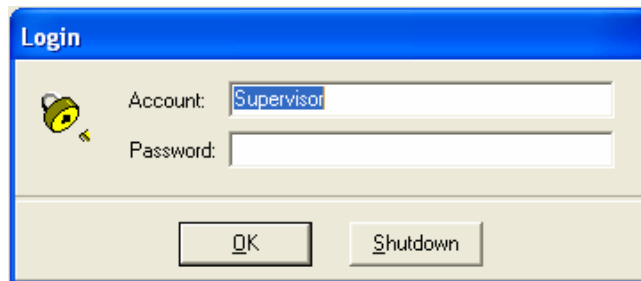

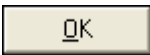2. Simply enter your user account ID and password respectively, and then click on  to login.


Default Account	Supervisor
Default Password	(blank)

**Note:** For the security concern, it is very important for you to change your password afterwards.

To terminate the login, simply click on .

3. After launching EMS and logging in with a valid username and password, the main window, EMS then prompts as shown in the

following figure.

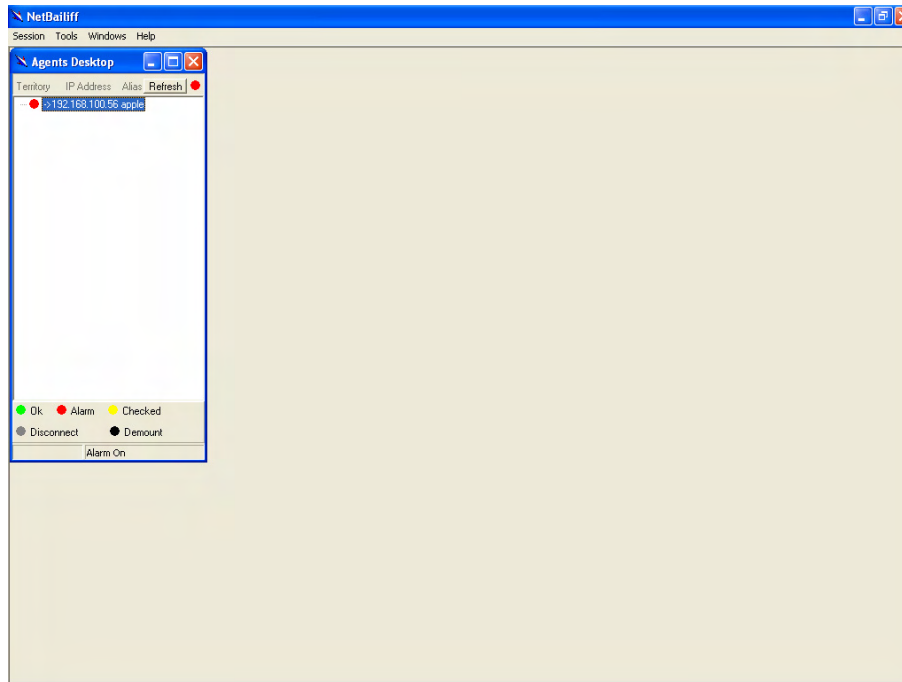

### 3.1.5 Terminating the System

To terminate the system at any time, simply choose the **Exit** command from Session Menu. The system then terminates.

### 3.1.6 Logging out the Current Session

To terminate the current session, choose **Logout** command from Session Menu. The user account, then, is logged out and Login window prompts for a new login. Normally, this is used when a user wants to re-login in order to gain a higher level of authority for certain operations.


## 3.2 Windows Arrangement

Users may open many daughter windows in the EMS. To benefit user's viewing every Window, Commands of the Windows manu is designed to arrange daughter windows. Those commands will be introduced seperately.



### 3.2.1 Cascade

Choose **Cascade** from Windows menu in the EMS manu bar. The cascade command can cascade those opened windows as follows. User can select a window to perform operations or view status simply by clicking on a specified window.

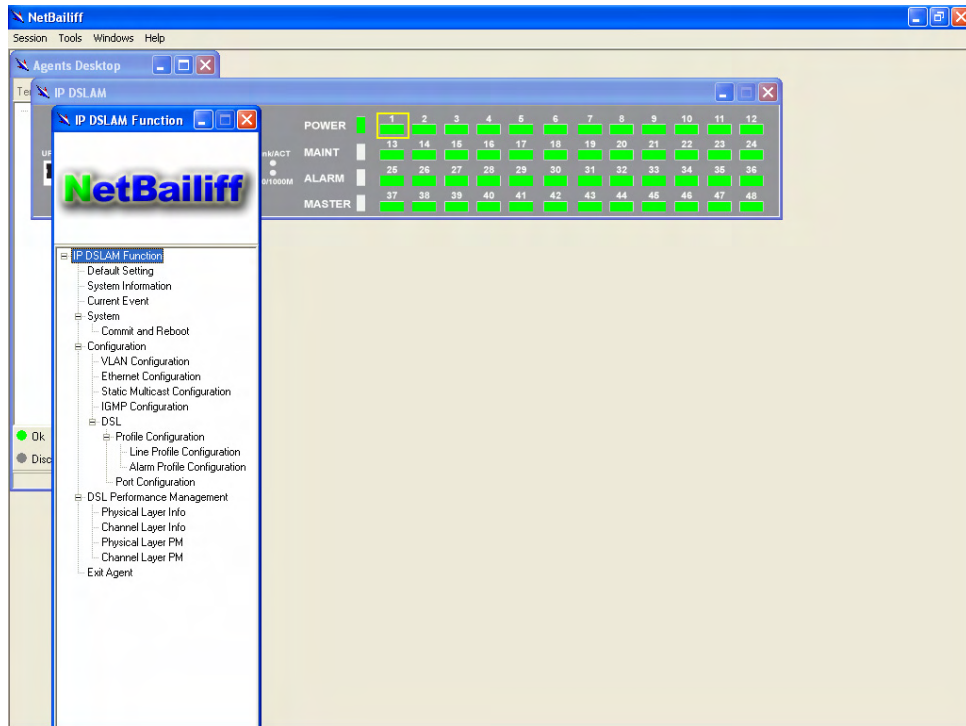

### 3.2.2 Next Window

Next Window helps user to view next window so that it will bring the window in the second layer to front.


### 3.2.3 Previous Window

Previous Window command can help user to bring the previous window to front.


### 3.2.4 Arrange Icons

By selecting Arrange Icons of Windows Menu in the menu bar, it will locate

those minimized daughter windows in the bottom left of EMS window as the following figure shown. User can select a required icon to perform EMS management.

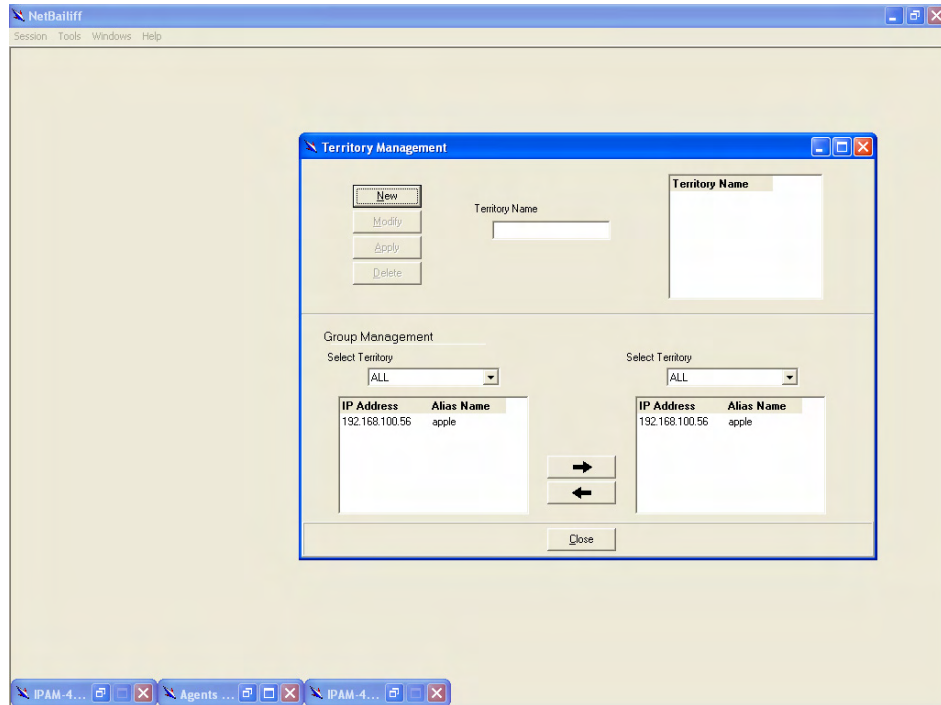

### 3.3 Help

To view the version of NatBailiff, choose **About** command via Help menu, as shown in the following figure. Click on  to exit the window.





## 3.4 Tools Menu Introduction




This chapter describes how to use tools in the EMS, including Environmental options, Territory manager, Agent manager, user manager and Telnet, which are detailed in the following sections.


### 3.4.1 Environmental Options

Choose **Environmental Options** from **Tools Menu**, this Environment daughter window then appears. By this function, user can config SNMP, Desktop and Surveillance respectively.

#### ► SNMP Configuration

The SNMP Time-out Period and Retransmission times can be configured as shown in the following steps:

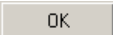
1. Click on the TabControl (SNMP/Desktop/Surveillance) of SNMP that will bring SNMP dialogue box to front.
2. Click on  or  to change the Time-out Period seconds and Retransmission times.
3. Click on  to submit your changes.

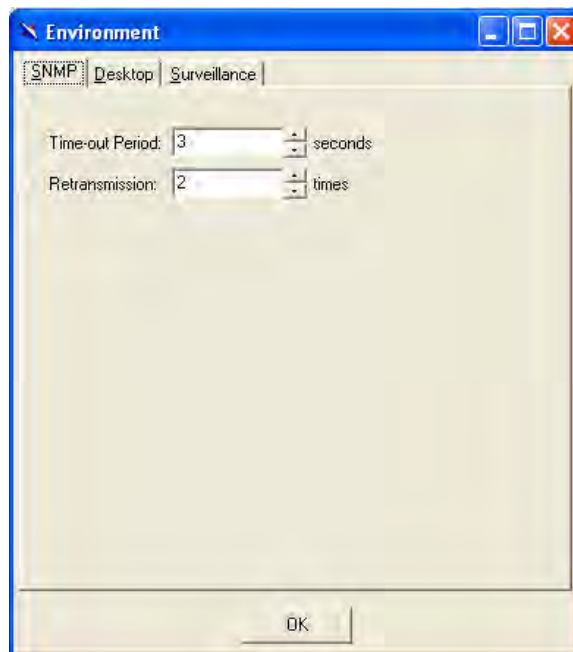


► Desktop configuration

The desktop is user for setting the map of a required territory.

1. Click on the tab of Desktop that will bring Desktop dialogue box to front, as shown in the following figure.

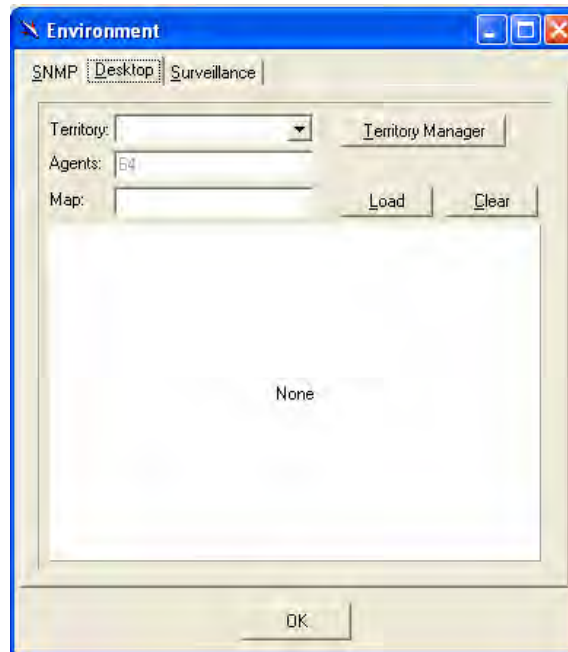


2. Click on **Territory Manager** to quick start territory manager in which users can define a dersired territory. Please refer to page 37 for more details.
3. Click on **Load** to load the map of a territory or click on **Clear** to clear a loaded map. Note: the format of map is limited to \*.bmp, \*.emf and \*.wmf.

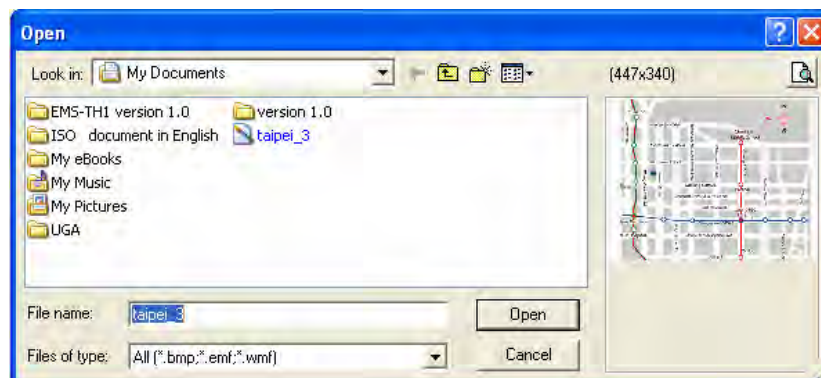




4. Click on **OK** to submit your setting, and then the map will apply to the Mounted Agent.

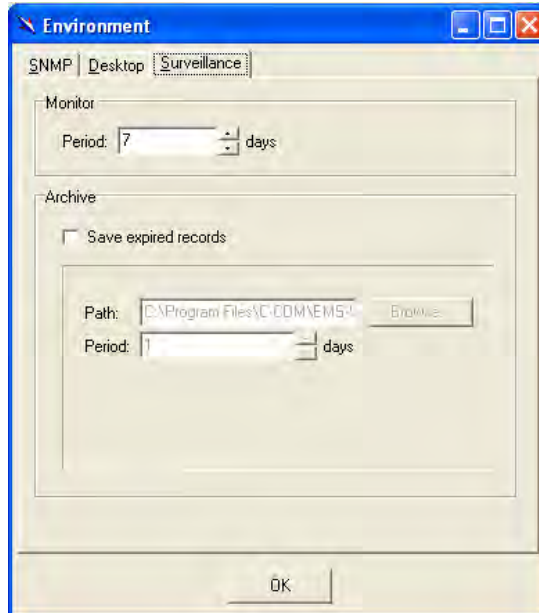



► **Surveillance configuration**

1. Click on the tab of Surveillance that will bring the Surveillance dialogue box to front, as shown in the following figure.

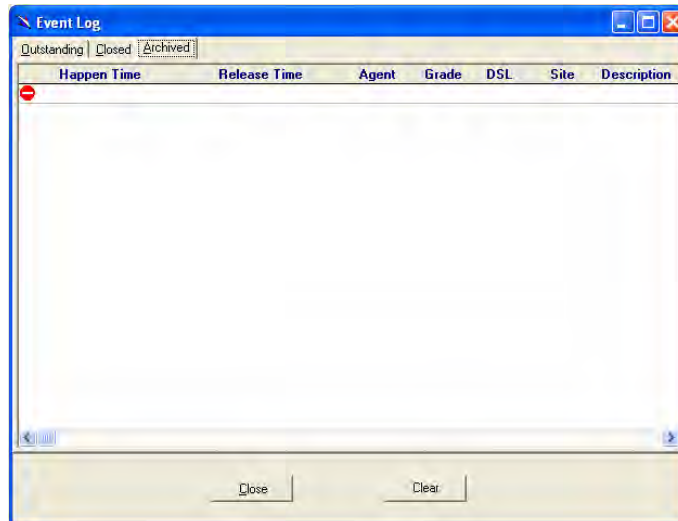

2. Click on  or  to change the monitoring period.
3. Select the checkbox of **Save expired records** to save surveillance archive, which can be browsed by clicking on the tab of **Archived** in the Event Log window as shown in the following figure:

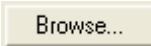

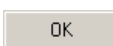
4. Clicking on  to choose the directory to record surveillance data and press  or  to define expired period.
5. Click on  to submit your settings.

### 3.4.2 Territory manager configuration


Territory manager help users to build up monitoring territories and agents could be categorized into different territories by users. That benefits users to monitor the status of PAMSPAN-2000 systems by territory. Territory manager can be activated either from menu bar or from environmental options.


#### ► Territory Manager window


Choose **Territory Manager** via Tools Menu, or Environmental option, and then the Territory Management window appears.

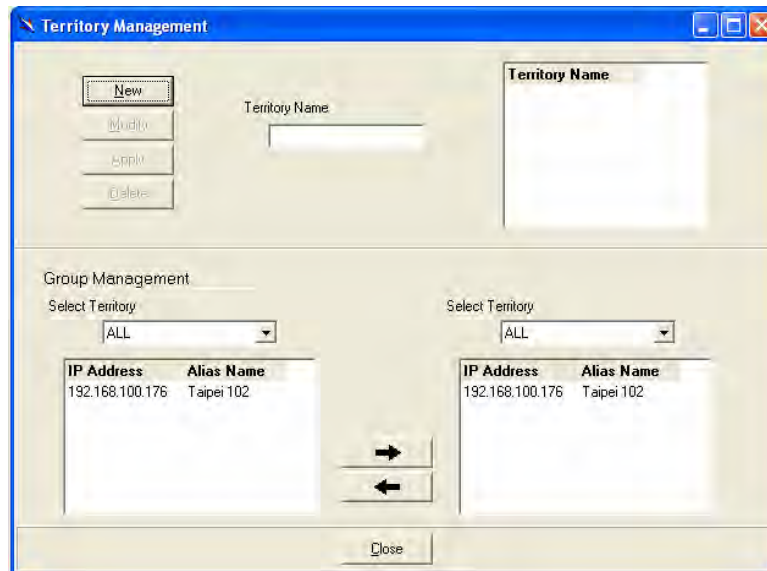


If to add a territory to the system,


Click on , the Territory Name fields then cleared to blank for entering the data.

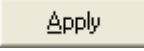
Enter Territory Name and  then become enable.

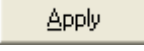Click on  to apply the territory to the system. After that, you can proceed to group management by Territory Management dialog box.

As the following figure shown, the agent, 192.168.100.176 is available in the territory named ALL on the left. Users can shift the monitoring territory from ALL to Taipei simply by selecting Taipei in the Drop-down list on the right.

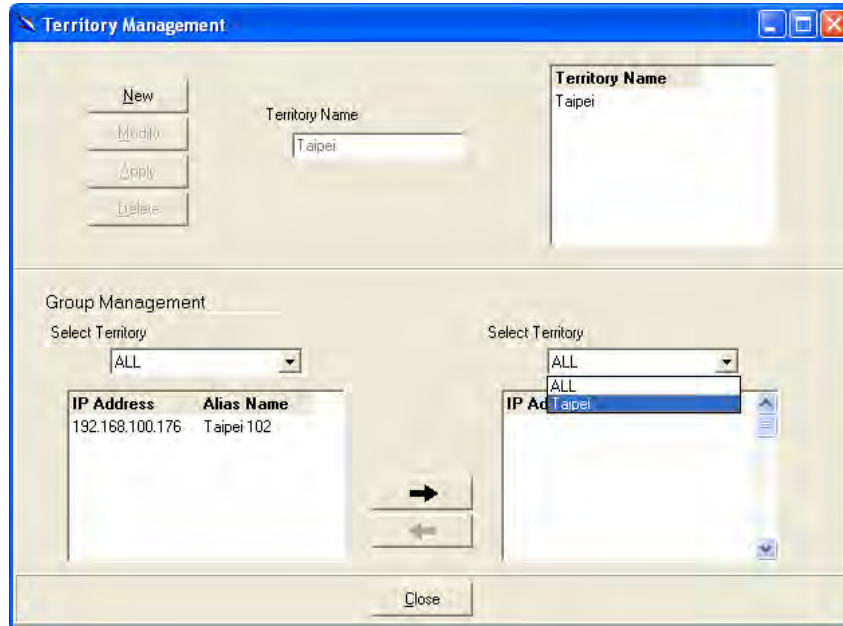

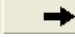
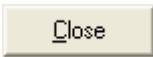
Choose the agent, 192.168.100.176 on the left and then click on . The agent IP will appear on the right and will be monitored under the territory, Taipei.

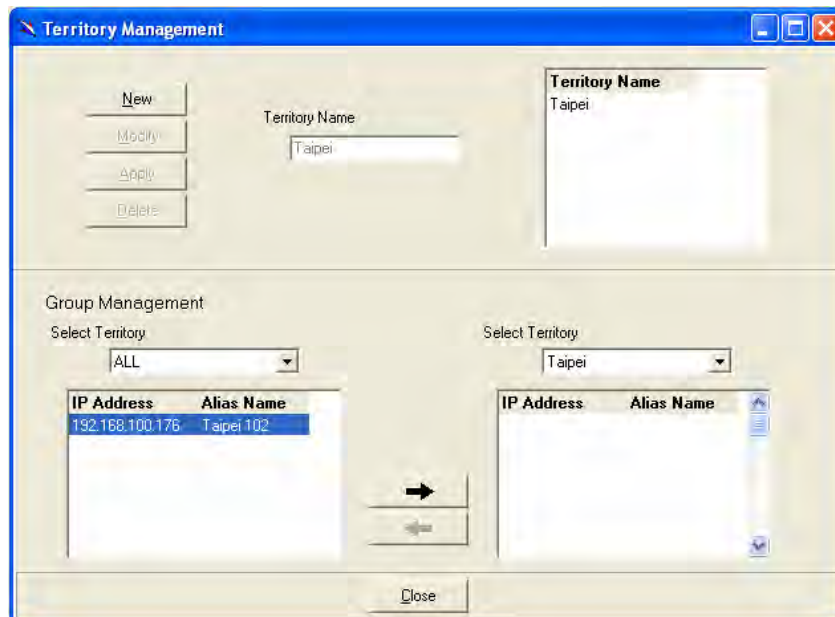

Correspondently, the Agent Desktop displays that Agent IP 192.168.100.176 has been monitored under the territory, Taipei.



If users want to move the agent IP from Taipei to other territory, select a desired agent IP and click on  to shift it to the left.


Click on  to exit the window or continue to perform other operations in the same window.

### 3.4.3 Agent Manager Configuration

All of the Dynamix DC-48A/SA agents that are to be managed by the EMS must be “registered” to the system. The “registration” process is to make the system aware of agent’s IP address and alias name. Once an agent is registered, it is put into the “demount” agent pool, which is still “inactive” for the network monitor. You then have to activate it if you want it to be monitored. An active agent can also be deactivated from the monitor for certain operational purpose when necessary. Agent Manager is designed for you to perform these operations.

#### ► Agent Manager window

Choose **Agent Manager** from **Tools Menu**, this window then appears.

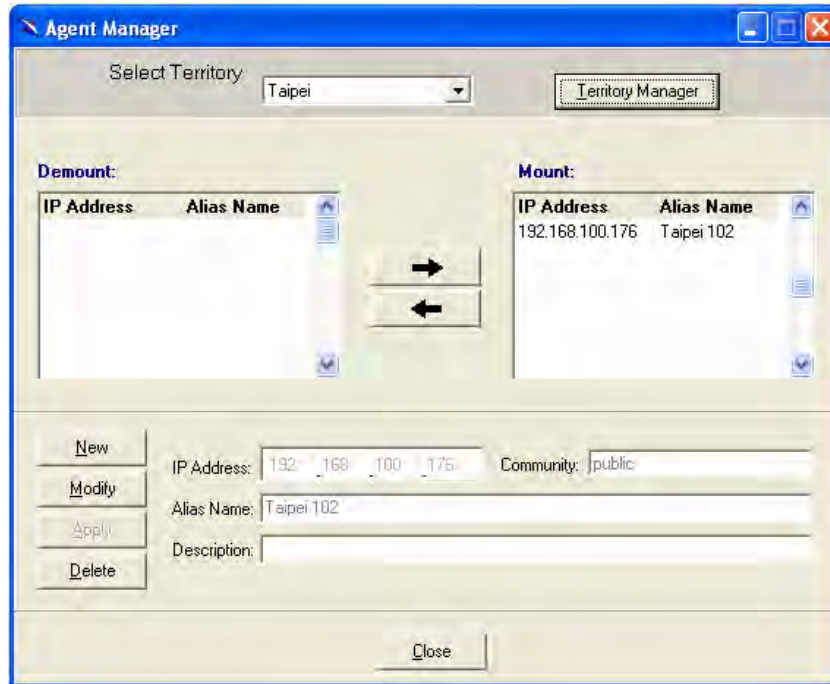



As mentioned above, Agent Manager is used to define the Dynamix DC-48A/SA agent's IP address and community string that are to be used in the system, and to activate the system's monitoring of an agent; to deactivate an agent from the system's monitoring.


If to add an agent to the system,


1. Select a territory that a new agent belongs to. Users can click on

 to activate territory manager.


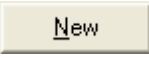
2. Click on , the data fields then cleared to blank for entering the data. Enter values in fields, IP Address, Alias Name and Description. The Apply buttons to the left of these fields then become enable.

3. Click on  to apply the agent to the system.

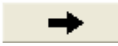


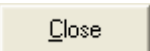
4. If to activate (so-called "Mount") the system's monitoring of an agent, click on the required agent entry in the Demount agent list, then click on . The agent will appear on the Mount agent list on the right.

5. Click on  to exit the window or continue to perform other operations in the same window.

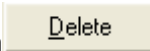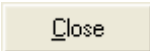If to remove an agent from the system,


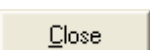
1. Click the required agent in the Demount agent list, and then click on . The agent will disappear.
2. Click on  to exit the window or continue to perform other operations in the same window.

If to change the information of an agent,

1. Select the required agent in the **Demount agent list**. The information of the selected agent will then presented on the data fields.
2. Click on  to Change IP, Alias Name, and Description and then  becomes enable.
3. Click on  to apply the change to the system.
4. Click on  to exit the window.

**Note:** user can only change alias and description of the agent in the Mount agent list and changing IP is prohibited.

If to activate the system's monitoring of an agent,

1. Select the required agent in the Demount agent list, and then click on the Mount button . The agent will appear on the Mount agent list.
2. Click on  to exit the window or continue to perform other operations in the same window.

If to de-activate the system's monitoring of an agent,


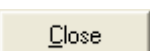
1. Select the required agent in the Mount agent list, and then click on the Demount button . The agent will then disappears from the Mount agent list and appears on the Demount agent list on the left.
2. Click on  to exit the window.

Table 3-1 Agent Management Field Definition


Field	Definition
IP Address	***.***.***.***
Alias name	Name of Dynamix DC-48A/SA
Description	Note



► **Agent Desktop (Network Monitor)**

Agent Desktop (see below) is the main window for the network administrators in performing their day-to-day network monitoring jobs. Like the standard desktop of MS Windows, Agent Desktop appears at all time once the system is started. First appears on the Agent Desktop is the status of agents by an array of colors. By which you may monitor the status of agents, and judge if they are normal or in situations of alarms. You may then double click on the required agent IP to activate the event log window. Similarly, the Mounted Agents Desktop can be started up by double clicking on the icon of territory.

In the Agents Desktop, press **Refresh** to refresh the status of all agents.

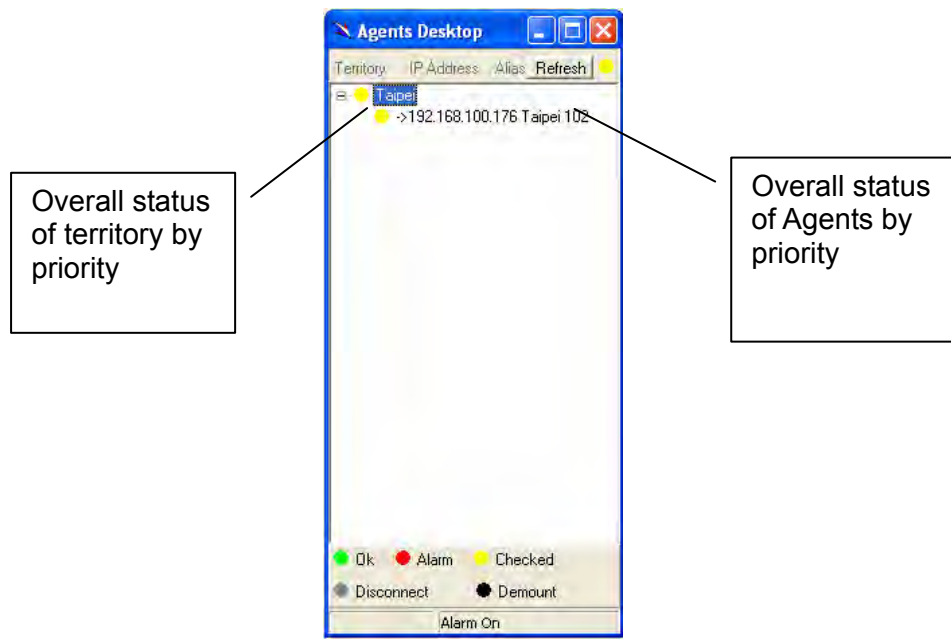

**Legends:**


- Gray icon indicates that the agent is disconnected.
- Green icon indicates that the agent is in normal condition.
- Red icon indicates that “Major Alarm” is occurred to the agent and requires network administrator’s attention. Network administrator pays attention to alarms by looking into the alarms using Event Log – Outstanding.
- The red icon will turn into a yellow icon after the network administrator has looked into the alarms. However, this does not mean the situation is released. If any new alarm happens, yellow will turn red.

- Black icon indicated that the agent is demounted.

**Note:** the priority of colors: Gray>red>yellow>green>black

### ► Mounted Agent Desktop

Mounted agent desktop provides users with flexibility in viewing your network using graphical presentation of network elements. Mounted agent desktop can be easily activated by double clicking the icon of territory in the agent desktop and appears promptly as shown in the the following figure. By the mounted agent desktop, the location of agents and overall network status of a specific territory is presented.

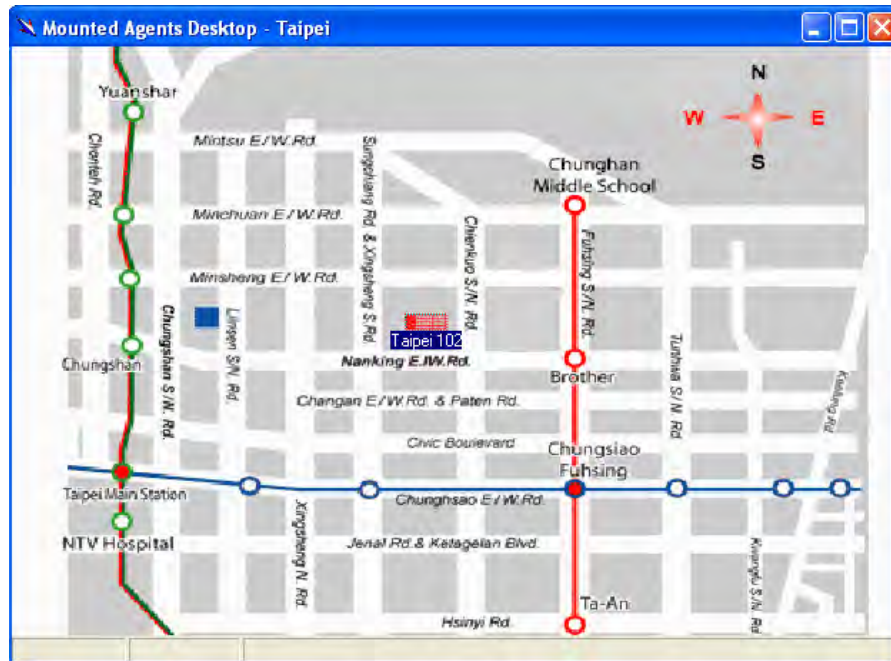

Legends:



**Taipei 102**: This icon can be moved to where the agent is located in the map. In addition, its color also changes with the status of the agent. For example, the icon in red means that alarm is occurred to the agent and requires network administrator's attention.

### 3.4.4 Telnet

Users can use the Telnet to connect to a specific Dynamix DC-48A/SA,


and then monitor and interact with the system.

How to activate Telnet from Agent Desktop?

1. Select an agent IP on the Agent desktop.



2. Click on the right button of mouse and then select **Telnet** or choose **Telnet** from tool menu in the EMS window's menu bar. Then Telnet screen will come up immediately.

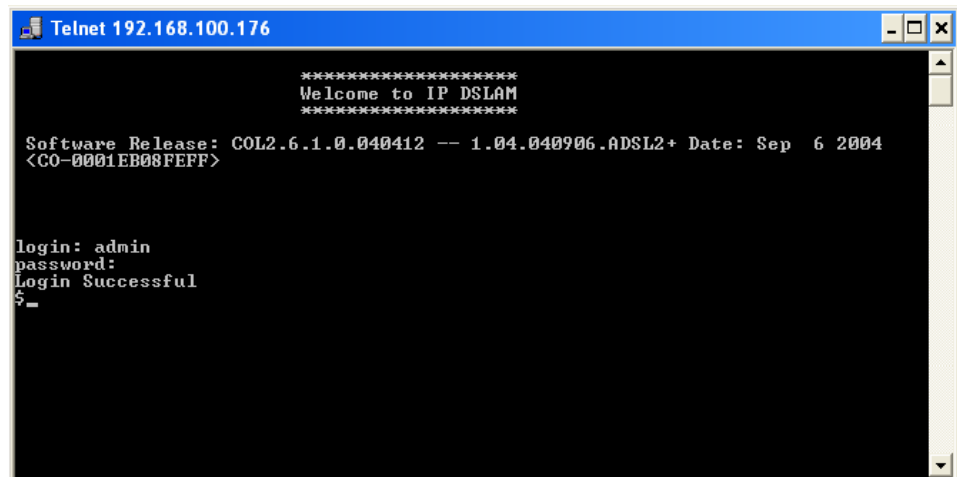

3. Enter user name and password to access the CID screen.

**Note:** The default login and password are admin.

### 3.4.5 Ping


Ping is a command used to determine whether a particular Dynamix DC-48A/SA is currently connected to the agent. It works by sending a packet to the specific IP address and waiting for reply.

How to activate Telnet from Agent Desktop?

1. Select an agent IP on the Agent desktop.



2. Click on the right button of mouse and then select **Ping** or choose it from tool menu in the EMS window's menu bar. Ping screen will come up immediately and then starts to send packets to check the connection with the Dynamix DC-48A/SA.

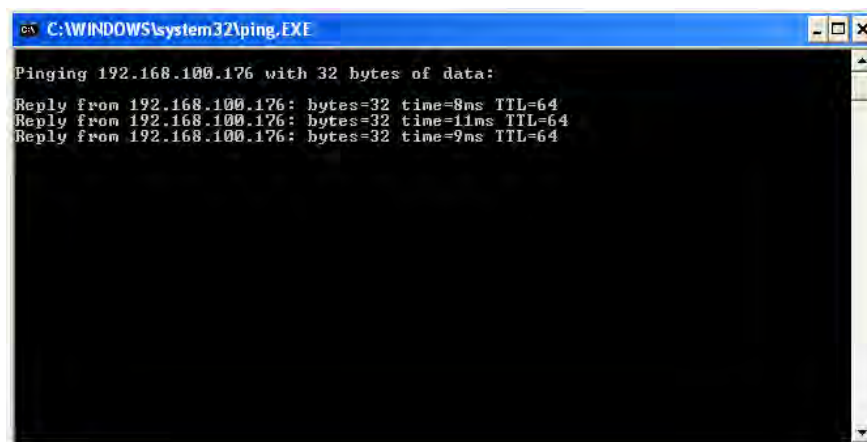

3. After showing the connection status, the screen will be closed automatically.

### 3.4.6 User Manager window

The EMS uses user accounts, password as well as power level (system privileges) to control access and log in. There are three types of privileges, Supervisor, Constructor and Tester.

**Supervisor:** The highest level. User with this privilege can access ANY functions and data;

**Constructor:** User can set and modify the configuration of network equipments.

**Tester:** user can run maintenance test, such as loop back function.

To perform user manager, proceed as follows,

1. Choose **User Manager** from **Tools Menu** to access this window.

From the following window, **User Manager**, you can add and remove users as well as change passwords, which are used to control the login.

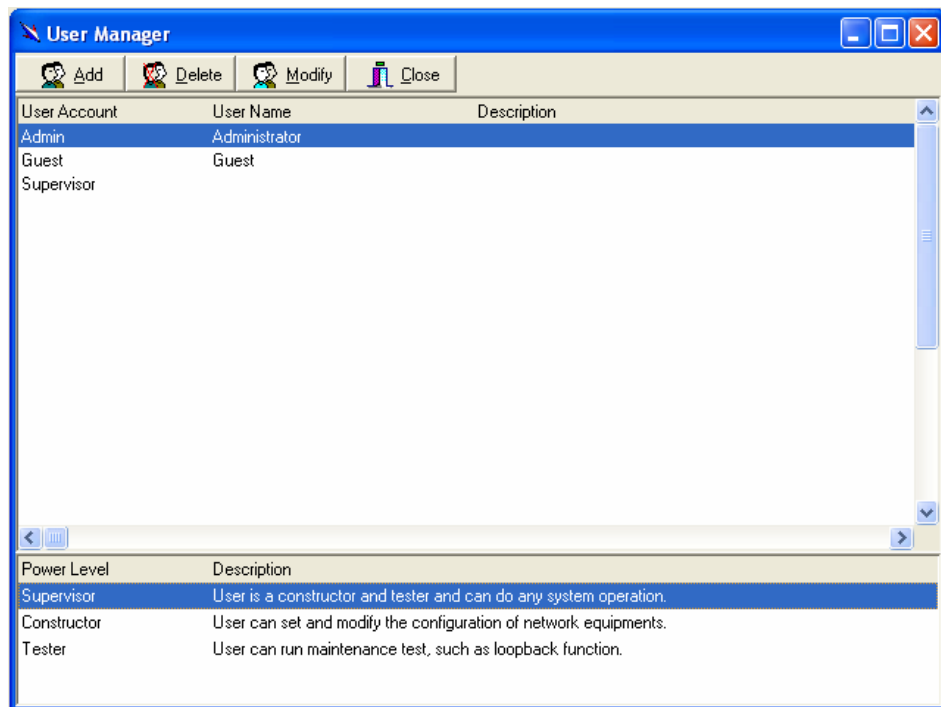



Table 3-2 User Manager Field Definition

Field	Definition
User Account	an ID to be used for login
User Name	The full name of a user
Description	Remarks for note purpose
Power Level	Privileges; Administrator and tester

If to add a user account to the system,

1. Click on , the Security window then prompts.


2. Enter the account information as described in Security window below.

3. Click on  to exit the window or continue to perform other operations in the same window.

If to remove a User Account from the system,


1. Select a user account by clicking on the desired entry in User Account selection list. After selection, the designated one will be highlighted.

2. Click on  to delete it.

3. Click on  to exit the window or continue to perform other operations in the same window.

If to change User Account Information,

1. Select a user account by clicking on the desired entry in User Account selection list. After selection, the designated one will be highlighted.







2. Click on  button, the Security window then prompts.

3. Change the account information as described in **Security window** below.

4. Click on **Close** button to exit the window or continue to perform other operations in the same window. 2. Click on **Add** button, the Security window then prompts.

## ► User Manager window -- Security

This window is a daughter window of User Manager Window, and is used when adding a user account or changing account information.

1. Either  **Add** or  **Modify** is selected, this window appears.
2. Enter data in the fields, User Account, User Name, Description, Password as required. Re-enter the password in field, Verify Password, for purpose of verification.
3. If to force the user to change their password at the next login, click on the checkbox to the left of the field, **To Change Password When Login Next Time.**
4. If to suspend a user account, click on the checkbox to the left of the field, **Account Suspended.**
5. If to assign a new Power Level to the user, click on the desired entry in the **Demount** list, then click on the Mount button, . The selected Power Level entry will then be added to the **Mount** list on the right.
6. If to remove a Power Level from the user, click on the desired entry in the **Mount** list on the right, then click on the Demount button, . The selected Power Level entry will then be removed.
7. Click on  **OK** to complete the operation or  **Cancel** to abort the change. Either one is selected; the window is exited to User

Manager Window.

Table 3-3 Register-Security Field Definition

Field	Definition
User Account	An ID to be used for login
User Name	The full name of a user
Description	Remark for note purpose
Password	Any character string, including blank
Verify Password	Re-enter the password as a confirmation
To change password when next login	If this is checked, the associated user needs to change their password at the next login.
Account Suspended	Suspend the account.
Power Level	Privileges; Administrator and tester




# 4

## Manage the Dynamix DC-48A/SA


After successfully setting up the environment of EMS, you can manage different Dynamix DC-48A/SA via your EMS remotely. This chapter will tell you how to interact with a specified Dynamix DC-48A/SA.

### 4.1 Activate Function Management Windows

Via EMS, users can remotely monitor the current status of a specified IP DSLAM, and then proceed advanced configuration. To activate the function management windows, choose a specified agent that you want to manage, and then double click the agent, or click the right button of the mouse to select **Function List**, as shown in the following figure.,

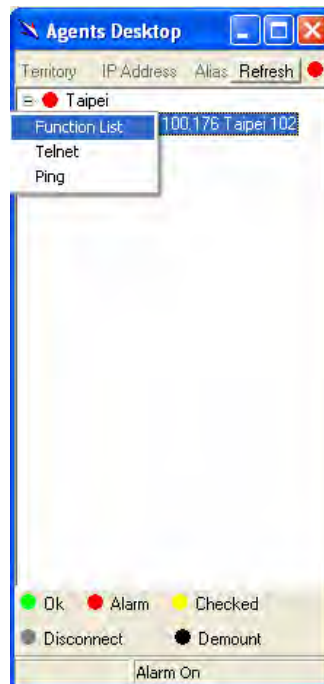

After that, the function management windows, including Function window and Front panel status window, will prompt as shown in the following figure.

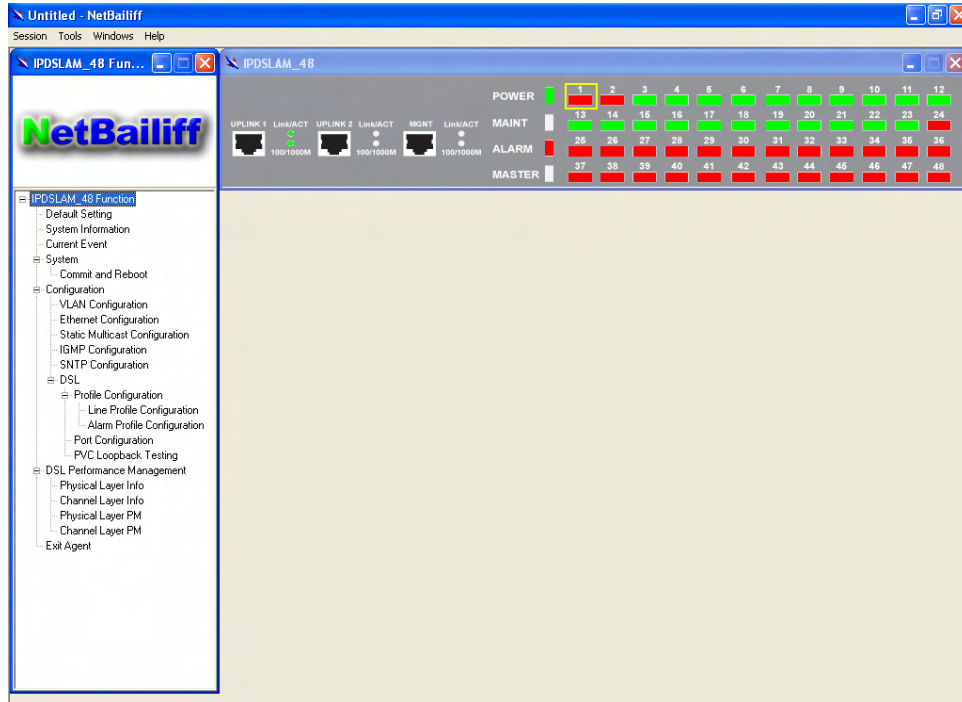


### 4.1.1 Function management Windows

The Function management windows, including function window and Front panel status window, which are provided to monitor the Dynamix DC-48A/SA's status in real time and configure related settings. They will be introduced respectively.


► **Function Window:**

From the Function window, users can activate a specified function immediately by double clicking a specified item.

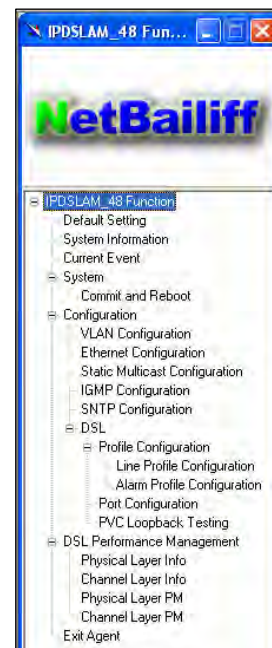

## ► Front Panel Status Window

After choosing a specified agent, the Front Panel Status Window, together with the Function Window, will come out immediately to present the current status of front panel of the Dynamix DC-48A/SA. As to the LED identification of front panel, refer to page 9 to get more information.

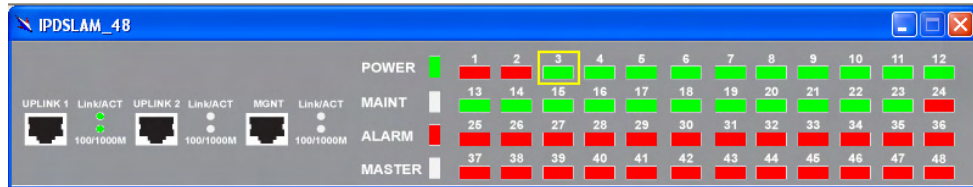


## 4.2 Default Setting

This section describes how to get the information of the default setting of the Dynamix DC-48A/SA.

1. Click on “**Default Setting**” from the Function List window.

The **Default Setting** window appears as follows:

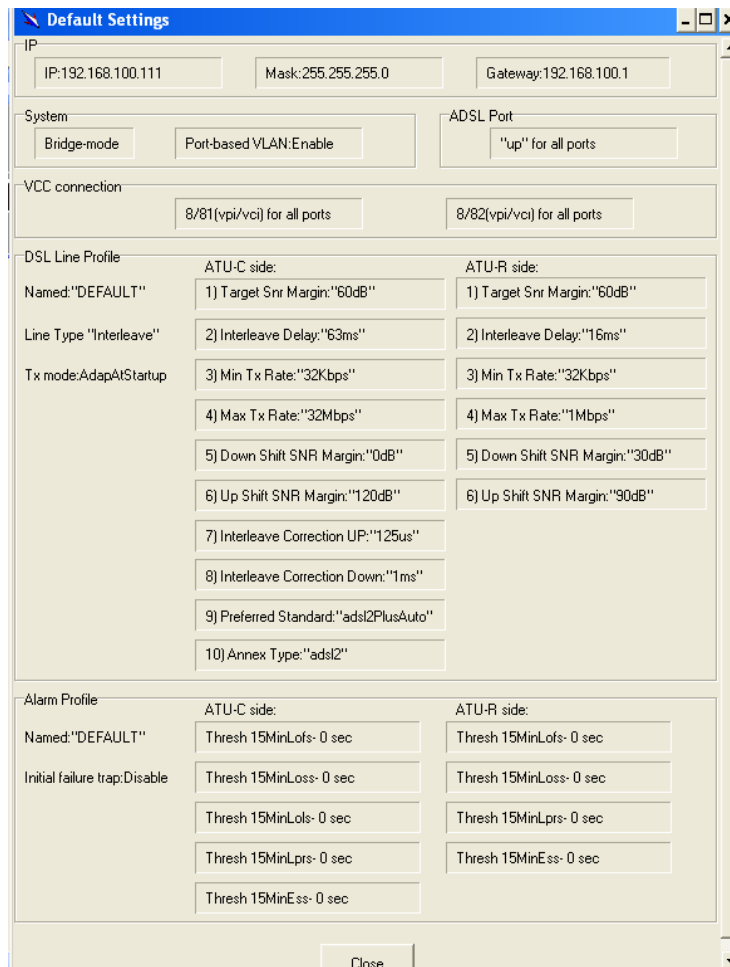


In the default setting window, the status of, IP, System, VCC connection, DSL line profile and Alarm profile are displayed clearly. How to modify them will be introduced in the following sections.

### 4.3 System Information

This section describes how to get and input the information of the Dynamix DC-48A/SA.

1. Double Click on “**System Information**” from the Function List Window.

The **System Information** window appears as follows:

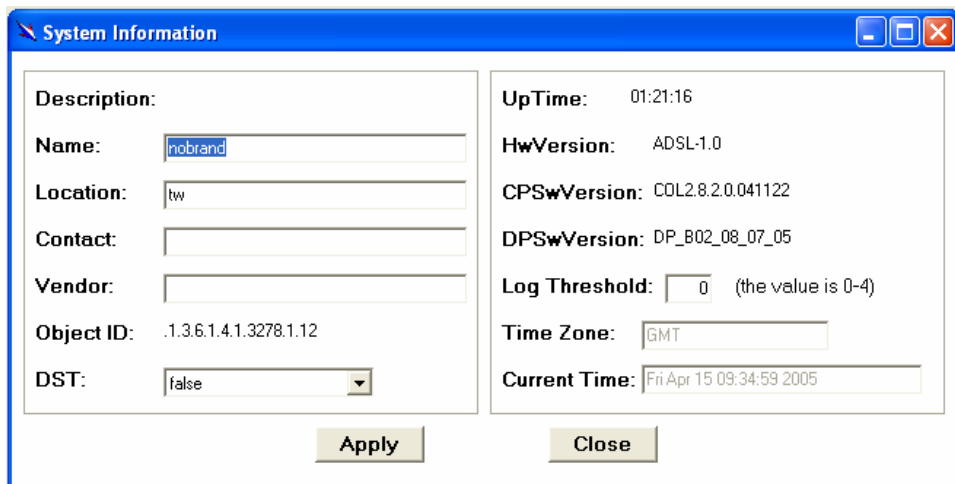

Input necessary information on those fields.

Table 4-1 Sysinfo field definition

Field	Definition
Name	Alias name of the Dynamix DC-48A/SA
Location	Location of the Dynamix DC-48A/SA
Contact	The contact person of the Dynamix DC-48A/SA
Vendor	The vendor of the Dynamix DC-48A/SA
Object ID	Vendor ID
DST	This specifies if the Daylight Savings Time has been enabled or not. <b>True:</b> on <b>False:</b> off
UpTime	System up time
HwVersion	Hardware version of the Dynamix DC-48A/SA.
CPSwVersion	Control plant version
Log Threshold	This specifies the severity level of the trap equal to or lower than that shall be logged. 0 represents log threshold is disable. 1 is the lowest and represents critical traps. <b>Valid values:</b> 0-4
Time Zone	Time zone <b>Valid values:</b> Given below, are the valid values, followed by their descriptions. IDLW - International Date Line West

	NT - Nome HST - Hawaii Standard CAT - Central Alaska AHST- Alaska-Hawaii Standard YST - Yukon Standard PST- US Pacific Standard MST- US Mountain Standard CST- US Central Standard EST- US Eastern Standard AST- Atlantic Standard NFST- Newfoundland Standard NFT- Newfoundland BRST-Brazil Standard AT- Azores WAT - West Africa GMT - Greenwich Mean UTC - Universal (Coordinated) WET - Western European CET - Central European FWT - French Winter MET - Middle European MEWT - Middle European Winter SWT - Swedish Winter EET - Eastern Europe, Russia Zone 1 IST - Israeli Standard BT - Baghdad, Russia Zone 2 IT - Iran ZP4 - "Russia Zone 3" ZP5 - "Russia Zone 4" INST - "Indian Standard" ZP6 - "Russia Zone 5" NST - "North Sumatra" WAST - West Australian Standard SSMT - South Sumatra, Russia Zone 6 JT- Java CCT - China Coast, Russia Zone 7 ROK - Korean Standard KST - Korean Standard JST - Japan Standard, Russia Zone 8 CAST - Central Australian Standard EAST - Eastern Australian Standard GST - Guam Standard, Russia Zone 9 IDLE - International Date Line East NZST - New Zealand Standard NZT - New Zealand Example: IDLW , that stands for International Date Line West
Current Time	This indicates the current time.

3. Click on **Apply** to submit your settings or **Close** to close the window.

## 4.4 Current Event

Describes the facility for the network administrators to track and trace the history of events happened and released. Current Event window can be

activated from Function list window.





There are three daughter windows provided to accomplish above tasks:

**Outstanding Event:** Allow you to view the outstanding events or status and system information.

**Closed Event:** Allow you to trace events or status that are already closed and are still within the surveillance period as defined in **Environment Options**. It also allows you to view the system information.

**Archived:** Allow you to browse the expired records.

### Legends

Icons	The grade of alarm indicated	Abbreviation	Icons after the alarm has been viewed.
	Major Alarm	MJ	
	Minor Alarm	MN	

### ▶ **Outstanding Event**

This window allows you to view the outstanding events of specific agents.

If to view the event log of a specific agent,

1. Click "**Current Event**" from Function List window. The Event Log window appears as follow:

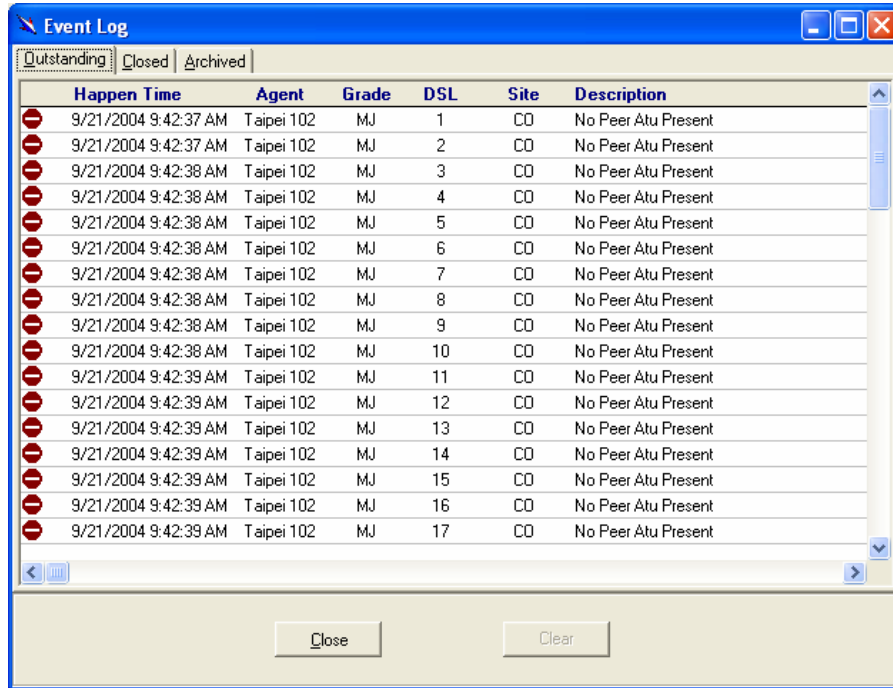


Table 4-2 Outstanding Event Window Field Definitions

Field	Description
Happen time	The date/time when the event is occurred.
Agent	The IP address of the agent associated
Grade	Severity level of event or status.
DSL	DSL Port
Site	Down stream or upstream
Description	The description of the event or status.

► **Closed Event**

This window allows you to browse the closed alarms and events of specified agents.

1. Click on the tab of **Closed** that will bring the **Closed** screen to front, as the following figure shown:

2. Click on  to clear all records.

3. Click on  to exit the window.

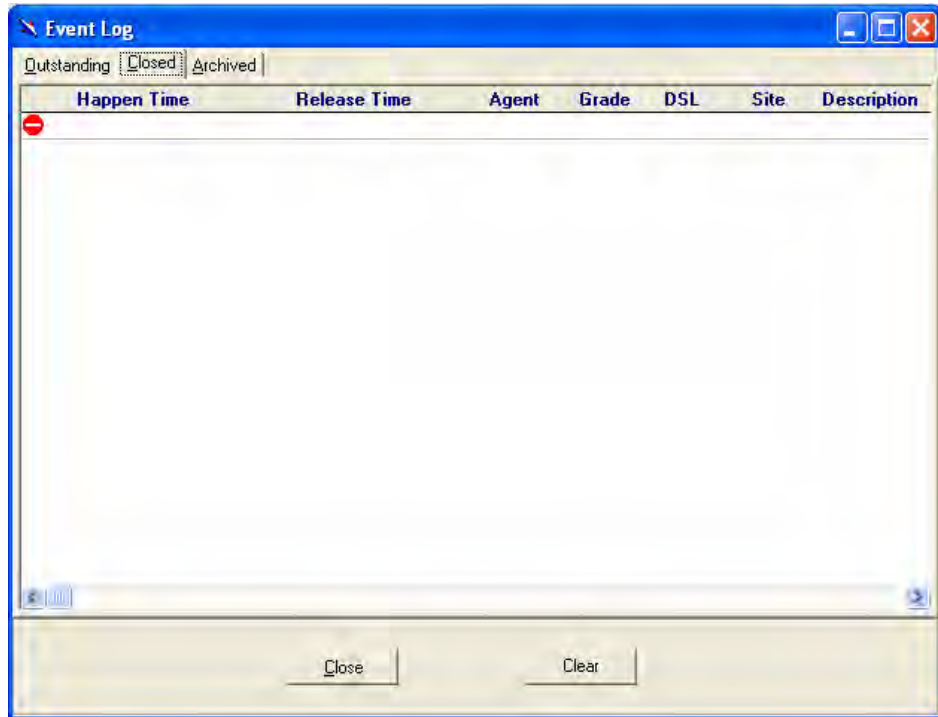


Table 4-3 Closed Event Window Field Definition


Field	Description
Release Time	The date/time when the event is closed.
Others	Rest of the fields is as same as described in "Outstanding Events".

► **Archived**

This window allows you to browse the expired records, which can be configured in the Environment window.

1. Click on the tab of **Archived** that will bring the **Archived** screen to front as follows:



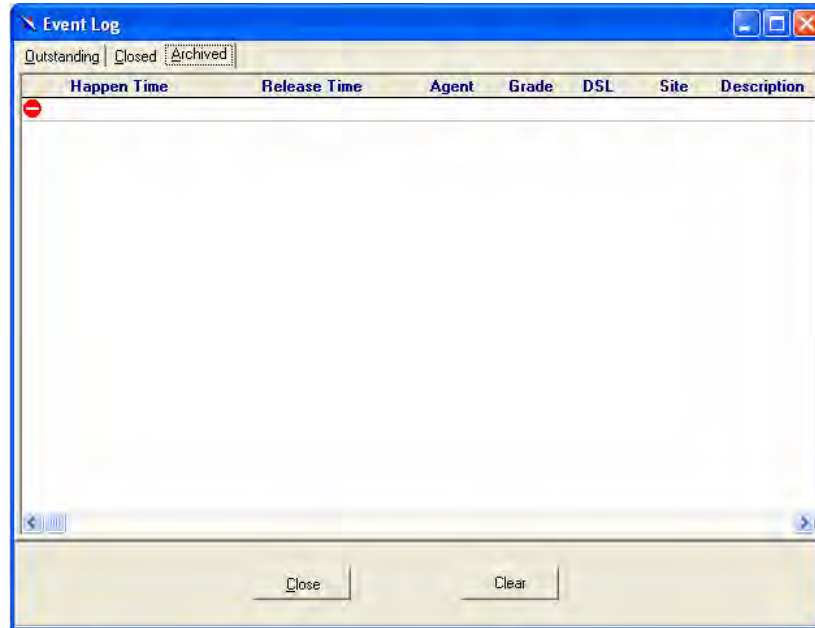

2. Click on  to clear all records.

3. Click on  to exit the window.

## 4.5 System


This section allows users to perform commit and reboot that will be introduced as follows:

### 4.5.1 Commit and Reboot

This section describes how to commit the current configuration to flash or reboot the Dynamix DC-48A/SA.

1. Double Click on "**Commit and Reboot**" from the Function List Window.

The **System Information** screen appears as follows:

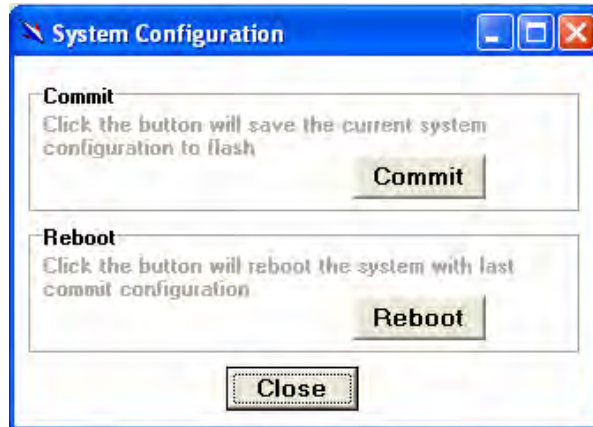

2. If to commit the active configuration to the flash, click on **Commit**.
3. If to reboot the system and to set the boot configuration, click on **Reboot**.
4. Click on **Close** to close the System Configuration window.

## 4.6 Configuration


This section describes how to configure the Dynamix DC-48A/SA by selecting **Configuration** from Function List window. This section will cover those functions:

### 4.6.1 VLAN Configuration

Allow user to view and modify VLAN configuration. To configure VLAN, proceed as follows:

1. Double Click on "**VLAN configuration**" from the Function List Window.

The VLAN configuration window appears as follows:

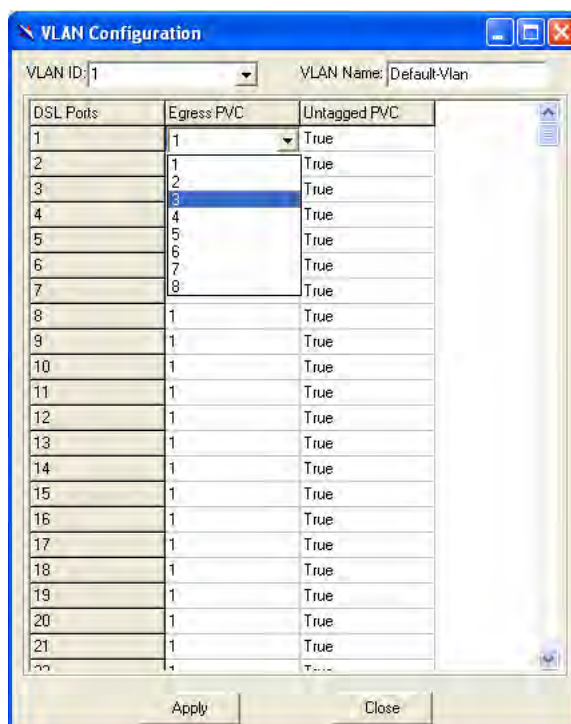



2. Select the VLAN to view or modify by using the VLAN ID drop-down list.
3. Use Egress PVC and Untagged PVC drop-down list to set the specified DSL port's Egress PVC and Untagged PVC.
4. Click on  to submit your settings or click on  to close the VLAN Configuration window.


Table 4-4 VLAN Configuration Field Definitions

Field	Definition
VLAN ID	The VLAN id for this VLAN. In devices supporting "Shared Vlan for multicast" capability, the information for a multicast mac addr is shared across vlans hence vlan id is an optional parameter. In devices supporting "Independent Vlan for multicast" capability each vlan can have its own information for a multicast mac addr hence vlanid is a mandatory parameter in all the commands other than - get. For No Vlan case vlan id is not required.
VLAN Name	Name of the VLAN
Egress PVC	The set of ports, which are permanently assigned to the egress list for this VLAN by management.
Untagged PVC	The set of ports, which should transmit egress packets for this VLAN, as untagged.

## 4.6.2 Ethernet Configuration


Allow user to view and modify Ethernet configuration. To view or configure Ethernet, proceed as follows:

1. Double Click on “**Ethernet configuration**” from the Function List Window. The Ethernet Configuration window appears.

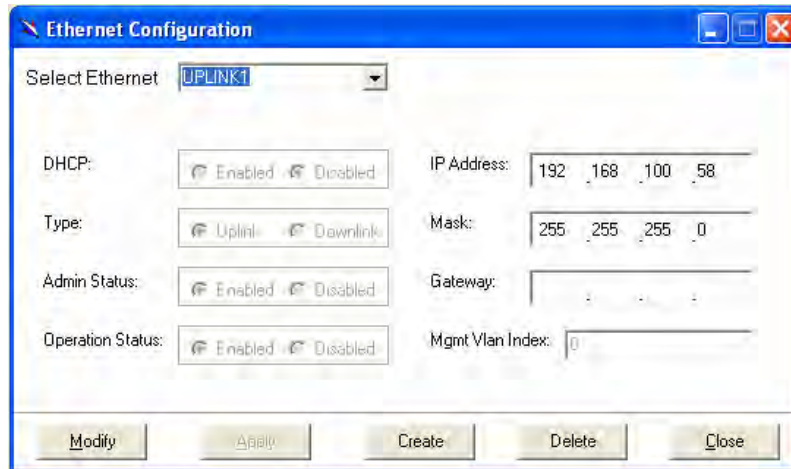


2. To view the Ethernet Configuration of UPLINK1, UPLINK2, or UPLINK3 by using the Slect Ethernet drop-down list.

3. If to modify the Ethernet Configuration, click on **Modify** first and then proceed advanced configurations as shown in the following figure.

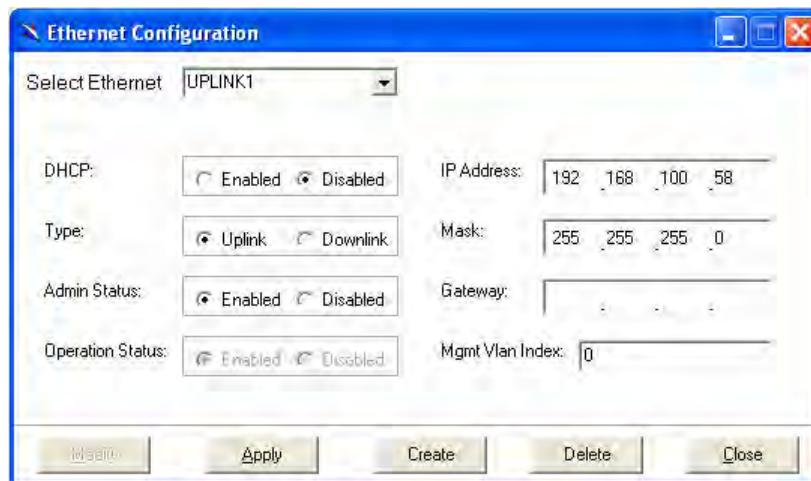

4. If to create a new Ethernet configuration, click on **Create** and then select a new Ethernet configuration by using Slect Ethernet drop-down list. After that, users can set related peremeters as follows:

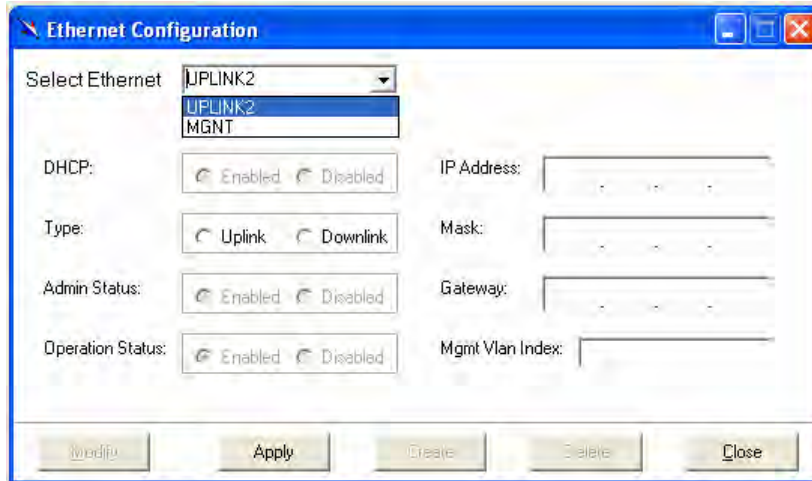

5. Click on  to submit your settings or click on  to close the Ethernet Configuration window.


Table 4-5 Ethernet Configuration Field Definitions

Field	Definition
DHCP	DHCP client enabled or disabled
Type	Upstream or downstream
Admin Status	The desired state of UPLINK (enable/disable)
Operation Status	System is enabled or not.
IP address	IP address of the UPLINK
Mask	This specifies the network mask configured for the UPLINK.
Gateway	Gateway IP
Mgmt Vlan Index	VLAN for management traffic on this interface. Nonzero value of this field is valid only if either 'ip' field is non-zero or 'usedhcp' field is true. If no Management Vlanid is specified (in the create operation) or its value is set to zero (either in create or modify operation) then the system shall use the value of 'portvlanid' associated with the bridge port created on this interface as the Management Vlan Index. In case the management vlan (i.e. 'mgmtvlanid' or the associated 'portvlanid', if 'mgmtvlanid' is zero) doesn't exist on the system then management shall not happen on this interface till the corresponding VLAN is created with the Net side port as its member.

### 4.6.3 Static Multicast Configuration

Allow user to view and modify Static Multicast configuration. To view or modify Static Multicast configuration, proceed as follows:

1. Double Click on “**Ethernet configuration**” from the Function List Window. The Static Multicast Configuration window appears.

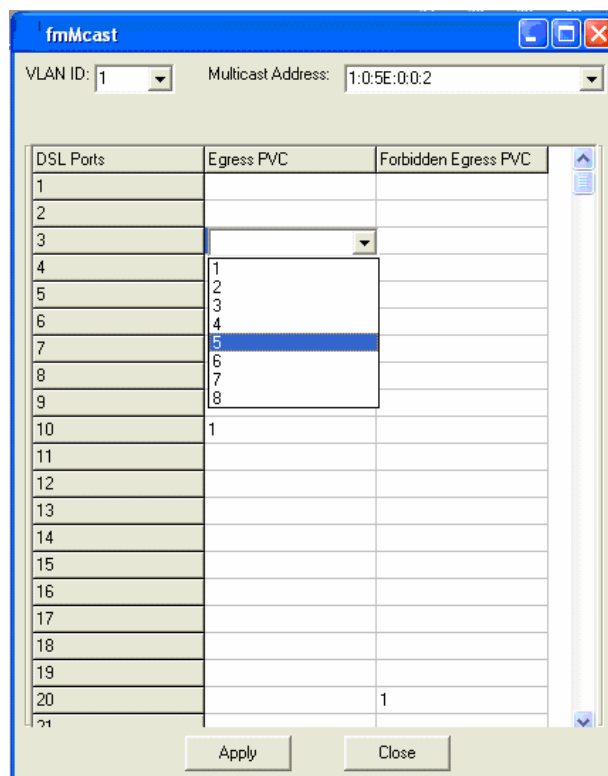

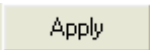
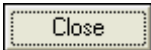
2. Select the VLAN ID to view or modify by using the VLAN ID drop-down list.
3. Use Egress PVC and Forbidden Egress PVC drop-down list to set the specified DSL port's Egress PVC and Forbidden Egress PVC.
4. Click on  to submit your settings or click on  to close the VLAN Configuration window.


Table 4-6 VLAN Configuration Field Definitions


Field	Definition
VLAN ID	The VLAN id for this VLAN. In devices supporting "Shared Vlan for multicast" capability, the information for a multicast mac addr is shared across vlans hence vlan id is an optional parameter. In devices supporting "Independent Vlan for multicast" capability each vlan can have its own information for a multicast mac addr hence vlanid is a mandatory parameter in all the commands other than - get. For No Vlan case vlan id is not required.
Multicast address	A multicast address is an address that designates a group of entities within a domain.
Egress PVC	The set of ports, which are permanently assigned to the egress list for this VLAN by managemen.
Forbidden Egress PVC	The set of ports, which should transmit egress packets for this VLAN, as untagged.

## 4.6.4 IGMP Snooping

IGMP snooping, as implied by the name, is a feature that allows an IP DSLAM to "listen in" on the IGMP conversation between hosts and routers. To set IGMP Snooping status as Disabled or Enable, the procedure is as follows:

1. Choose a specified port to execute IGMP snooping function.
2. Double click on IGMP Configuration via Function window. Then the IGMP Configuration window appears as follows:

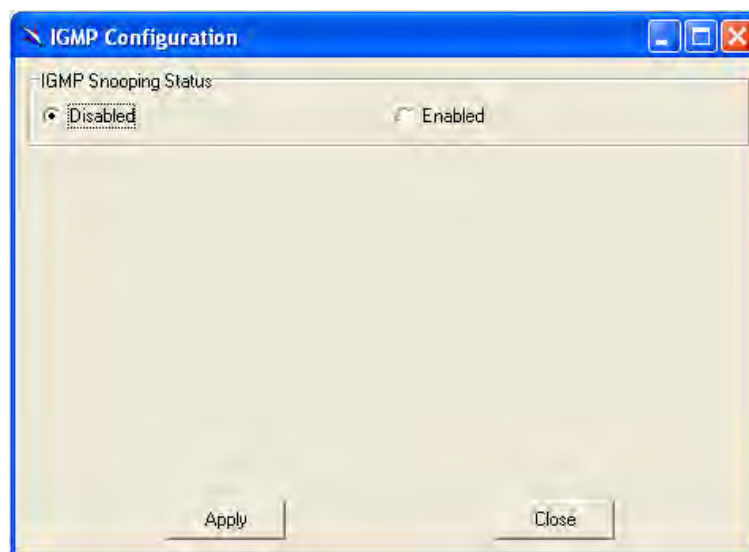


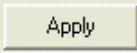Select Disabled or Enabled, and then click  to submit your setting.



## 4.6.5 SNTP Configuration


Allow you to view the SNTP client status and execute advanced configuration. The procedure shows as follows:


1. Choose a specified port to execute SNTP configuration function.
2. Double click on SNTP configuration via Function window. Then the SNTP configuration window appears as follows:

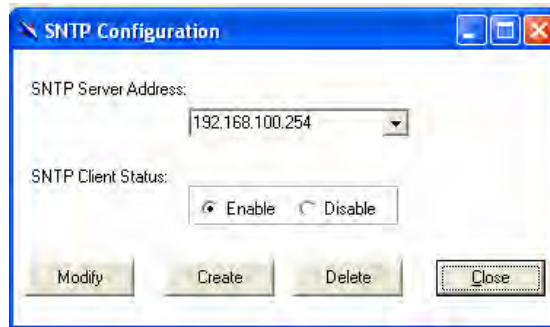


3. If to enable or disable current SNTP client, click on .

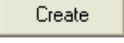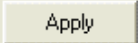4. If to create a new SNTP client, click on  and then set SNTP Server address and SNTP client status. After that, click on  to submit your setting.

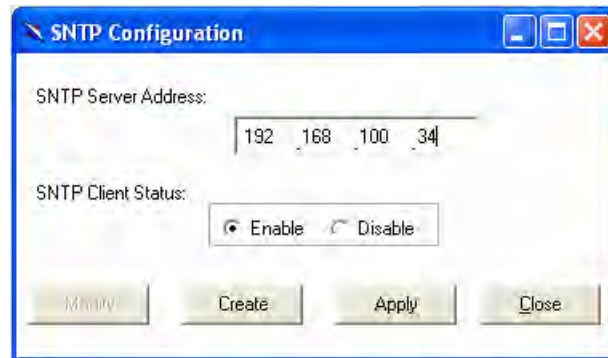

5. If to delete a certain SNTP client, select the SNTP server from the SNTP server address drop-down list and then set the SNTP client status as Disable. Finally, click on .

6. Click on  to close the SNTP Configuration window.

## 4.7 DSL

This section describes how to configure DSL settings by selecting **DSL** from Function List window. This section will cover those functions:

### 4.7.1 Profile Configuration


Allow users to configure Line Profile and alarm profile.




► **Line Profile Configuration**

If to configure Line Profile, proceed as follows.

1. Double Click on “**Line Profile configuration**” from the Function List Window. The Line Profile configuration window appears.

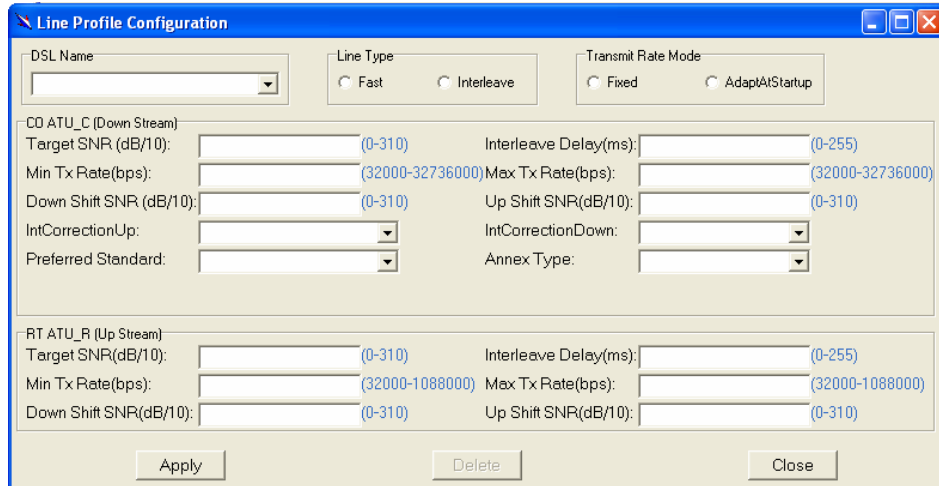

To creat up a new line profile, click the DSL Name drop-down list and then select the blank.

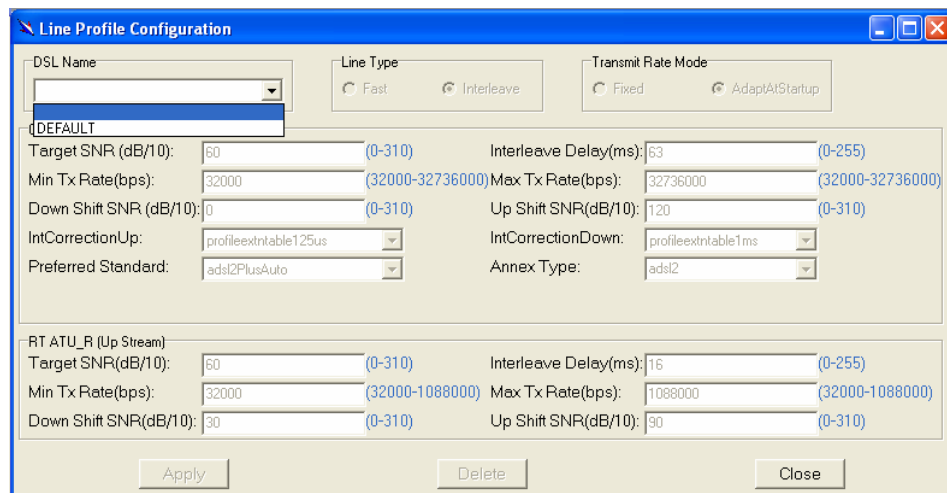

After that, the fields become enable. Input the values in those fields and then name the new line profile.

Click on **Apply** to submit your setting or click on **Delete** to deliete a line profile.

Table 4-7 Line Profile Field Definitions


Field	Definition
Line Type	The ADSL line type, Fast or Interleaved
Transmit Rate Adaption	Defines what form of transmitting rate to be adaptated, fixed or adaptAtStartup

Target SNR (dB/10)	Target Signal / Noise Margin.(0-310)
Min Tx Rate(bps)	The minimum transmitting rate of ATU-C side or ATU-R side.
Down Shift SNR (dB/10)	Configured Signal/ Noise Margin for rate downshift. If the noise margin falls below this level, the modem should attempt to decrease its transmit rate. In the case that RADSL mode is not present, the value will be 0.
IntCorrectionUP	Sets the correction time for the upstream interleaved buffer. RS can also be disabled. <b>Value: 125us   250us   500us   1ms   2ms   4ms   disable</b>
Preferred Standard	Preferred standard compliance. Outcome is dependent upon standard support of the remote unit.GlobespanVirata High Speed ADSL DMT (ADSL+) applications only <b>Value: t1413   gLite   gDmt   alctl14   multimode   adi   alctl   t1413Auto   adsIPlus   GspanPlus</b>
Maximum Transmit Rate	The maximum transmitting rate of ATU-C side or ATU-R side.
Interleave Delay (ms)	The value of Interleave Delay for this channel.
UP Shift SNR (dB/10)	Configured Signal/ Noise Margin for rate upshift. If the noise margin rises above this level, the modem should attempt to increase its transmit rate. In the case that RADSL is not present, the value will be 0.
IntCorrectionDown	This parameter sets the correction time for the downstream interleaved buffer. RS can also be disabled.
Annex Type	This parameter is set as per Annex compliance of the code release. GlobespanVirata High Speed ADSL DMT (ADSL+) applications only.

## ► Alarm Profile Configuration

If to configure Alarm Profile, proceed as follows.

1. Double Click on “**Alarm Profile Configuration**” from the Function List Window. The Alarm Profile Configuration window appears.

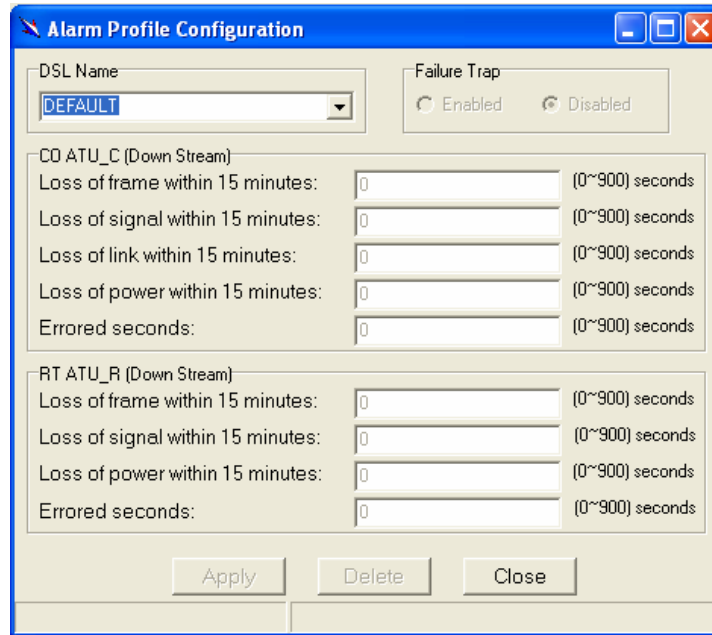

2. To create a new alarm profile, click the DSL Name drop-down list and then select the blank.
3. After that, the fields become enable. Input the values in those fields and then name the new alarm profile.
4. Click on  to submit your setting or click on  to deliete a alarm profile.

Table 4-8 Alarm Profile Field Definitions


Field	Definition
Loss of frame within 15 minutes	The threshold of the number of “Loss of Frame Seconds” within 15 minutes performance data collection period.
Loss of signal within 15 minutes	The threshold of the number of “Loss of Signal Seconds” within 15 minutes performance data collection period.
Loss of link within 15 minutes	The threshold of the number of “Loss of Link Seconds” within 15 minutes performance data collection period. (But only ATU-C side)
Loss of power within 15 minutes	The threshold of the number of “Loss of Power Seconds” within 15 minutes performance data collection period.
Errored seconds	The threshold of the number of “Errored Seconds” within 15 minutes performance data collection period.



## 4.7.2 Port Configuration

Allow users to proceed port configuration. The procedures are as follows:





1. Double Click on “**Port Configuration**” from the Function List Window.

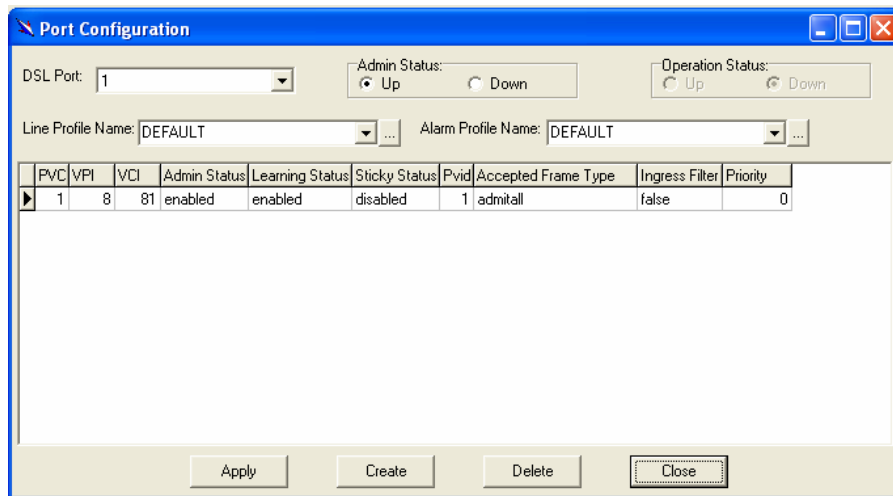The Port Configuration window appears.



2. Choose the port to configure from the DSL Port drop-down list.
3. Configure the Administration status as “Up” or “Down”.
4. Choose a Line Profile from the Line Profile Name drop-down list. If to configure a Line Profile, Click on  to activate the Line Profile Configuration window.
5. Choose an Alarm Profile from the Alarm Profile Name drop-down list. If to configure an Alarm Profile, Click on  to activate the Alarm Profile Configuration window.

If necessary, modify values of a specified PVC, including VPI, VCI, Admin Status, Learning Status, Sticky Status, Pvid, Accepted Frame Type and Ingress Filter, and priority.

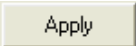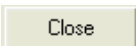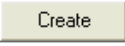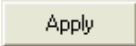6. Click on  to submit your settings or click on  to close the fmBridgeport window.
7. If to create new PVC, click on  and then PVC2 appears and then users can set peremeters via PVC2. after that, click on  to submit your setting.

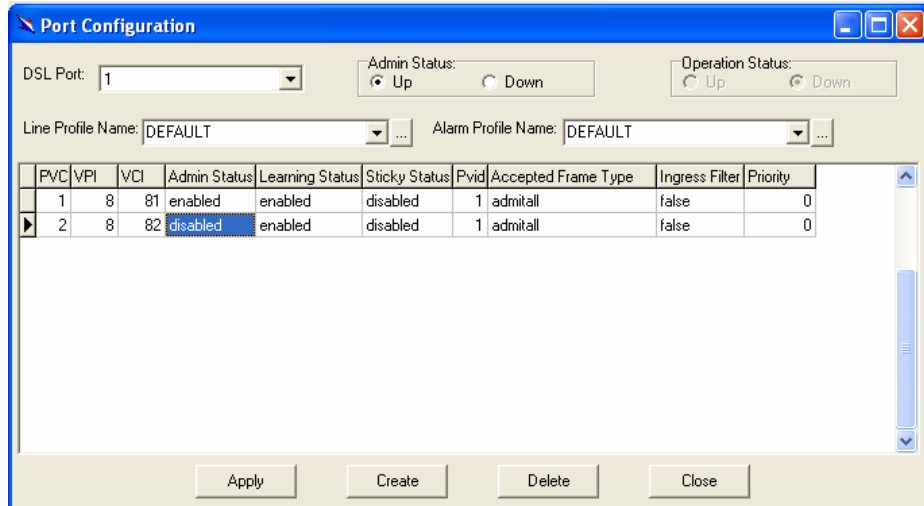


Table 4-9 Port Configuration Field Definitions

Field	Definition
DSL Port	Port No. of the Dynamix DC-48A/SA
VPI	Virtual Path Identifier
VCI	Virtual Channel Identifier
Learning Status	The state of learning on this bridge port. The value <b>enable (1)</b> indicates that unicast Mac address learning is enabled and the value <b>disable</b> indicates that unicast Mac address learning is disabled on this bridge port.
Sticky Status	Indicates if the port has been set as sticky. The value <b>enable (1)</b> indicates that the entries learned on this port will not be aged out. It also indicates that the entries learned on this port shall not be learned on any other port. The entries learned on this port can only be removed by management action or by making the value as <b>disable (2)</b> , so that the entries can be aged out.
Pvid	Port VID
Accepted Frame Type	Used to up/down connection.
Ingress Filter	When this is <b>true</b> , the device will discard incoming frames for VLANs, which do not include this Port in its Member set. When <b>false</b> , the port will accept all incoming frames.
Priority	Optional Connection priority. No VLAN tag, no priority.

## 4.8 DSL Performance Management


This section describes how to utilize DSL Performance Management by selecting **DSL Performance Management** from Function List window.

This section will cover those functions:

### 4.8.1 Physical Layer Info

Allow users to view the physical layer information of a specified DSL port from the Dynamix DC-48A/SA. The procedures are as follows:

Double Click on “**Physical Layer Info**” from the Function List Window. The Physical Layer Info window appears.

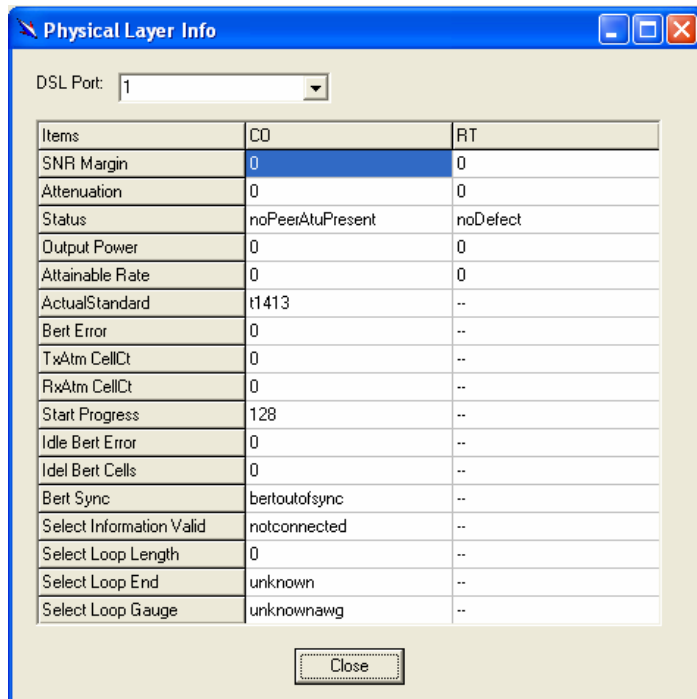

Select the port ID from the DSL Port drop-down list to view a specified DSL’s physical Layer Info.

Click on  to close the window.

Table 4-10 Physical Layer Info Field Definitions


Field	Definition
SNR margin	Noise margin value. (dB)
Attenuation	Difference in the total power transmitted and the total power received by the peer atu. (db)
Status	Current status of the ATU line. The possible values displayed are as follows: No defect: there are no defect on the line los: atu-r failure due to not receiving signal lpr: atu-r failure due to loss of signal
output power	Total output power transmitted by atu. (dBm)
attainable rate	The maximum currently attainable data rate by the atu. (kbps)
ActualStandard	Actual standard used for connection, based on the outcome of the negotiation with the Remote Unit.
Bert Error	Provides the number of bit errors detected during BERT.
TxAtm CellCt	Provides Tx ATM cell counter.

RxAtm CellCt	Provides Rx ATM cell counter.
Start Progress	Defines the current detailed start up state of Xcvr. 0x0 – startup not in progress; 0x0 – 0x0FFF Handshake/Training/ Profile Management/ Fast Retrain in progress; 0x8000 – 0x8FFF DSP firmware Down- Load in progress; 0xF000 – 0xFFFF illegal Parameter
Idle Bert Error	Number of bit errors.
Idle Bert Cells	Number of idle cells.
Bert Sync	Indicates whether the Signal is in Sync or not.
Select Information Valid	Indicates the information validity for the SELT operation conducted on the Xcvr.
Select Loop Length	Indicates the LOOP Length in Feet once when the SELT information is valid on the Xcvr.
Select Loop End	Indicates whether the loop is short or open once when the SELT information is valid on the Xcvr.
Select Loop Gauge	Indicates the LOOP wire gauge information once, when the SELT information is valid on the Xcvr.

### 4.8.2 Channel Layer Info

Allow users to view the Channel layer information of a specified DSL port from the Dynamix DC-48A/SA. The procedures are as follows:

Double Click on “**Channel Layer Info**” from the Function List Window. The Channel Layer Info window appears.

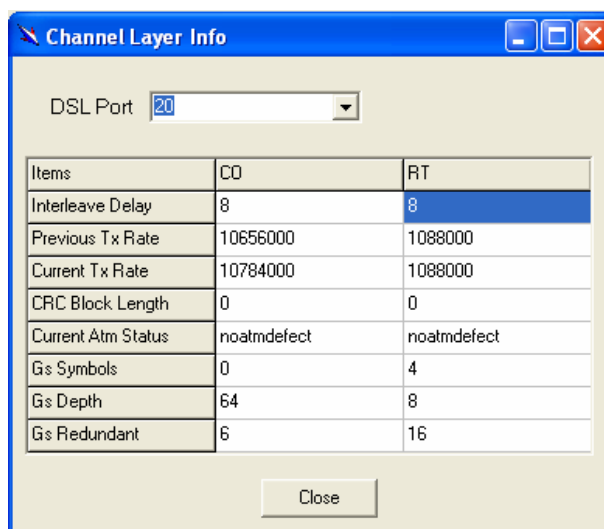

Select the port ID from the DSL Port drop-down list to view a specified DSL's channel Layer Info.

Click on  to close the window.

Table 4-11 Channel Layer Information Field Definitions


Field	Definition
-------	------------

Interleave delay	Interleave delay for this channel. (milli-seconds)
Previous TX rate	Previous actual transmit rate on this channel if ADSL loop retain. (kbps)
Current TX rate	Actual transmit rate on this channel. (kbps)
CRC block length	The length of the channel data-block on which the CRC operates.
Current Atm Status	Indicates the current ATM Status.
Rs Symbols	Indicates the number of DMT symbols per Reed-Solomon code word (S), in the downstream direction.
Rs Depth	Indicates interleaving depth (D), in the downstream direction.
Rs Redundancy	Indicates the number of redundant bytes (R), per Reed-Solomon code in the downstream direction

### 4.8.3 Physical Layer PM

Allow users to view the Physical layer performance of a specified DSL port from the Dynamix DC-48A/SA. The procedures are as follows:

Double Click on “**Physical Layer PM**” from the Function List Window. The Physical Layer PM window appears.

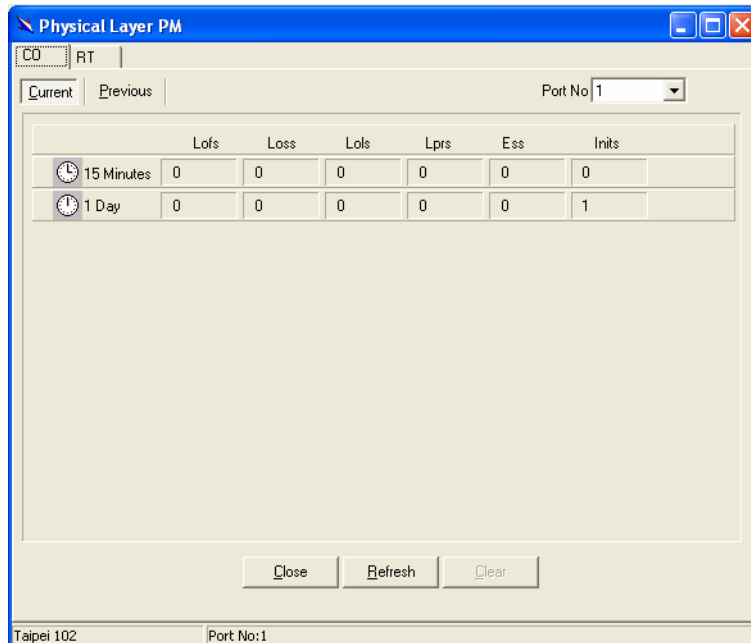


Press Co or RT tab to view the Physical Layer Performance data at down stream or up stream.

Click on **Current** to activated Current page in which users can select Port No. to view 15 minutes and 1 Day ES, SES and UAS record. If to retrieve the latest data, press **Refresh**.



Click on **Previous** to activate previous 15 minutes and 1 day performance data page in which Period and Port No. are selectable. **Note:** refresh button is disable in this page.

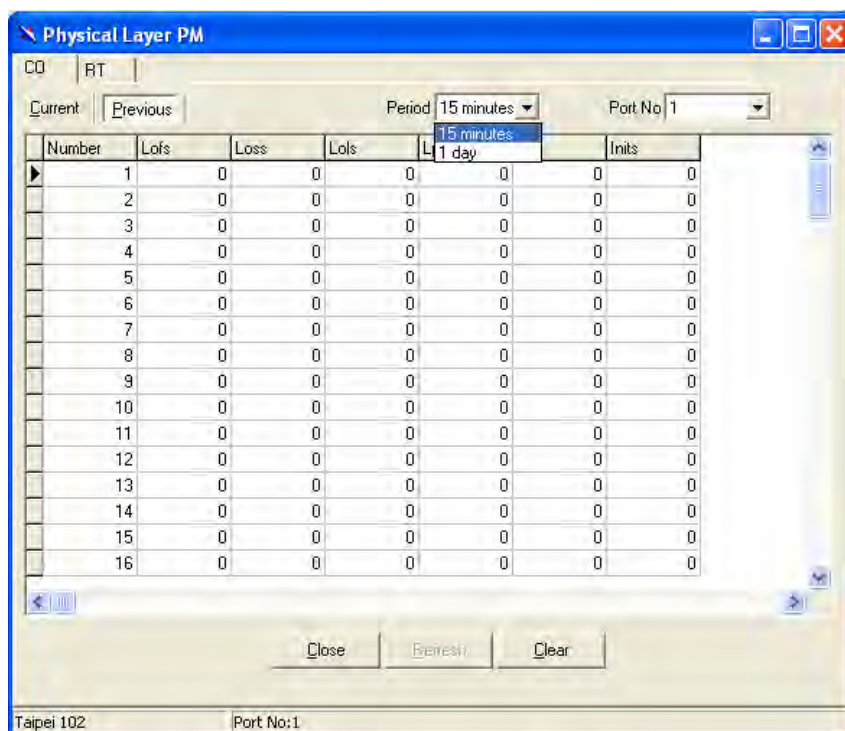

Click on  to clear the physical layer data.

Click on  to close the window.

Table 4-12 Current Phy-Layer PM Information Field Definitions


Field	Definition
CO	down stream
RT	up stream
Lofs	Number of lof failures since reset.
Loss	Number of los failures since reset.
Lols	Number of lol failures since reset.
Lprs	Number of lpr failures since reset.
Ess	Number of error seconds since reset.
Inits	Number of initialization attempts since reset. It includes both successful and failed attempts.
Current 15-min lofs	Number of seconds in the current 15-minute interval during which lof was detected.
Current 15-min loss	Number of seconds in the current 15-minute interval during which los was detected.
Current 15-min lols	Number of seconds in the current 15-minute interval during which lol was detected.
Current 15-min lprs	Number of seconds in the current 15-minute interval during which lpr was detected.
Current 15-min ess	Number of error seconds in the current

Field	Definition
	15-minute interval.
Current 15-min inits	Number of inits in the current 15-minute interval. It includes both successful and failed attempts.
Current 1-day time elapsed	Number of seconds that have elapsed since the beginning of the current 1-day interval.
Current 1-day lofs	Number of seconds in the current 1 day interval during which lof was detected.
Current 1-day loss	Number of seconds in the current 1 day interval during which los was detected.
Current 1-day lols	Number of seconds in the current 1 day interval during which lol was detected.
Current 1-day lprs	Number of seconds in the current 1 day interval during which lpr was detected.
Current 1-day ess	Number of error seconds in the current 1 day interval.

#### 4.8.4 Channel Layer PM

Allow users to view the Channellayer performance of a specified DSL port from the Dynamix DC-48A/SA. The procedures are as follows:

Double Click on “**Channel Layer PM**” from the Function List Window. The Channel Layer PM window appears.

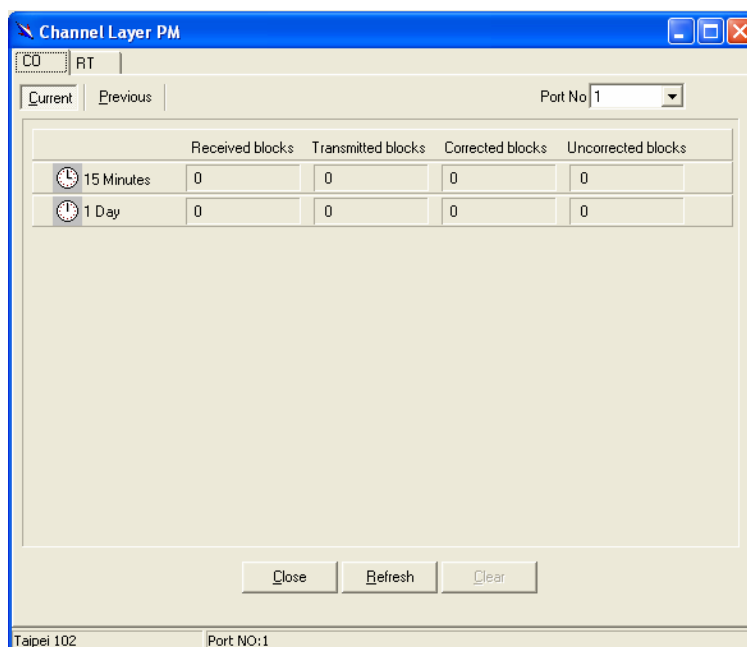


Press Co or RT tab to view the Channel Layer Performance data at down stream or up stream.

Click on **Current** to activated Current page in which users can select Port

No. to view 15 minutes and 1 Day ES, SES and UAS record. If to retrieve the latest data, press .

Click on **Previous** to activate previous 15 minutes and 1 day performance data page in which Period and Port No. are selectable. **Note:** refresh button is disable in this page.

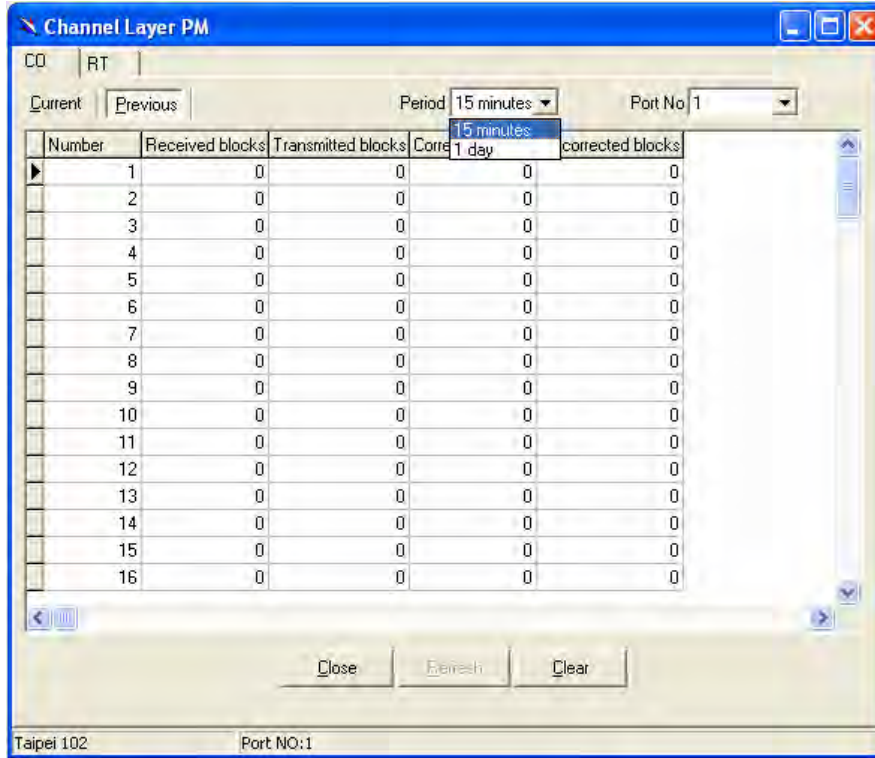

Click on  to clear the channel layer data.

Click on  to close the window.

Table 4-13 Current Channel-Layer PM Information Field Definitions

Field	Definition
CO	down stream
RT	up stream
Received blocks	The total number of blocks of data received since the last agent reset.
Transmitted blocks	The total number of blocks of data transmitted since the last agent reset.
Corrected blocks	Number of corrected blocks of data transmitted since the last agent reset.
Uncorrected blocks	Number of corrected blocks of data transmitted since the last agent reset.
Current 15-min received blocks	Number of blocks of data received during the current 15-minute interval.
Current 15-min Transmitted blocks	Number of blocks of data transmitted during the current 15-minute interval.
Current 15-min corrected blocks	Number of corrected blocks of data transmitted during the current 15-minute interval.

Field	Definition
Current 15-min Uncorrected blocks	Number of uncorrected blocks of data transmitted during the current 15-minute interval.
current 1-day time elapsed	Number of seconds that have elapsed since the start of the current day interval.
Current 1-day received blocks	Number of blocks of data received during the current day interval.
Current 1-day transmitted blocks	Number of blocks of data transmitted during the current day interval.
Current 1-day corrected blocks	Number of corrected blocks of data transmitted during the current day interval.
Current 1-day uncorrected blocks	Number of uncorrected blocks of data transmitted during the current day interval.

# 5

## System Administration with CLI

Command Line Interface (CLI) is the primary user interface to Administrate the system. CLI can be accessed either from the CID port or telnet session. All CLI commands are simple strings designed for the Administrator to manage your Dynamix DC-48A/SA easily. This chapter contains the whole CLI commands. If to understand primary CLI commands, refer to chapter 6 in which frequently used CLI commands are summarized.

### 5.1 Notation Conventions

- Keywords in a command that you must enter exactly as shown are presented in bold italics.

User specified values in a command are presented in regular typeface, i.e., not bold or italic.

Parameter values enclosed in < > must be specified.

Parameters enclosed in [ ] are optional. All modify parameters are shown as optional in CLI commands even if there exists only a single parameter.

Parameter values are separated by a vertical bar | only when one of the specified values can be used.

Parameter values are enclosed in { } when you must use one of the values specified.

Parameters are enclosed in [ ]+ when you can specify the parameter one or more times, in the command line.

### 5.2 Command Structure

There are three-level command structure used in the system. All commands have the following general format:

```
<Action><Group><Sub group><Sub sub group> <tag1 value1>Ö<tagN valueN>
```

#### Action

This is the first keyword of a CLI command. It indicates the type of operation to be performed.

- <Group>**. "create" is an example of this keyword. This is the second keyword of a CLI command. It indicates the group of a CLI command.
- <Sub group>**. "bridge" is an example of this keyword. This is the third keyword of a CLI command. It indicates the sub group of a CLI command.
- <Sub sub group>**. "port" is an example of this keyword. This is the fourth keyword of a CLI command. It indicates the sub group of a CLI command.
- <tag1 value1>  
<tagN valueN>**. "intf" is an example of this keyword. These are <tag value> pairs and can vary from 0 to N. They indicate the parameter values passed to a CLI command.
- "ifname aal5- 0", "portid 20", are examples of tag value pairs.

### 5.3 Glossary of Terms and Acronyms

Abbreviation	Description
AAL5	ATM Adaptation Layer 5
ACL	Access Control list
ADSL	Asymmetric Digital Subscriber Line
Attribute	An element of an MO
ATM	Asynchronous Transmission Mode
CLI	Command Line Interface
CP	Control Plane
DHCP	Dynamic Host Configuration Protocol
DP	Data Plane
DSL	Digital Subscriber Line
EOA	Ethernet over ATM
GARP	Generic Attribute Registration Protocol
GMRP	GARP Multicast Registration Protocol
GVRP	GARP VLAN Regenration Protocol
GARP	VLAN Regenration Protocol
IGMP	InternetGroup Management Protocol
Index identifies	An element of a tabular MO that uniquely identifies an entry
IP	Internet protocol
IRL	Input Rate Limiting
IVL	Individual VLAN Learning
IVM	Individual VLAN for Multicast
LACP	Link Aggregation Control Protocol
LAN	Local Area Network
ME	Management Entity The entity, modified, controlled and monitored through MOs.
MO ID	MO Identifier A unique number that identifies an MO. Interpretation of the information passed to GenAg for an MO depends upon this identifier

MO	Managed Object Logical unit of manageable information. It is similar to a MIB. An ME is visible to the outside world in the form of one or more MOs that constitute it.
Operations	GAG supports five operations - Create, Delete, Modify, Get, Get-Next
ORL	Output Rate Limiting
OAM	Operations Administration and Management
RMON	Remote Monitoring
STP	Spanning Tree Protocol
SNTP	Simple Network Time Protocol
SVL	Shared VLAN Learning
SVM	Shared VLAN for Multicast
Specific Agent	Entities that use GenAg interfaces to manage the system
TEA	Target Engine Agent
VC	Virtual Channel
VLAN	Virtual LAN

## 5.4 CLI Command Brief Description

Table 4-1 CLI Command - Action List

<b>&lt;action&gt;</b>	<b>Description</b>
get	Used to view information of the selected identifier and parameters.
reset	Used to reset a port of system.
modify	Used to set or modify existing configuration of objects corresponding to the identifier and parameters.
Create	Used to create configuration of objects corresponding to the identifier and parameters.
delete	Used to delete configuration of objects corresponding to the identifier and parameters. If the delete action is confirmed, the configuration of objects will no longer exist.
help	Used to view the detailed usage of CLI commands.
reset	Used to reset a port of system.
reboot	Used to restart the system.
save	Used to save the configuration to Flash RAM.
logout	Used to terminate the CLI.
commit	Used to commit the active configuration to the flash.
passwd	Used to change the password associated with a user login.
apply	Used to apply a configuration file stored on the system
download	Used to download a binary, configuration or user specific file from the remote host.
list	Used to list the Configuration or binary files stored on the unit
remove	Used to remove a configuration or binary file stored on the unit
upgrade	Used to upgrade a configuration or binary file stored on the system.
alias	Used to create an alias for any CLI command.
unalias	Used to delete an alias.
prompt	Used to set the new CLI prompt.
traceroute	Used to trace the route to the specified destination.

<b>&lt;action&gt;</b>	<b>Description</b>
verbose	Using this command, a user can view the status of entries before and after the execution of a command (create, delete, modify, get).

### 5.4.1 Calling Commands

To recall commands from the history buffer, perform one of these tasks.

Command	Task
The up arrow key	Recall commands in the history buffer, beginning with the most recent command. Repeat the key sequence to recall successively older commands.
The down arrow key	Return to more recent commands in the history buffer after recalling commands with “the up arrow key”. Repeat the key sequence to recall successively more recent commands.



## 5.5 Commands Group Description

### 5.5.1 Interface Commands

#### ► get interface stats

**Description:** Use this command to view statistics for one interface or all the interfaces.

**Command Syntax:** *get interface stats [ifname interface-name ]*

#### Parameters

Name	Description
<i>ifname interface-name</i>	Interface name, for which configuration is to be modified or viewed. <b>Type:</b> Get -Optional Modify - Mandatory <b>Valid values :</b> <i>eth-*, atm-*, aal5-*, eoa-*, dsl-*, dsif-*, dsli-*, aggr-*, ehdlc-*</i> .
<i>trap enable disable</i>	Indicates whether <i>linkUp/linkDown</i> traps should be generated for this interface. <b>Type:</b> Modify – Optional <b>Valid values :</b> <i>enable Or disable</i>

#### Example Output

**\$ get interface stats ifname eth-0**  
Verbose Mode On

```

Entry Created

Interface      : eth-0      Description    : eth0
Type           : Ethernet   Mtu           : 1500
Bandwidth     : 10000    Phy Addr      : 00:10:4B:22:84:AF
Last Change(sec) : 0        Unknown Prot Pkts : 0
Admin Status   : Up        Operational Status : Down
In Octets     : 0        Out Octets     : 42
In Discards   : 0        Out Discards   : 0
In Errors     : 0        Out Errors     : 0
In Ucast Pkts : 0        Out Ucast Pkts : 1
HC In Octets  : 100       HC OutOctets   : 100
In Mcast Pkts : 200       Out Mcast Pkts : 100
In Bcast Pkts : 100       Out Bcast Pkts : 100
LinkUpOnTrapEnable : Enable   Promiscuous Mode : True
Connector Present : True     CounterDiscontTime : 100
HC In Octets  : 100
HC OutOctets  : 100
    
```

#### Output Fields

Field	Description
<i>Interface</i>	This uniquely identifies the interface, for which information is being displayed. It may be: <i>eth-0, eth-1, atm-*, aal5-*, eoa-*, dsl-*, dsif-*, dsli-*, aggr-*, ehdlc-*</i> .
<i>Description</i>	This is general information about the interface
<i>Type</i>	The type of interface, distinguished according the physical/link/network protocol, immediately below the IP layer. It may be: <i>ATM, ETHERNET, AAL5, EOA, DSL, FAST, INTERLEAVED, AGGR. EHDLC.</i>
<i>Mtu</i>	The size (in bytes) of the largest packet, which can be sent/received on this interface in octets.
<i>Bandwidth</i>	The current bandwidth of the interface, in bps.
<i>Phy Addr</i>	Interface's address, at its protocol sublayer.
<i>Admin Status</i>	This is the desired state of the interface. It may be: <i>Up, Down.</i>

## Dynamix DC-48A/SA

<b>Operational Status</b>	This is the current operational state of the interface. It may be: <i>Up, Down</i> .
<b>Last Change</b>	Value of System UpTime (in seconds) at the time the interface entered its current operational state.
<b>Unknown Prot Pkts</b>	The number of packets received via the interface, which were discarded because of an unknown or unsupported protocol.
<b>In Octets</b>	The total number of octets received on the interface, including the framing characters. For Ethernet interfaces, this will have the lower 32 bits of HC in octets. Valid for <i>atm-*, eoa-*, aal5-*, eth-0, eth-1, dsl-*, dsf*, dsli-*, aggr-*</i> .
<b>Out Octets</b>	The total number of octets transmitted out of the interface, including framing characters. For Ethernet interfaces, this will have the lower 32 bits of HC Out octets. Valid for <i>atm-*, eoa-*, aal5-*, eth-0, eth-1, dsl-*, dsf*, dsli-*, aggr-*</i> .
<b>In Discards</b>	The number of inbound packets, which were discarded, though no errors were detected.
<b>Out Discards</b>	The number of outbound packets chosen to be discarded even though there were no errors.
<b>In Errors</b>	The number of inbound packets, which were not delivered to upper layers because of errors.
<b>Out Errors</b>	The number of outbound packets chosen to be discarded because there were errors.
<b>In Ucast Pkts</b>	The number of unicast packets delivered to a higher layer protocol.
<b>Out Ucast Pkts</b>	The total number of packets requested to be sent to unicast addresses, by upper layer protocols.
<b>HC In Octets</b>	The total number of octets received on the interface, including framing characters. This object is a 64-bit version of <b>ifInOctets</b> . Valid for <i>eth-*</i> .
<b>HC OutOctets</b>	The total number of octets transmitted out of the interface, including framing characters. This object is a 64-bit version of <b>ifOutOctets</b> . Valid for <i>eth-*</i> .
<b>In Mcast Pkts</b>	The number of multicast packets delivered to a higher layer protocol.
<b>Out Mcast Pkts</b>	The total number of packets requested to be sent to multicast addresses, by upper layer protocols.
<b>In Bcast Pkts</b>	The number of broadcast packets delivered to a higher layer protocol.
<b>Out Bcast Pkts</b>	The total number of packets requested to be sent to broadcast addresses, by upper layer protocols.
<b>LinkUpDnTrapEnable</b>	Indicates whether <i>linkUp/ linkDown</i> traps should be generated for this interface.
<b>Promiscuous Mode</b>	This object has a value of false if this interface only accepts packets/frames that are addressed to this station. This object has a value of true when the station accepts all packets/frames transmitted on the media. The value true is legal only for Ethernet interfaces. The value of PromiscuousMode does not affect the reception of broadcast and multicast packets/frames by the interface.
<b>Connector Present</b>	This indicates whether the interface sublayer has a physical connector or not. This is true only for physical Ethernet interfaces.
<b>CounterDiscontTime</b>	The value of <b>sysUpTime</b> on the most recent occasion, at which any one or more of this interface's counters suffered a discontinuity.

▶ **reset interface stats**

**Description:** Use this command to reset the statistics of Ethernet, EoA, ATM, AAL5, DSL, DSLF, DSLI, Aggr and EHDLC interfaces.  
**Command Syntax:** *reset interface stats ifname ifname*

▶ **get interface config**

**Description:** Use this command to view Interface Configuration.  
**Command Syntax:** *get interface config ifname ifname*

▶ **modify interface config**

**Description:** Use this command to modify interface configuration.  
**Command Syntax:** *modify interface config ifname ifname [trap enable|disable]*

**Parameters**

Name	Description
<i>ifname interface-name</i>	Interface name, for which configuration is to be modified or viewed. <b>Type:</b> Get -Optional Modify -Mandatory <b>Valid values :</b> <i>eth-*, atm-*, aal5-*, eoa-*, dsl-*, dslf-*, dsl-*, aggr-*, ehdlc-*</i>
<i>trap enable disable</i>	Indicates whether <i>linkUp/linkDown</i> traps should be generated for this interface. <b>Type:</b> Modify – Optional <b>Valid values :</b> enable Or disable

**Example**     \$ get interface config

**Output**        Verbose Mode On

```
IfName    LinkUp/DnTrap
-----
aal5-0    Enable
```

**Output Fields**

FIELD	Description
<i>IfName</i>	Interface name, for which configuration is to be viewed.
<i>LinkUp/DnTrap</i>	Indicates whether <i>linkUp/linkDown</i> traps shall be generated for this interface.

**Caution**        None

**References •**

- ATM Interface commands
- Ethernet commands
- EoA commands

## 5.5.2 ATM Interface Commands

### ▶ create atm port

**Description:** Use this command to create an ATM Port.

**Command Syntax:** *create atm port ifname interface-name lowif dsl-port interface-name [enable | disable] [Maxvpibits maxvpibits][Maxvcibits maxvcibits] [Orl Orl]*

### ▶ delete atm port

**Description:** This command is used to delete an ATM port.

**Command Syntax:** *delete atm port ifname interface-name*

### ▶ get atm port

**Description:** Use this command to get information about a specific or all ATM ports.

**Command Syntax:** *get atm port [ifname interface-name]*

### ▶ modify atm port

**Description:** Use this command to enable or disable the administrative status of ATM port.

**Command Syntax:** *modify atm port ifname interface-name [enable | disable] [maxvcs maxvcs] [Maxvpibits maxvpibits] [Maxvcibitsmaxvcibits][Orl Orl]*

Parametersame	Description
<i>ifname interface-name</i>	This specifies the name of the ATM port <b>Type:</b> Create - Mandatory Delete -Mandatory Get - Optional Modify -Mandatory <b>Valid values :</b> <i>atm-0 - *</i>
<i>maxvc max-num-vccs</i>	This specifies the maximum number of VCCs (PVCCs), supported at this ATM interface. <b>Type :</b> Optional <b>Valid values :</b> 1 -GS_CFG_MAX_ATM_VC_PER_PORT <b>Default Value :</b> GS_CFG_DEF_ATM_VC_PER_PORT
<i>Maxvpibits max-vpi-bits</i>	Maximum number of VPI bits configured for use at this ATM interface. <b>Type :</b> Optional <b>Valid values :</b> 1 to 8. <b>Default Value :</b>
<i>maxvcibits max-vci-bits</i>	Maximum number of VCI bits configured for use at this ATM interface. <b>Type :</b> Optional <b>Valid values :</b> 1 to 16. <b>Default Value:</b> 16.
<i>enable disable</i>	Administrative status of the ATM port <b>Type :</b> Optional <b>Valid values :</b> <i>enable</i> or <i>disable</i> <b>Default Value:</b> <i>enable</i>
<i>lowif dsl-port-interface-name</i>	This identifies the lower DSL interface, on which this ATM interface is configured. <b>Type :</b> Mandatory.

## Dynamix DC-48A/SA

	<b>Valid values :</b> <i>dsl-*</i>
<b>Orl orl</b>	This parameter specifies the output rate limiting value in Kbps to be applied on this interface. <b>Type:</b> create – Optional <b>Valid values :</b> <i>GS_CFG_MIN_ORL_ATM_RATE_KBPS – GS_CFG_MAX_ORL_ATM_RATE_KBPS</i>

**Example:**     **\$ create atm port ifname atm-0 lowif dsl-0 maxvc 4 utput**

**Output**        Verbose Mode On

```

IfName : atm-0                               LowIfName :
dsl-0
MaxVccs : 4                                   MaxConfVccs : 0
MaxVpiBits : 9                               MaxVciBits : 10
OAMSrc : 0xfffffffffffffffffffffffffffffff
ORL (kbps) : 640                             Class0thrshld :
2
Class2thrshld : 2                             RowStatus :
Active
UnknownVPI : 2ProfileName : gold            Class1thrshld :
3
                                           UnknownVCI : 3

Class3thrshld : 3

Oper Status : Up                             Admin Status :
Up
    
```

### Output Fields

FIELD	Description
<b>IfName</b>	This specifies the name of the ATM port. It can be: atm-0, atm-1, etc.
<b>LowIfName</b>	This specifies the name of the lower interface. It can be: dsl-0, dsl-1 etc.,.
<b>Max Vccs</b>	The maximum number of VCCs (PVCCs) supported at this ATM interface.
<b>MaxConfVccs</b>	This specifies the current number of VCCs configured on this port. It may be : 0 - Value defined in MaxVccs
<b>MaxVpiBits</b>	The maximum number of active VPI bits configured for use at the ATM interface.
<b>MaxVciBits</b>	This specifies the maximum number of active VCI bits configured for use at this ATM interface.
<b>Oper Status</b>	The actual/current state of the interface. It can be either Up or Down
<b>Admin Status</b>	The desired state of the interface. It may either be Up or Down
<b>Orl (kbps)</b>	This parameter specifies the output rate limiting value in Kbps to be applied on this interface.
<b>RowStatus</b>	This defines the row-status of the interface entry.
<b>UnknownVPI</b>	This parameter specifies the last seen unknown VPI on this ATM interface.
<b>UnknownVCI</b>	This parameter specifies the last seen unknown VCI on this ATM interface.

**Caution**        The specified lower interface should already be created. If the parameter maxvcperport in nbsize command is modified, please ensure that MaxConfVccs in atm port command is less than or equal to maxvcperport.

- References**
- ATM VC commands
  - ATM statistics commands
  - DSL commands.

### 5.5.3 ATM VC Commands

#### ▶ create atm vc intf

**Description:** Use this command to create a new ATM Virtual Circuit (VC).

**Command Syntax:** *create atm vc intf ifname interface-name vpi vpi vci vci lowif atm-port-interface-name [enable | disable] [aal5] [a5txsize aal5-cpcs-tx-sdu-size] [a5rxsize aal5-cpcs-rx-sdu-size] [vcmux | llcmux] [pvc] [channel fast|interleaved] [ mgmtmode data|mgmt|DataAndMgmt|raw]*

#### ▶ delete atm vc intf

**Description:** Use this command to delete an existing ATM Virtual Circuit (VC).

**Command Syntax:** *delete atm vc intf ifname interface-name*

#### ▶ get atm vc intf

**Description:** Use this command to display information corresponding to a single VC, or for all VCs.

**Command Syntax:** *get atm vc intf [ifname interface-name]*

#### ▶ modify atm vc intf

**Description:** Use this command to modify ATM VC parameters.

**Command Syntax:** *modify atm vc intf ifname interface-name [vpi vpi] [vci vci] {enable | disable} [a5txsize aal5-cpcs-tx-sdu-size] [a5rxsize aal5-cpcs-rx-sdu-size] [ mgmtmode data | mgmt|DataAndMgmt | raw]*

#### Parameters

Name	Description
<i>ifname interface-name</i>	This specifies name of VC Interface. <b>Type:</b> Create – Mandatory Delete – Mandatory Get – Optional Modify – Mandatory <b>Valid values :</b> aal5-0 - *
<i>lowif atm-port-interface-name</i>	Interface Index of the ATM port, on which this VC is getting configured. <b>Type :</b> Mandatory <b>Valid values :</b> atm-0 - *
<i>vpi vpi</i>	Virtual Path Identifier. In order to modify, the VPI value shall be the new VPI value and the admin status of VC interface shall be disabled. Also, the VPI and VCI value cannot be modified along with admin status in one command. <b>Type :</b> Create – Mandatory Modify – Optional <b>Valid values :</b> 0-2^8

<p><b>vci vci</b></p>	<p>Virtual Circuit Identifier. In order to modify, the VCI value shall be the new VCI value and the admin status of VC interface shall be disabled. Also, the VPI and VCI value cannot be modified along with admin status in one command.  <b>Type</b> : Create – Mandatory Modify – Optional  <b>Valid values</b> : 1-2<sup>16</sup></p>
<p><b>mgmtmode Data   Mgmt   DataAndMgmt   Raw</b></p>	<p>It denotes the Management Mode of the ATM VC. If it is Data, then only data transmission can take place. If it is Mgmt, then management of remote CPE device can happen on that ATM VC and packets on that ATM VC shall start coming to Control Plane. In DataAndMgmt mode, data transmission as well as remote CPE management can happen on the same ATM VC interface. In DataAndMgmt mode, the only acceptable value for atmVCCAAL5EncapType is llc. In Mgmt mode, EoA interface cannot be created on the ATM VC and both Ethernet as well as non-ethernet packets on that ATM VC shall be received at the Control Plane. In DataAndMgmt mode, if EoA is created, then only non-ethernet packets on that ATM VC shall be received at the Control Plane. However, if EoA is not created then all the packets on that ATM VC shall be received at the Control Plane. However, to configure ATM VC in DataAndMgmt mode, a good practice is to create ATM VC in disable mode till EoA is created on it, to prevent flooding at Control Plane. In order to run STP, the mode has to be DataAndMgmt. If the mode is RawATM(4), ATM cells are given to Control Plane. In this mode, EoA interface cannot be created on the ATM VC. If EoA interface is already created on the ATM VC, its mode cannot be changed to either Mgmt(2) or RawATM(4).  <b>Type</b> : Create Optional  <b>Default value</b>: Data</p>
<p><b>enable disable</b></p>	<p>This specifies the Admin Status of the VC.  <b>Type</b> : Optional  <b>Default Value</b>: enable</p>
<p><b>aal5</b></p>	<p>This specifies the AAL type in use for this VC. The only type of AAL supported in Columbia Packet is AAL5.  <b>Type</b>: The only value to be supported is aal5.  <b>Default value</b> : aal5</p>
<p><b>a5txsize aal5-cpcs-tx-sdu-size</b></p>	<p>This specifies the maximum transmit CPCS SDU size to be used.  <b>Type</b> : Optional  <b>Valid values</b> :  1-GS_CFG_ATM_VC_MAX_RX_PDU_SIZE  <b>Default Value</b>:  GS_CFG_ATM_VC_DEF_TX_PDU_SIZE</p>
<p><b>a5rxsize aal5-cpcs-rx-sdu-size</b></p>	<p>This specifies the maximum receive CPCS SDU size to be used  <b>Type</b> : Optional  <b>Valid values</b> :  1-GS_CFG_ATM_VC_MAX_TX_PDU_SIZE  <b>Default Value</b>:  GS_CFG_ATM_VC_DEF_TX_PDU_SIZE</p>
<p><b>vcmux llcmux</b></p>	<p>This specifies the data multiplexing method to be used over the AAL5 SSCS layer.  <b>Type</b> : Optional  <b>Default Value</b>: llcmux</p>
<p><b>Pvc</b></p>	<p>This specifies the type of VC. The only value supported is PVC.  <b>Type</b> : Optional</p>

## Dynamix DC-48A/SA

	<b>Default Value:</b> <i>pvc</i>
<b>channel fast interleaved</b>	This extension specifies the type of channel, on which the ATM VC's cells have to be transmitted/received. 'fast' means fast channel and 'inter' means interleaved channel. <b>Type :</b> Optional <b>Default Value:</b> <i>Interleaved</i>

**Example**      **\$ create atm vc intf ifname aal5-0 lowif atm-0 vpi 10 vci 10  
enable aal5 pvc a5txsize 1536 a5rxsize 1536 llcmux mgmtmode  
data**

**Output**      Verbose Mode On

```

Entry Created                               Low IfName : atm-0
VC IfName : aal5-0                          VCI : 10
VPI : 10                                     Oper Status : Up
Admin Status : Up                            Aal5 Rx Size : 1536
Aal5 Tx Size : 1536                          AAL5 Encap : LLC Mux
AAL Type : AAL5                              Last Change :
channel : Interleaved                        18/06/2002::09:10:23
MgmtMode : Data                              Row Status : active
VC Type : PVC                                VC Topology : Point to Point
    
```

### Output Fields

FIELD	Description
<b>VC IfName</b>	VC Interface Name. It can be : <i>aal5-0 - *</i>
<b>Low IfName</b>	Interface Index of the ATM port, on which this VC is getting configured.
<b>VPI</b>	It is the Virtual Path Identifier.
<b>VCI</b>	It is the Virtual Circuit Identifier.
<b>Oper Status</b>	The actual/current state of the interface. It can be either <i>Up</i> or <i>Down</i>
<b>Admin Status</b>	The desired state of the interface. It may be either <i>Up/Down</i> .
<b>Aal5 Tx Size</b>	This specifies the transmit CPCS SDU size to be used.
<b>Aal5 Rx Size</b>	This specifies the receive CPCS SDU size to be used.
<b>Aal Type</b>	This specifies the AAL type in use for this VC. The only type of AAL supported in Columbia Packet is AAL5.
<b>Aal5 Encap</b>	This specifies the data multiplexing method to be used on the VC.
<b>channel</b>	This extension specifies the type of channel, on which the ATM VC's cells have to be transmitted/received. 'fast (1)' means fast channel and 'inter(2)' means interleaved channel.
<b>Last Change</b>	The value of sysUpTime at the time this VC entered its current operational state.
<b>MgmtMode</b>	It denotes the Management Mode of the ATM VC. If it is Data, then only data transmission can take place. If it is Mgmt, then management of remote CPE device can happen on that ATM VC and packets on that ATM VC shall start coming to Control Plane. In DataAndMgmt mode, data transmission as well as remote CPE management can happen on the same ATM VC interface. In DataAndMgmt mode, the only acceptable value for



	atmVCCAAL5EncapType is llc. In Mgmt mode, EoA interface cannot be created on the ATM VC and both Ethernet as well as non-ethernet packets on that ATM VC shall be received at the Control Plane. In DataAndMgmt mode, if EoA is created, then only non-ethernet packets on that ATM VC shall be received at the Control Plane. However, if EoA is not created then all the packets on that ATM VC shall be received at the Control Plane. However, to configure ATM VC in DataAndMgmt mode, a good practice is to create ATM VC in disable mode till EoA is created on it, to prevent flooding at Control Plane. In order to run STP, the mode has to be DataAndMgmt. If the mode is RawATM(4), ATM cells are given to Control Plane. In this mode, EoA interface can not be created on the ATM VC. If EoA interface is already created on the ATM VC, its mode cannot be changed to either Mgmt(2) or RawATM(4).
<b>RowStatus</b>	This defines the row-status of the interface entry
<b>VC Type</b>	This field specifies whether VC type is PVC or SVC.
<b>VC Topology</b>	This field specifies the VC connection topology type.

**Caution** The specified lower interface should exist. Please refer to the create atm port command.

- References**
- ATM interface commands
  - ATM statistics commands
  - ATM OAM commands
  - ATM VC statistics commands.

### 5.5.4 AAL5 VC Statistics Commands

#### ► get atm aal5 stats

**Description:** Use this command to get AAL5 VC statistics.

**Command Syntax:** *get atm aal5 stats [ifname interface-name]*

**Parameters**

Name	Description
<i>ifname</i> <i>interface-name</i>	This parameter specifies the interface for which information is desired <b>Type:</b> Get -Optional <b>Valid values :</b> <i>aal5-0 - *</i>

**Example** \$ *get atm aal5 stats ifname aal5-0*

**Output**

```

Low IfName : atm-0 VC           IfName : aal5-0
VPI : 0 VCI : 1
Tx Frames count : 100          Rx Frames count : 85
Tx Bytes count : 1535          Rx Bytes count : 1200
CRC Errors count : 0           Oversized SDU : 0
    
```

**Output Fields**

FIELD	Description
<i>VC IfName</i>	The name of the <b>aal5</b> ( <i>aal5-0</i> etc) interface, for

	which statistics needs to be retrieved.
<b>Low IfName</b>	This specifies the ATM port name. It can be : <i>atm-0</i>
<b>VPI</b>	This is the Virtual Port Identifier.
<b>VCI</b>	This is the Virtual Circuit Identifier.
<b>Tx Frames count</b>	The number of AAL5 CPCS PDUs transmitted on this AAL5 VCC.
<b>Rx Frames count</b>	The number of AAL5 CPCS PDUs received on this AAL5 VCC.
<b>Tx Bytes count</b>	The number of octets contained in AAL5 CPCS PDUs received on this AAL5 VCC.
<b>Rx Bytes count</b>	The number of octets contained in AAL5 CPCS PDUs received on this AAL5 VCC.
<b>CRC Errors count</b>	This specifies the number of CRC errors encountered.
<b>Oversized SDU</b>	This specifies the number of oversized SDUs received.

**Caution** None.

- References**
- atm vc related commands
  - atm port and statistics related commands
  - atm vc statistics commands.

## 5.5.5 ATM VC Statistics Commands

### ► get atm vc stats

**Description:** Use this command to get statistical information about a specific or all ATM virtual circuits.

**Command Syntax:** *get atm vc stats [ifname interface-name]*

#### Parameters

Name	Description
<i>ifname interface-name</i>	This specifies the Virtual Circuit. If this is not specified, then information for all VCs is displayed. <b>Type:</b> Get -Optional <b>Valid values :</b> <i>aal5-0 - *</i>

**Example** \$ *get atm vc stats ifname aal5-0*

**Output**

```

Low IfName : atm-0 VC          IfName : aal5-0
VPI : 1                       VCI : 1
Total Tx Cells count : 250    Total Rx Cells count : 20
CLPI 0 Rx Cells count : 10    Rx Pkts Rejected count : 0
    
```

#### Output Fields

FIELD	Description
<b>LowIf</b>	This specifies the ATM port name. It can be : <i>atm-0</i>
<b>VPI</b>	It is the Virtual Port Identifier.
<b>VCI</b>	It is the Virtual Circuit Identifier.
<b>VC IfName</b>	The name of the aal5 ( <i>aal5-0</i> etc) interface, for which statistics needs to be retrieved.
<b>Total Tx Cells count</b>	The total number of valid ATM cells transmitted by

	this interface.
<b>Total Rx Cells count</b>	The total number of valid ATM cells received by this interface.
<b>CLPI 0 Rx Cells</b>	The number of valid ATM cells received by this interface with CLP=0.
<b>Rx Pkts Rejected count</b>	The total number of valid ATM cells discarded by the interface.

**Caution**            None

- References**
- Other atm vc related commands
  - oam lpbk command
  - atm port related commands

## 5.5.6 Ethernet Commands

### ▶ create ethernet intf

**Description:** Use this command to create a physical Ethernet interface.

**Command Syntax:** *create ethernet intf ifname interface-name [ip ip-address][mask net-mask][usedhcp true|false] [speed{auto|100BT|1000BT}] [type uplink|downlink][enable | disable][pkttype Mcast|Bcast|UnknownUcast|All|None] [orldecvalue][duplex half| full|auto][mgmtvlanid mgmtvlanid] [priority priority]*

### ▶ delete ethernet intf

**Description:** Use this command to delete a physical Ethernet interface.

**Command Syntax:** *delete ethernet intf ifname interface-name*

### ▶ get ethernet intf

**Description:** Use this command to get information about a particular physical Ethernet interface, or about all the interfaces.

**Command Syntax:** *get ethernet intf [ifname interface-name]*

### ▶ Modify ethernet intf

**Description:** Use this command to modify physical Ethernet interface configuration.

**Command Syntax:** *modify ethernet intf ifname interface-name [enable | disable][pkttype Mcast|Bcast|UnknownUcast|All|None] [ip ip-address][mask net-mask][usedhcp true|false][speed{auto|100BT|1000BT}] [orl decvalue] [duplex half|full|auto] [mgmtvlanid mgmtvlanid] [priority priority]*

Parameters

Name	Description
<i>ifname interface-name</i>	<p>This specifies the interface index used for the Ethernet type of interfaces.</p> <p><b>Type</b> : Create – Mandatory Delete – Mandatory Get – Optional Modify – Mandatory</p> <p><b>Valid values</b> : <i>eth-0 - *</i></p>
<i>ip ip-address</i>	<p>This specifies the network mask configured for the interface. This is given in conjunction with IP Address configured and shall be given only if IP address has been given. This shall be removed whenever IP Address is removed. Modify of network mask for an Ethernet interface shall be supported only if some IP address is configured on the interface or 'UseDhcp' was configured to "GS_TRUE" previously. If Usedhcp is GS_TRUE and modify is done for this field then Usedhcp field shall be set to GS_FALSE. Both Usedhcp and this field shall not be specified together</p> <p><b>Type</b> : Create - Optional. Modify - Optional</p> <p><b>Valid Values</b>: Any valid class A/B/C / Classless IP address.</p> <p><b>Default Value</b>: None</p>
<i>Mask net-mask</i>	<p>This specifies the network mask configured for the interface. This is given in conjunction with IP Address configured and shall be given only if IP address has been specified. This shall be removed whenever IP Address is removed. Modifying network mask for an Ethernet interface shall be supported only if some IP address is configured on the interface or 'etherUseDhcp' was configured to "GS_TRUE" previously. If Usedhcp is GS_TRUE and modify is done for this field then Usedhcp field shall be set to GS_FALSE. Both Usedhcp and this field shall not be specified together.</p> <p><b>Type</b>: This field is not allowed when a physical interface is specified and IP is 0.0.0.0. In all other cases the field is mandatory.</p> <p><b>Valid Values</b> : 255.0.0.0 - 255.255.255.255</p> <p><b>Default Value</b>: None</p>
<i>usedhcp true   false</i>	<p>This specifies whether a DHCP client is to be triggered to obtain an IP address for this interface. If this is configured as GS_FALSE and IP address is not configured, then management IP traffic will not flow through the interface. If an IP address is configured and <b>modify</b> is done for this field, then IP address and net mask fields shall be set to Zero (0.0.0.0). Both Usedhcp and IP address shall not be specified together. If <b>lftype</b> is slave then this field cannot be set to GS_TRUE.</p> <p><b>Type</b> : Optional</p> <p><b>Valid value</b> : true or false</p> <p><b>Default value</b>: false</p>
<i>speed {auto  100 BT  1000BT}+</i>	<p>This specifies the port speed for the net side interfaces. Auto specifies that the interface will determine the line speed using auto-negotiation.</p> <p><b>Type</b>: Optional.</p> <p><b>Valid Values</b>: <i>auto, 100BT, 1000BT</i>. <b>Default Value</b>: <i>auto</i>.</p>

<b>type uplink downlink</b>	This specifies the type of the Ethernet interfaces. The uplink is towards the NET side (2 at most) and downlink is towards the physical interface connected to the slave device. For uplink type, ip address not be null, if <b>usedhcp</b> is false. <b>Type:</b> Optional. <b>Valid Values:</b> <i>uplink, downlink</i> . <b>Default Value:</b> <i>uplink</i> .
<b>enable disable</b>	Administrative status of the Ethernet interface. <b>Type :</b> Modify - Mandatory <b>Valid values :</b> enable or disable <b>Default value:</b> enable
<b>Duplex auto half full</b>	This defines the duplex mode to be used. <b>Type :</b> optional <b>Valid values:</b> <i>auto, half, full</i> <b>Default value:</b> <i>auto</i>
<b>Pktype Mcast Bcast UnknownUcast   All None</b>	This defines the packet type supported by the interface. etherPktTypeSupported shall be configured for every Ethernet interface. By default, all packets will be transmitted. The interface shall not transmit any other packet type than configured. <b>Type:</b> Create - optional Modify - optional <b>Valid values :</b> Mcast, Ucast, UnknownUcast, All <b>Default Value:</b> All
<b>Orl decvalue</b>	This parameter specifies the output rate limiting val-ue to be applied on this Interface. The unit for the same is in Mbits/sec. <b>Type:</b> Create - Optional Modify – Optional <b>Valid Values:</b> GS_CFG_MIN_ORL_ETH_RATE_MBPS -GS_CFG_MAX_ORL_ETH_RATE_MBPS <b>Default Value:</b> GS_CFG_DEF_ORL_ETH_RATE_MBPS
<b>mgmtvlanid mgmtvlanid</b>	VLAN for management traffic on this interface. Nonzero value of this field is valid only if either 'ip' field is non-zero or 'usedhcp' field is true. If no Management Vlanid is specified (in the create operation) or it's value is set to zero (either in create or modify operation) then the system shall use the value of 'portvlanid' associated with the bridge port created on this interface as the Management Vlan Index. In case the management vlan (i.e. 'mgmtvlanid' or the associated 'portvlanid', if 'mgmtvlanid' is zero) does not exist on the system then IP based management on this management VLAN shall not happen on the interface till the corresponding VLAN is created with the Net side port as its member. <b>Type :</b> Create - optional Modify - optional <b>Valid values:</b> 0 -GS_CFG_MAX_VLAN_ID
<b>priority priority</b>	Priority to be set in Tagged Ethernet PDUs sent on Management VLAN over this interface. This field is valid only if either 'ip' field is non-zero or 'usedhcp' field is true. <b>Type:</b> Create - optional Modify - optional <b>Valid values:</b> 0 -GS_CFG_MAX_MGMT_PRIO

**Example1 basic configuration**  
**create ethernet intf ifname eth-0 ip 192.168.1.1**  
**mask255.255.255.0 enable**

**Example2 advanced configuration**  
**create ethernet intf ifname eth-0 ip 192.168.1.1**  
**mask255.255.255.0 speed 100bt class0thrshld 1 class1thrshld**

**2class2thrshld 1 class3thrshld 2 class4thrshld 1  
class5thrshld2 class6thrshld 1 class7thrshld 2 profilename  
sprofilemgmtvlanid 2 priority 2**

**Output**      Verbose Mode On

Entry Created

```
Interface : eth-0
Type : Uplink UseDhcp : False
IP Address : 192.168.1.1 Mask : 255.255.0.0
Pkt Type : Mcast
Orl (mbps) : 100
Configured Duplex : Auto Duplex : None
Configured Speed : Auto
Class0thrshld : 1 Class1thrshld : 2
Class2thrshld : 1 Class3thrshld : 2
Class4thrshld : 1 Class5thrshld : 2
Class6thrshld : 1 Class7thrshld : 2
Profile Name : SPPROFILE
Mgmt VLAN Index : 2
Tagged Mgmt PDU Prio: 2
Speed : -
Operational Status : Down Admin Status : Up
```

**Output Fields**

FIELD	Description
<b>If-Name</b>	The name of the interface, which has been created.
<b>Type</b>	The type of Ethernet interface - <i>uplink</i> or <i>downlink</i> .
<b>UseDhcp</b>	This specifies whether a DHCP client is to be triggered to obtain an IP address for this interface. If this is configured as GS_FALSE and etherIfIpAd dress is not configured, then management IP traffic will not flow through the interface. If an IP address is configured and modify is done for this field then tEtherIfIpAddress and tAggrIfNetMask field shall be set to Zero (0.0.0.0). Both Usedhcp and tEtherIf Ip Address shall not be specified together. If Iftype is slave then this field cannot be set to GS_TRUE.
<b>Ip Address</b>	This specifies the network mask configured for the interface. This is given in conjunction with IP Address configured and shall be given only if IP address has been given. This shall be removed whenever IP Address is removed. Modify of network mask for an Ethernet interface shall be supported only if some IP address is configured on the interface or 'UseDhcp' was configured to "GS_TRUE" previously. If Usedhcp is GS_TRUE and modify is done for this field then Usedhcp field shall be set to GS_FALSE. Both Usedhcp and this field shall not be specified together
<b>Mask</b>	This specifies the network mask configured for the interface. This is given in conjunction with IP Address configured and shall be given only if IP address has been given. This shall be removed whenever IP Address is removed. Modify of network mask for an Ethernet interface shall be supported only if some IP address is configured on the interface or 'etherUseDhcp' was configured to "GS_TRUE" previously. If Usedhcp is GS_TRUE and modify is done for this field then Usedhcp field shall be set to GS_FALSE. Both Usedhcp and this field shall not be specified together.
<b>pktype</b>	This defines the packet type supported by the interface. etherPktTypeSupported shall be configured for every Ethernet interface. By default, all packets will be transmitted. The interface shall

	not transmit any other packet type than configured.
<b>Orl</b>	This parameter specifies the output rate limiting value to be applied on this Interface. The units for the same is in Mbits/sec
<b>Configured Duplex</b>	The duplex mode to be used by the interface, as configured by the user.
<b>Duplex</b>	The duplex mode used by the interface.
<b>Configured Speed</b>	The configured speed of the interface.
<b>Mgmt VLAN Index</b>	VLAN for management traffic on this interface. Nonzero value of this field is valid only if either 'ip' field is non-zero or 'usedhcp' field is true. If no Management Vlanid is specified (in the create operation) or it's value is set to zero (either in create or modify operation) then the system shall use the value of 'portvlanid' associated with the bridge port created on this interface as the Management Vlan Index. In case the management vlan (i.e. 'mgmtvlanid' or the associated 'portvlanid', if 'mgmtvlanid' is zero) does not exist on the system then IP based management on this management VLAN shall not happen on the interface till the corresponding VLAN is created with the Net side port as its member.
<b>Tagged Mgmt PDU Prio</b>	Priority to be set in Tagged Ethernet PDUs sent on Management VLAN over this interface. This field is valid only if either 'ip' field is non-zero or 'usedhcp' field is true.
<b>Speed</b>	The actual speed of the interface.
<b>Operational Status</b>	The operational status of the interface.
<b>Admin Status</b>	The administrative status of the interface.

### 5.5.7 EOA Commands

#### ▶ create eoa intf

**Description:** Use this command to create an EoA interface towards the CPE side.

**Command Syntax:** *create eoa intf ifname interface-name lowif low-interfacename[pkttype {multicast |broadcast |unknown-unicast}+ | all][fcs false | true][enable|disable]*

#### ▶ delete eoa intf

**Description:** Use this command to delete an EoA interface.

**Command Syntax:** *delete eoa intf ifname interface-name*

#### ▶ get eoa intf

**Description:** Use this command to get information on a particular EoA interface, or on all the EoA interfaces.

**Command Syntax:** *get eoa intf [ifname interface-name]*

#### ▶ modify eoa intf

**Description:** Use this command to modify the properties of an eoa

interface.

**Command Syntax:** *modify eoa intf ifname interface-name [pkttype {multicast|broadcast |unknown-unicast}+ | all| none] [fcs false |true][enable|disable]*

**Parameters**

Name	Description
<i>ifname interface-name</i>	This parameter specifies the name assigned to this interface. <b>Type</b> : Create – Mandatory Delete – Mandatory Get – Optional Modify – Mandatory <b>Valid values:</b> <i>eoA-0,eoA-1....</i>
<i>lowif low-interface-name</i>	This parameter specifies the lower interface of an EoA interface. <b>Type</b> : Mandatory <b>Valid Values</b> : <i>aa15-0 - *</i>
<i>pkttype {multicast broadcast  unknownunicast}+  all none</i>	This defines the packet type supported by the interface. EoAPktTypeSupported shall be configured for every CPE-side Ethernet interface. By default, the option taken is 'ALL' and it means that all packets will be transmitted. The value 'None' means that normal UCast packets will be transmitted. The interface shall not transmit any other packet type than configured. <b>Type:</b> Optional. <b>Valid Values</b> : {multicast  broadcast  unknown-unicast}+  all <b>Default Value</b> : all.
<i>fcs false   true</i>	This specifies whether Ethernet FCS needs to be computed. Currently only <b>false</b> is supported. <b>Type</b> : Optional <b>Valid Values</b> : <i>false</i> or <i>true</i> <b>Default Value:</b> <i>false</i> .
<i>Enable disable</i>	Administrative status of the interface <b>Type</b> : Optional <b>Valid values</b> : <i>enable</i> or <i>disable</i> <b>Default Values:</b> <i>enable</i>

**Example** *\$create eoa intf ifname eoA-0 lowif aa15-0 enable fcs false*

**Output** Verbose Mode On

Entry Created

```
IfName : eoA-0 LowIfName : aa15-0
FCS : False
Pkt Type : ALL
Oper Status : Down Admin Status :
Up
```

**Output Fields**

Name	Description
<b>IfName</b>	The name of the interface that has been created.
<b>LowIfName</b>	Specifies the lower interface.
<b>FCS</b>	Whether FCS is true or false.
<b>Pkt Type</b>	This defines the packet type supported by the interface. EoAPktTypeSupported shall be configured for every CPE-side Ethernet interface. By default, the option taken is 'ALL' and it means that all packets will be transmitted. The value 'None' means that normal UCast packets will be transmitted. The interface shall not transmit any other packet type



	than that configured.
<b>Admin Status</b>	The desired state of the interface. It may be either <i>Up</i> or <i>Down</i>
<b>Oper Status</b>	The actual/current state of the interface. It can be either <i>up</i> or <i>down</i> .

**Caution**            None

- References**
- Ethernet commands
  - Ethernet Stats commands.

## 5.5.8 GVRP Port Info Commands

### ▶ get gvrp port info

**Description:** Use this command to get.

**Command Syntax:** *get gvrp port info [ portid portid ]*

### ▶ modify gvrp port info

**Description:** Use this command to modify.

**Command Syntax:** *modify gvrp port info portid portid [ portvlanid portvlanid ] [ acceptframetypes all | tagged ] [ ingressfiltering true|false ] [ gvrpstatus enable | disable ] [ restrictedvlanreg true|false ]*

#### Parameter

Name	Description
<i>portid portid</i>	The bridge port id. <b>Type</b> :Optional for all commands <b>Valid values:</b> 1 -GS_CFG_MAX_BRIDGE_PORTS
<i>portvlanid portvlanid</i>	The VLAN Identifier. <b>Type</b> :Optional for all commands <b>Valid values:</b> 1 - GS_CFG_MAX_VLANID
<i>acceptframetypes all   tagged</i>	When this is <b>Tagged</b> , the device will discard un-tagged frames or Priority-Tagged frames received on this port. When this is <b>All</b> , untagged frames or Priority-Tagged frames received on this port will be accepted and assigned to the PVID for this port. <b>Type</b> :Optional for all commands
<i>ingressfiltering true false</i>	When this is <b>true</b> , the device will discard incoming frames for VLANs, which do not include this Port in its Member set. When <b>false</b> , the port will accept all incoming frames. <b>Type</b> : Optional for all commands <b>Valid values:</b> <i>true</i> or <i>false</i>
<i>gvrpstatus enable   disable</i>	The state of GVRP operation on this port. <b>Type</b> :Optional for all commands
<i>restrictedvlanreg restrictedvlanregtrue false</i>	The state of Restricted VLAN Registration on this port. If the value of this control is <b>true(1)</b> , then creation of a new dynamic VLAN entry is permitted only if there is a Static VLAN Registration Entry for the VLAN concerned, in which, the Registrar Administrative Control value for this port is, Normal

	Registration. <b>Type</b> :Optional for all commands <b>Valid values:</b> <i>true</i> or <i>false</i>
--	---

**Example**      **\$ get gvrp port info**

**Output**        Verbose Mode On:

```

Port Id                               : 10
Port VLAN Index                      : 1                    Accept Frame Types : all
Ingress Filtering                     : true                Gvrp Status        : enabled
Failed Registrations                 : 1000               Last Pdu Origin    : 23:45:67:89:00:01
Restricted Vlan Registration         : false
    
```

**Output Fields**

Field	Description
<b>Port Id</b>	The bridge port id.
<b>Port VLAN Index</b>	The VLAN Identifier.
<b>Accept Frame Types</b>	When this is <b>Tagged</b> , the device will discard un-tagged frames or Priority-Tagged frames received on this port. When <b>All</b> , untagged frames or Priority-Tagged frames received on this port will be accepted and assigned to the PVID for this port.
<b>Ingress Filtering</b>	When this is <b>true</b> , the device will discard incoming frames for VLANs, which do not include this Port in its Member set. When <b>false</b> , the port will accept all incoming frames.
<b>Gvrp Status</b>	The state of GVRP operation on this port.
<b>Failed Registrations</b>	The total number of failed GVRP registrations, for any reason, on this port.
<b>Last Pdu Origin</b>	The Source MAC Address of the last GVRP message received on this port.
<b>Restricted Vlan Registration</b>	The state of Restricted VLAN Registration on this port. If the value of this control is <b>true(1)</b> , then creation of a new dynamic VLAN entry is permitted only if there is a Static VLAN Registration Entry for the VLAN concerned, in which, the Registrar Administrative Control value for this port is, Normal Registration.

**Caution**    None

**References**    • GVRP Commands

### 5.5.9 VLAN Static Commands

▶ **create vlan static**

**Description:** Use this command to create.

**Command Syntax:** **create vlan static vlnname vlnname vlanid vlanid [egressports egressports|none ][ forbidegressports forbidegressports|none ] [ untaggedports untaggedports|none ][ bridgingmode bridgingmode] [floodsupport enable|disable][bcastsupport enable|disable]**

► **modify vlan static**

**Description:** Use this command to modify.  
**Command Syntax:** *modify vlan static ( vlnname vlnname | vlanid vlanid ) [egressports egressports|none ] [forbidegressportsforbidegressports|none ] [ untaggedports untaggedports|none ][ bridgingmode bridgingmode] [floodsupport enable|disable][bcastsupport enable|disable]*

► **delete vlan static**

**Description:** Use this command to delete.  
**Command Syntax:** *delete vlan static ( vlnname vlnname | vlanid vlanid )get vlan static*

► **get vlan static**

**Description:** Use this command to delete.  
**Command Syntax:** *get vlan static [ vlnname vlnname | vlanid vlanid ]*

**5.5.10 Vlan curr info Commands**

► **get vlan curr info**

**Description:** Use this command to get.  
**Command Syntax:** *get vlan curr info [ vlanid vlanid ]*

**Parameters**

Name	Description
<i>vlanid</i> vlanid	The VLAN identifier  <b>Type:</b> Get --Optional  <b>Valid values:</b> 1 - GS_CFG_MAX_VLAN_ID

**Example**      \$ *get vlan curr info vlanid 45*

**Output**

```
VLAN Index           : 45
VLAN Status          : 1
Egress Ports         : 24
Untagged Ports       : 24
Bridging Mode        : Residential
Flood support Status : enable
Broadcast support Status : enable
```

**Output field description**

Field	Description
<i>VLAN Index</i>	The VLAN identifier
<i>VLAN Status</i>	This value indicates the status of the VLAN Port corresponding to this entry. other(1) - the entry is for the default VLAN created for the system. permanent(2) - this entry, corresponding to an entry in dot1qVlanStaticTable, is currently in use and will re-main so after the next reset of the device. The port lists for this entry include ports from the

	equivalent dot1qVlanStaticTable entry and ports learnt dynam-ically. dynamic (3) - this entry is currently in use and will remain so until removed by GVRP. There is no static entry for this VLAN and it will be removed when the last port leaves the VLAN.
<b>Egress Ports</b>	The set of ports, which are transmitting traffic for this VLAN, as either tagged or untagged frames.
<b>Untagged Ports</b>	The set of ports, which are transmitting traffic for this VLAN as untagged frames.
<b>VLAN Index</b>	The VLAN identifier
<b>VLAN Status</b>	This value indicates the status of the VLAN Port corresponding to this entry. other(1) - the entry is for the default VLAN created for the system. permanent(2) - this entry, corresponding to an entry in dot1qVlanStaticTable, is currently in use and will remain so after the next reset of the device. The port lists for this entry include ports from the equivalent dot1qVlanStaticTable entry and ports learnt dynamically. dynamic(3) - this entry is currently in use and will remain so until removed by GVRP. There is no static entry for this VLAN and it will be removed when the last port leaves the VLAN.
<b>Egress Ports</b>	The set of ports, which are transmitting traffic for this VLAN, as either tagged or untagged frames.
<b>Untagged Ports</b>	The set of ports, which are transmitting traffic for this VLAN as untagged frames.
<b>Bridging Mode</b>	This specifies the state of full bridging for the Vlan. There can be 3 values associated with this based on global fullBridgingStatus. These values can be restricted bridging, unrestricted full bridging and resi-dential bridging. The user can specify the bridging mode for the vlan at the time of VLAN creation or modification as one of these values; otherwise the vlan inherits the globally set bridging mode. The bridging modes are defined as GS_CFG_RSTRCD_BRIDGING, GS_CFG_UNRSTRCD_BRIDGING and GS_CFG_RSDNTL_BRIDGING.
<b>Flood support Status</b>	This tells if the flooding shall be done for unknown unicast packets for this vlan or not. The unknown unicast packets shall be flooded to all ports for a vlan if global value (present in Dot1dTpInfo) is enabled or throttle and the value per vlan is also enabled else dropped.
<b>Broadcast support Status</b>	This tells if the broadcast shall be done for this vlan or not. The broadcast packets shall be broadcasted on all ports for a vlan if global value (present in Dot1dTpInfo) and the value per vlan are both enabled else dropped.

**Caution** None.

**References** None.

## 5.5.11 VLAN Port Stats Commands

### ► get vlan port stats

**Description:** Use this command to get.

**Command Syntax:** *get vlan port stats [portid portid] [vlanid vlanid]*

### ► reset vlan port stats

**Description:** Use this command to reset.

**Command Syntax:** *reset vlan port stats portid portid vlanid vlanid*

#### Parameters

Name	Description
<i>portid portid</i>	Index of the Bridge Port <b>Type :</b> Get – Optional    Reset - Mandatory <b>Valid values:</b> 1 -GS_CFG_MAX_BRIDGE_PORTS
<i>vlanid vlanid</i>	The VLAN identifier. <b>Type :</b> Get – Optional    Reset - Mandatory <b>Valid values:</b> 1 - GS_CFG_MAX_VLAN_ID

**Example**    \$ *get vlan port stats*

```

Output      Port Id       : 1           Vlan Index       : 2
            Vlan In Frames : 200        Vlan Out Frames  : 100
            Vlan In Discards : 50        Vlan In Overflow : 69
            Vlan Out Overflow : 60
    
```

#### Output Fields

Field	Description
<i>PortId</i>	Index of the Bridge Port.
<i>VLAN Index</i>	The VLAN identifier.
<i>Vlan In Frames</i>	Number of valid frames received by this port.
<i>Vlan Out Frames</i>	Number of valid frames transmitted by this port.
<i>Vlan In Discards</i>	Number of valid frames discarded by this port.
<i>Vlan In Overflow</i>	Count of Inframes counter overflow.
<i>Vlan Out Overflow</i>	Count of Outframes counter overflow.

**Caution**        None

**References**     • VLAN Commands.

## 5.5.12 Transparent Bridging Table Commands

### ► modify bridge tbg info

**Description:** Use this command to modify.

**Command Syntax:** *modify bridge tbg info [aging aging-timeout ]  
[slaveaging aging-timeout][netaging aging-timeout]  
[ floodsupport enable | disable | throttle] [bcastsupport  
enable | disable] [mcastsupport enable | disable]  
[mcastdrop enable | disable][throttlingrate*

*throttlingrate* ] [ *pollinterval pollinterval* ] ] [ *dropifdbfull dropifdbfull* ] [ *resnetlearning resnetlearning* ]

► **get bridge tbg info**

**Description:** Use this command to get bridging related global information.

**Command Syntax:** *get bridge tbg info*

**Parameters**

Name	Description
<i>Aging aging-timeout</i>	The timeout period, in seconds, for aging out dynamically learned forwarding information from CPEs. The value 0 can be configured when aging is to be stopped. <b>Type:</b> Modify Optional <b>Valid values:</b> GS_CFG_MIN_AGING_TIME –GS_CFG_MAX_AGING_TIME
<i>slaveaging aging - timeout</i>	The timeout period, in seconds, for aging out dynamically learned forwarding information learned from the slave device. The recommended value for this is more than or equal to the value for dot1dTpAgingTimeOut. The value 0 can be configured when aging is to be stopped.
<i>netaging aging - timeout</i>	The timeout period, in seconds, for aging out dynamically learned forwarding information from NET side port. This is used only for full bridge configuration. The recommended value of net aging timeout should be greater than that of the iAging parameter. The value 0 can be configured when aging is to be stopped.
<i>floodsupport enable disable throttle</i>	This is used to specify whether the unknown unicast packets are to be flooded or not. The value 'throttle' specifies that throttling using the 'throttling rate' and 'polling interval' parameters, configured by the user, shall control the flooding. The fields 'throttleRate' and 'pollInterval' are valid only when the floodsupport is set to 'throttle'.The value for this is used along with per vlan configuration for flood support , to determine if flooding has to be done for unknown unicast packet.
<i>bcastsupport enable disable</i>	This is used to specify whether the broadcasting is supported or not. The value for this is used along with per vlan configuration broadcast support, to determine if broadcasting has to be done for the broadcast packet.
<i>mcastsupport enable disable</i>	Used to specify whether the multicast is supported or not. <b>Type :</b> Optional <b>Valid Values:</b> <i>enable  disable</i>
<i>mcastdrop enable disable</i>	Used to specify whether the multicast packets are to be dropped, or to be forwarded, if multicast is not supported. This is only valid if dot1dTpMcastSupport is false. <b>Type :</b> Optional <b>Valid Values:</b> <i>enable disable</i>
<i>throttlingrate throttlingrate</i>	Defines the throttling Rate i.e. maximum number of FDB lookup failures resulting in flooding per second, beyond which, the flooding shall be throttled in the system. The value of this field is valid only if the ifloodsupport parameter in the system is set to value Throttle.

<b>pollinterval</b> <b>pollinterval</b>	This indicates, in milliseconds, the polling interval. User can modify the polling interval at run time. The polling interval is defined in milliseconds with granularity of 100 ms. This interval allows user to have finer granularity and control over flooding in the system. The value of this field is valid only if the floodsupport parameter is set to value Throttle.
<b>dropiffdbfull</b> <b>enable</b> <b>disable</b>	This specifies if the frame for which learning could not be done because of forwarding table limit being reached, is to be dropped. If this is enabled the frame for which learning could not be done because of limit exceeded shall be dropped, else forwarded based on bridge forwarding logic. This being enabled shall reduce flooding, as when a response to such a frame from which learning could not be done shall come the frame shall be flooded, as the entry for that unicast address, shall not be found in forwarding table. <b>Type</b> : Optional <b>Valid Values:</b> <i>enable or disable</i> <b>Default value:</b> GS_CFG_DEF_BRIDGE_IFFDBFULLDROP
<b>resnetlearning</b> <b>enable</b> <b>disable</b>	This specifies if learning can be done over net side port for residential bridging. Learning shall be done on Net port in case of vlan with residential bridging if 'dot1dPortGsLearningStatus' and 'dot1dTpGsResidentialNetLearning' is enabled. In case of vlan with 'unrestricted' or 'restricted' bridging the learning is governed only by per port configuration i.e. 'dot1dBasePortTable'. Currently the modification of this parameter is not supported. <b>Type</b> : Optional <b>Valid Values:</b> <i>enable or disable</i> <b>Default value:</b> GS_CFG_DEF_NET_LEARNING_RSDNTL

Example `modify bridge tbg info aging 20 slaveaging 100`

Output Verbose Mode On

```

MacAddress          : 00:BB:CC:DD:EE:FF
No. of Ports        : 0
Base Type           : Transparent
Aging Timeout(sec)  : 300
Netaging TimeOut(sec) : 600
BroadCast Support   : Enable
MultiCast Drop      : Disable
Throttling Rate     : 100
Drop If FDB full status : Enable

Slaveaging TimeOut(sec) : 600
Flood Support           : Disable
MultiCast Support       : Enable
Bridging Mode           : Unrestricted
Polling Interval (ms)   : 25
ResidentialNetLearning  : Enable

Set Done

```

```

MacAddress          : 00:BB:CC:DD:EE:FF
No. of Ports        : 0
Base Type           : Transparent
Aging Timeout(sec)  : 20
Netaging TimeOut(sec) : 600
BroadCast Support   : Enable
MultiCast Drop      : Disable
Throttling Rate     : 100
Drop If FDB full status : Enable

Slaveaging TimeOut(sec) : 100
Flood Support           : Disable
MultiCast Support       : Enable
Bridging Mode           : Unrestricted
Polling Interval (ms)   : 25
ResidentialNetLearning  : Enable

```

Output Fields

Field	Description
<b>MacAddress</b>	The MAC address used by this bridge, when it must be referred to, in a unique fashion. It is the address of one of the Ethernet ports.
<b>No. of Ports</b>	The maximum number of ports that can be controlled by this bridge.
<b>Base Type</b>	Indicates what type of bridging this bridge can perform. It is always Transparent Bridging or STP.
<b>Aging TimeOut</b>	The timeout period, in seconds, for aging out dynamically learned for warding information from CPEs. The value 0

	can be configured when aging is to be stopped.
<b>Slaveaging TimeOut</b>	The timeout period, in seconds, for aging out dynamically learned forwarding information learned from the slave device. The recommended value for this is more than or equal to the value for dot1dTpAgingTimeOut. The value 0 can be configured when aging is to be stopped.
<b>Floodsupport</b>	This is used to specify whether the unknown unicast packets are to be flooded or not. The value 'throttle' specifies that throttling using the 'throttling rate' and 'polling interval' parameters, configured by the user, shall control the flooding. The fields 'throttleRate' and 'pollInterval' are valid only when the floodsupport is set to 'throttle'. The value for this is used along with per vlan configuration for flood support, to determine if flooding has to be done for unknown unicast packet.
<b>Bcastsupport</b>	This is used to specify whether the broadcasting is supported or not. The value for this is used along with per vlan configuration broadcast support, to determine if broadcasting has to be done for the broadcast packet.
<b>Mcastsupport</b>	Used to specify whether the multicast is supported or not.
<b>Mcastdrop</b>	Used to specify whether the multicast packets are to be dropped, or to be forwarded, if multicast is not supported. This is only valid if <b>dot1dTpMcastSupport</b> is false.
<b>NetAgingTimeout</b>	The timeout period, in seconds, for aging out dynamically learned forwarding information from NET side port. This is used only for full bridge configuration. The recommended value of net aging timeout should be greater than that of dot1dTpAgingTimeOut.
<b>Bridging Mode</b>	This specifies the current state of full bridging on the bridge. The bridge can be set to residential bridging, restricted full bridging or unrestricted full bridging. In residential bridging, all packets from a CPE side port are sent to Net side port without doing a lookup in the forwarding table. In restricted full bridging there is a lookup and a packet coming from a CPE port destined for another CPE port is dropped. Hence CPE-CPE switching is not permitted. In unrestricted full bridging, all traffic is forwarded based on lookup.
<b>Throttling rate</b>	Defines the throttling Rate i.e. maximum number of FDB lookup failures resulting in flooding per second, beyond which, the flooding shall be throttled in the system. The value of this field is valid only if the iflood support parameter in the system is set to value Throttle.
<b>Polling Interval (milliseconds)</b>	This indicates, in milliseconds the polling interval. User can modify the polling interval at run time. The polling interval is defined in milliseconds with granularity of 100 ms. This interval allows user to have finer granularity and control over flooding in the system. The value of this field is valid only if the ifloodsupport parameter is set to value Throttle.
<b>Drop If FDB full status</b>	This specifies if the frame for which learning could not be done because of forwarding table limit being reached, is to be dropped. If this is enabled the frame for which learning could not be done because of limit exceeded shall be dropped, else forwarded based on bridge forwarding logic. This being enabled shall reduce flooding, as when a response to such a frame from which learning could not be done shall come the frame shall be flooded, as the entry for that unicast address, shall not be found in forwarding table.



<b>ResidentialNetLearning</b>	This specifies if learning can be done over net side port for residential bridging. Learning shall be done on Net port in case of vlan with residential bridging if 'dot1dPortGsLearningStatus' and 'dot1dTpGsResidentialNetLearning' is enabled. In case of vlan with 'unrestricted' or 'restricted' bridging the learning is governed only by per port configuration i.e. 'dot1dBasePortTable'. <b>Currently the modification of this parameter is not supported.</b>
-------------------------------	---

**Caution**      None

**References**

- Bridge Port commands
- Bridge Port stats commands
- Ethernet commands.

### 5.5.13 IP Route Table Commands

#### ▶ create ip route

**Description:** Use this command to create a routing table entry.  
**Command Syntax:** *create ip route ip dest-ip-address gwyip gwy-ip-address mask net-mask*

#### ▶ delete ip route

**Description:** Use this command to create a routing table entry.  
**Command Syntax:** *create ip route ip dest-ip-address gwyip gwy-ip-address mask net-mask*

#### ▶ get ip route

**Description:** Use this command to create a routing table entry.  
**Command Syntax:** *create ip route ip dest-ip-address gwyip gwy-ip-address mask net-mask*

### 5.5.14 IP Net to Media Table Commands

#### ▶ create arp

**Description:** Use this command to create a static entry in the ARP Table.  
**Command Syntax:** *create arp ip ip-address macaddr mac-address*

#### ▶ delete arp

**Description:** Use this command to delete an entry from the ARP table.  
**Command Syntax:** *delete arp ip ip-address*

► **get arp**

**Description:** Use this command to display either the full ARP table or a single entry.

**Command Syntax:** *get arp [ip ip-address]*

**Parameters**

Name	Description
<i>ip ip-address</i>	IP address corresponding to the media-dependent iphysicalf address <b>Type:</b> Mandatory <b>Valid values:</b> Any valid class A/B/C IP address
<i>macaddr mac-address</i>	The media-dependent iphysicalf address <b>Type:</b> Mandatory <b>Valid values:</b> 0:0:0:0:1 - ff:ff:ff:ff:fe

**Example**    `$ create arp ip 192.168.1.1 macaddr 11:11:11:11:11:11`

**Output**    Verbose Mode On

Entry Created

If Name	Type	Mac Address	Ip Address
eth-0	Static	11:11:11:11:11:11	192.168.1.1

Verbose Mode Off

Entry Created

**Output Fields**

FIELD	Description
If Name	This specifies the physical interface for the media. It may be: <i>eth-0</i> - *. This entry contains bridge management information.
Type	This defines the type of mapping in use. The value <i>Invalid</i> has the effect that this entry is not used. It may be: <i>Static, Dynamic, Other</i>
Mac Address	The media-dependent iphysicalf address
Ip Address	IP address corresponding to the media-dependent iphysicalf address

**Caution**    The specified interface should pre-exist. Please refer to the create ethernet intf command.

**References**

- delete arp command
- get arp command
- create ethernet intf command
- ip route related commands.

## 5.5.15 Bridge Mode Commands

► **get bridge mode**

**Description:** Use this command to get the current bridging mode.

**Command Syntax:** *get bridge mode*

Parameters	None
Example	<code>\$ get bridge mode</code>
Output	Bridging Mode is Enabled
Output Fields	None
Caution	None.
References	<ul style="list-style-type: none"> <li>• modify bridge mode command</li> <li>• bridge port command</li> <li>• bridge port stats command</li> <li>• bridge static command</li> <li>• bridge forwarding command</li> <li>• DHCP Client commands.</li> </ul>

## 5.5.16 DHCP Client Commands

### ► get dhcp client info

**Description:** Use this command to get DHCP client information for clients, on the specified interface, or for all the interfaces.

**Command Syntax:** `get dhcp client info [ifname interface-name]`

#### Parameters

Name	Description
<i>ifname interface-namef</i>	This specifies the interface name on which DHCP is running. If this is not specified, then information for clients on all such interfaces will be displayed. <b>Type :</b> Optional <b>Valid values :</b> eth-*, aggr-*

**Mode** Super-User, User

**Example** `$ get dhcp client info ifname eth-0`

#### Output

If-name	Server	Status	Lease Start Date	Lease Time (sec)
eth-0	1.1.1.1	Bound	Thu Jan 01 00:00:38 1970	500

#### Output Fields

FIELD	Description
<i>If-Name</i>	This is an interface on which DHCP is running: It can be : <i>eth-*</i> , <i>aggr-*</i>
<i>Server</i>	This specifies the address of the DHCP server with whom the client has obtained the IP address and other configurations.
<i>Status</i>	This specifies the current state of the client. It may be: <i>Init</i> , <i>Selecting</i> , <i>Bound</i> , <i>Requesting</i> , <i>Renew</i> or <i>Bind</i> .
<i>Lease Start Date</i>	This signifies the date on which the DHCP server leased out the IP address to the client.

<b>Lease Time</b>	This specifies the time period, (in seconds), for which an IP address was leased out by the server. The client is expected to renew the lease before the expiry of this timer or release the IP Address.
-------------------	---

**Caution**                None.  
**References**            • dhcp client stats related commands

► **get dhcp client stats**

**Description:** Use this command to get DHCP client statistics on an interface on which the DHCP client is running, or on all such interfaces.

**Command Syntax:** *get dhcp client stats [ifname interface-name]*

**Parameters**

FIELD	
<b>ifname interface-name</b>	This specifies the interface name on which DHCP is running. If this is not specified then information for clients on all such interfaces will be displayed. <b>Type:</b> Optional <b>Valid values :</b> <i>eth-0- *</i>

**Mode**    Super-User, User

**Example**    \$ *get dhcp client stats ifname eth-0*

**Output**

```

If-name           : eth-0
Msgs Sent         : 4                Msgs Rcvd        : 0
Decline Sent     : 0                Offer Msgs Rcvd  : 0
Discover Msgs Sent : 4
Req Sent         : 0                Acks Rcvd       : 0
Rel Sent         : 0                Nacks Rcvd      : 0
Inform Sent      : 0                Invalid Rcvd     : 0
    
```

**Output Fields**

FIELD	Description
<b>If-Name</b>	This is an interface on which DHCP is running: It can be : <i>eth-0</i>
<b>Msgs Sent</b>	This specifies number of DHCP messages received sent on this interface.
<b>Msgs Rcvd</b>	This specifies number of DHCP messages sent received on this interface.
<b>Decline Sent</b>	This specifies number of DHCP decline messages sent on this interface.
<b>Offer Msgs Rcvd</b>	This specifies number of DHCP offer messages received on this interface.
<b>Discover Msgs Sent</b>	This specifies number of DHCP discover messages sent on this interface.
<b>Req Sent</b>	This specifies number of DHCP request messages sent on this interface.
<b>Acks Rcvd</b>	This specifies number of DHCP acks received on this interface.
<b>Rel Sent</b>	This specifies number of DHCP release messages sent on this interface.
<b>Nacks Rcvd</b>	This specifies number of DHCP nacks received on this interface.
<b>Inform Sent</b>	This specifies number of DHCP inform messages sent on this interface.

<i>Invalid Rcvd</i>	This specifies number of invalid dhcp messages received on this interface.
---------------------	--

**Caution** None  
**References** • dhcp client info related commands

### 5.5.17 Multicast Forwarding Table Commands

#### ► get bridge mcast forwarding

**Description:** Use this command to get.  
**Command Syntax:** *get bridge mcast forwarding [vlanid vlanid] [macaddress macaddress]*

#### Parameters

Name	Description
<i>vlanid vlanid</i>	The VLAN id for this VLAN. In devices supporting "Shared Vlan for multicast" capability, the information for a multicast MAC address is shared across vlans. Hence vlan id is an optional parameter. In devices supporting "Independent Vlan for multicast" capability, each vlan can have its own information for a multicast MAC address. Hence vlanid is a mandatory parameter in all the commands other than - get. For <b>No Vlan</b> case, vlan id is not required. <b>Type:</b> Optional <b>Valid values:</b> 0 - GS_CFG_MAX_VLAN_ID
<i>macaddress macaddress</i>	The destination Group MAC address in a frame to which this entry's filtering information applies. Bit 0 of the first octet of mac addr indicates a group (multicast) mac addr if the bit is SET. Eg 01:00:00:00:00:00, 03: FF: FF: FF: FF: FF. <b>Type:</b> Optional Valid values:

**Example** `$ get bridge mcast forwarding vlanid 1 macaddress 01:00:5E:00:08:01`

**Output**

```
Vlan Index      1          Mac Address : 01:00:5E:00:08:01
Egress Ports   : 10 20
Group Learnt   : 10
```

#### Output Fields

Field	Description
<i>Vlan Index</i>	The VLAN id for this VLAN. In devices supporting "Shared Vlan for mul-ticast" capability, the information for a multicast MAC address is shared across vlans. Hence vlan id is an optional parameter. In devices supporting "Independent Vlan for multicast" capability, each vlan can have its own information for a multicast MAC address. Hence vlanid is a mandatory parameter in all the commands other than - get. For No Vlan case, vlan id is not required.
<i>Mac Address</i>	The destination Group MAC address in a frame, to which this entry's filtering information, applies.
<i>Egress Ports</i>	The complete set of bridge ports, in this VLAN, to which frames destined for this Group MAC address are currently being explicitly forwarded. This does not include ports for which this address is only implicitly forwarded, in the <b>dot1qForwardAllPorts</b> list.
<i>Group Learnt</i>	The subset of bridge ports in EgressPorts, which were learned by GMRP or some other dynamic mechanism, in this Filtering database.

Caution      None  
 References    • bridge static multicast

### 5.5.18 Bridge Static Unicast Commands

▶ **create bridge static ucast**

**Description:** This command is used to create.

**Command Syntax:** *create bridge static ucast [vlanid vlanid] ucastaddr ucastaddr [portid portid]*

▶ **delete bridge static ucast**

**Description:** This command is used to delete.

**Command Syntax:** *delete bridge static ucast [vlanid vlanid] ucastaddr ucastaddr*

▶ **get bridge static ucast**

**Description:** This command is used to get.

**Command Syntax:** *get bridge static ucast [ vlanid vlanid ] [ ucastaddr ucastaddr ]*

▶ **modify bridge static ucast**

**Description:** This command is used to modify.

**Command Syntax:** *modify bridge static ucast [vlanid vlanid] ucastaddr ucastaddr [ portid portid ]*

**Parameter**

Name	Description
<i>vlanid vlanid</i>	The VLAN id for this VLAN. . For No Vlan case, vlan id is not required. <b>Type :</b> Optional <b>Valid values:</b> 1-GS_CFG_MAX_VLAN_ID
<i>ucastaddr ucastaddr</i>	The Destination unicast Mac Address, to which filtering info applies <b>Type:</b> Mandatory <b>Valid values:</b>
<i>portid portid</i>	<b>Type :</b> Optional <b>Valid values:</b> 1- GS_CFG_MAX_BRIDGE_PORT

### 5.5.19 Bridge Static Multicast Commands

▶ **create bridge static mcast**

**Description:** Use this command is used to create.

**Command Syntax:** *create bridge static mcast [vlanid vlanid] mcastaddr mcastaddr [ egressports egressports ] [ forbidegressports forbidegressports ]*

▶ **delete bridge static mcast**

**Description:** Use this command is used to delete.

**Command Syntax:** *delete bridge static mcast [vlanid vlanid] mcastaddr mcastaddr*

▶ **get bridge static mcast**

**Description:** Use this command is used to get.

**Command Syntax:** *get bridge static mcast [ vlanid vlanid ] [ mcastaddr mcastaddr ]*

▶ **modify bridge static mcast**

**Description:** Use this command is used to modify

**Command Syntax:** *modify bridge static mcast [vlanid vlanid] mcastaddr mcastaddr [ egressports egressports ] [ forbidegressports forbidegressports ]*

**Parameter**

Name	Description
<i>Vlanid vlanid</i>	<p>The VLAN id for this VLAN. In devices supporting "Shared Vlan for multicast" capability, the information for a multicast MAC address is shared across vlans. Hence vlan id is an optional parameter. In de-vices supporting "Independent Vlan for multicast" capability, each vlan can have its own information for a multicast MAC address. Hence vlanid is a mandatory parameter in all the commands other than - get. For No Vlan case, vlan id is not required.</p> <p><b>Type</b> :Optional for all commands  <b>Valid values:</b> 0 - GS_CFG_MAX_VLAN_ID  <b>Default value:</b></p>
<i>mcastaddr mcastaddr</i>	<p>The destination multicast MAC address in a frame, to which this entry's filtering information applies. Bit <b>0</b> of the first octet of the MAC address indicates a group (multicast) MAC address, if the bit is SET. For example, 01:00:00:00:00:00,03:FF:FF:FF:FF:FF. Addresses in the range 01:80:C2:00:00:00 - 01:80:C2:00:00:0f and 01:80:C2:00:00:20 - 01:80:C2:00:00:2f have been blocked as value of this index, as these are reserved GARP addresses.</p> <p><b>Type</b> : Create -- Mandatory  Modify --Mandatory  Delete -- Mandatory  Get - Optional</p> <p><b>Default value:</b></p>
<i>egressports egressports none</i>	<p>The set of ports, to which frames received from a specific port and destined for a specific Multicast MAC address must be forwarded. A port may not be added in this set, if it is already a member of the set of ports in <b>ForbidEgressPorts</b>. More than one val-ue can be given, separated by spaces.</p> <p><b>Type</b> :Optional for all commands  <b>Valid values:</b> 1 – GS_CFG_MAX_BRIDGE_PORTS  <b>Default value:</b> none</p>

<p><b>forbidegressports</b>  <b>forbidegressports </b>  <b>none</b></p>	<p>The set of ports, to which frames received from a specific port and destined for a specific Multicast MACAddress must not be forwarded, regardless of any dynamic information. A port may not be added in this set if it is already a member of the set of ports in <b>EgressPorts</b>.  <b>Type</b> :Optional for all commands  <b>Valid values</b> : 1 – GS_CFG_MAX_BRIDGE_PORTS  <b>Default value</b>: none</p>
---	---

**Example**            **\$ create bridge static mcast vlanid 7**  
**mcastaddr 01:00:5e:00:00:01 egressports 10**  
**forbidegressports 20**

**Output**            Verbose Mode On:

```

Entry Created

Vlan Index           : 7           Mcast Address : 01:00:5E:00:00:01
Egress ports         : 10
Forbidden Egress ports : 20

```

Verbose Mode Off:

```

Entry Created

```

**Output Fields**

Field	Description
<b>Vlan Index</b>	The VLAN id for this VLAN. In devices supporting "Shared Vlan for multicast" capability, the information for a multicast MAC address is shared across vlans. Hence vlan id is an optional parameter. In de-vices supporting "Independent Vlan for multicast" capability, each vlan can have its own information for a multicast MAC address. Hence vlanid is a mandatory parameter in all the commands other than - get. For No Vlan case, vlan id is not required.
<b>Mcast Address</b>	The destination multicast MAC address in a frame, to which the filtering information of this entry applies.
<b>Egress ports</b>	The set of ports, to which frames received from a specific port and destined for a specific Multicast MAC address must be forwarded. A port may not be added in this set if it is already a member of the set of ports in ForbiddenEgressPorts.
<b>Forbidden Egress ports</b>	The set of ports, to which frames received from a specific port and destined for a specific Multicast MAC address must not be forwarded, regardless of any dynamic information. A port may not be added in this set if it is already a member of the set of ports in EgressPorts.

**Caution**        None



## 5.5.20 Bridge mcast fwdunreg commands

### ► get bridge mcast fwdunreg

**Description:** Use this command to get.

**Command Syntax:** *get bridge mcast fwdunreg [ vlanid vlanid ]*

### ► modify bridge mcast fwdunreg

**Description:** Use this command to create.

**Command Syntax:** *modify bridge mcast fwdunreg vlanid vlanid [egressports egressports|none][forbidegressports forbidegressports |none]*

#### Parameters

Name	Description
<i>vlanid vlanid</i>	The VLAN id for this VLAN. In devices supporting "Shared Vlan for multicast" capability, the information for a multicast MAC address is shared across VLANs. Hence, VLAN id is an optional parameter. In devices supporting "Independent Vlan for multicast" capability, each VLAN can have its own information for a multicast MAC address. Hence, VLAN id is a mandatory parameter in all the commands other than - get. For No Vlan case, vlan id is not required. <b>Type</b> : Modify – Optional Get -- Optional <b>Valid values</b> : 0 - GS_CFG_MAX_VLAN_ID <b>Default value</b> :
<i>Egressports egressports none</i>	The set of ports configured by management,in this VLAN, to which multicast group-addressed frames for which there is no more specific forwarding information, are to be forwarded. More than one value can be given, separated by spaces. <b>Type</b> : Modify -- Optional <b>Valid values:</b> 1-386
<i>forbidegressports forbidegressports  none</i>	The set of ports configured by management in this VLAN for which the Service Requirement attribute Forward Unregistered Multicast Groups may not be dynamically registered by GMRP. More than one value can be given separated by spaces. <b>Type</b> : Modify -- Optional <b>Valid values:</b> 1-386

**Example**     \$ *modify bridge mcast fwdunreg vlanid 1 egressports 34 forbidegressports 345*

**Output**     Verbose Mode On

```
VLAN Index           : 1
Forward All Ports    : 34
Forward All Static Ports : 34
Forward All Forbidden Ports : 345
```

Set Done

```
VLAN Index           : 1
Forward All Ports    : 34
Forward All Static Ports : 34
Forward All Forbidden Ports : 345
```

Verbose Mode Off

Set Done

### Output Fields

Field	Description
<b><i>VLAN Index</i></b>	The VLAN id for this VLAN. In devices supporting "Shared Vlan for multicast" capability, the information for a multicast MAC address is shared across VLANs. Hence, VLAN id is an optional parameter. In devices supporting "Independent Vlan for multicast" capability, each VLAN can have its own information for a multicast MAC address. Hence, VLAN id is a mandatory parameter in all the commands other than -get. For No Vlan case, vlan id is not required
<b><i>Forward Unregistered Ports</i></b>	The complete set of ports in this VLAN, to which multicast group-addressed frames for which there is no more specific forwarding information, will be forwarded. This includes ports, for which this need has been determined dynamically by GMRP, or configured statically by management.
<b><i>Forward Unregistered Static Ports</i></b>	The set of ports, configured by management, in this VLAN, to which multicast group-addressed frames for which there is no more specific forwarding information, are to be forwarded. More than one value can be given, separated by spaces.
<b><i>Forward Unregistered Forbidden Ports</i></b>	The set of ports, configured by management in this VLAN, for which the Service Requirement attribute <b>Forward Unregistered Multicast Groups</b> , may not be dynamically registered by GMRP. More than one value can be given, separated by spaces.

Caution    None

## 5.5.21 ridge tbg traps Commands

### ► get bridge tbg traps

**Description:** Use this command to get.

**Command Syntax:** *get bridge tbg traps*

► **modify bridge tbg traps**

**Description:** Use this command to modify.

**Command Syntax:** *modify bridge tbg traps [ bindingstatus enable | disable ]*

**Parameters**

Name	Description
<i>bindingstatus enable   disable</i>	This allows the user to enable or disable the generation of 'binding status changed' trap. <b>Type:</b> Modify ---Optional

**Example** \$ *get bridge tbg traps*

**Output** Binding Status Changed Trap : enable

**Output Fields**

FIELD	Description
<i>Binding Status Changed Trap</i>	This allows the user to enable or disable the generation of 'binding status changed' trap.

**Caution** None

## 5.5.22 Bridge Port Table Commands

► **create bridge port intf**

**Description:** Use this command to create a new bridge port.

**Command Syntax:** *create bridge port intf portid portid [maxucast max-ucast-addresses ] [learning enable|disable][status enable|disable] [stickystatus enable | disable] [aclglbdenyapply Enable | Disable ] [aclglbtrackapply Enable | Disable ]*

► **delete bridge port intf**

**Description:** This command is used to delete an existing bridge port.

**Command Syntax:** *delete bridge port intf portid portid*

► **get bridge port intf**

**Description:** Use this command to get the information about a specific bridge port or for all the ports.

**Command Syntax:** *get bridge port intf [ portid portid ]*

► **modify bridge port intf**

**Description:** Use this command to modify bridge port extension attributes

**Command Syntax:** *modify bridge port intf portid portid [maxucast max-ucast-addresses ] [learning enable|disable][status enable|disable] [stickystatus enable | disable][ acglbdenyapply Enable | Disable ][ acglbtrackapply Enable | Disable ]*

**Parameters**

Name	Description
<i>portid portid</i>	The bridge port id <b>Type:</b> Create --Optional Delete --Mandatory Modify --Mandatory Get -- Optional <b>Valid values:</b> 1 -GS_CFG_MAX_BRIDGE_PORTS
<i>ifname &lt;name&gt;</i>	The interface name associated with the given port. <b>Type</b> : Create --Mandatory <b>Valid values:</b> 1 -GS_CFG_MAX_BRIDGE_PORTS
<i>maxucast max-ucast-addresses</i>	This specifies the maximum number of unicast addresses, which can be learned from this port. This can be modified when the admin status of bridge port is disabled. Max of number of unicast entries that can be learned/configured on a bridge port on CPE side is GS_CFG_MAX_NUM_CPE_PORT_UCAST_MAC_ENTRIES. The default value for number of unicast entries that can be learned or configured on a bridge port is GS_CFG_DEF_NUM_CPE_PORT_UCAST_MAC_ENTRIES. Max of number of unicast entries that can be learned/configured on a bridge port on NET side is GS_CFG_MAX_NUM_NET_PORT_UCAST_MAC_ENTRIES. The default value for number of unicast entries that can be learned or configured on a bridge port is GS_CFG_DEF_NUM_NET_PORT_UCAST_MAC_ENTRIES. Max of number of unicast entries that can be learned/configured on a bridge port on downlink side is GS_CFG_MAX_NUM_DNLINK_PORT_UCAST_M AC_ENTRIES. The default value for number of unicast entries that can be learned or configured on a bridge port is GS_CFG_DEF_NUM_DNLINK_PORT_UCAST_M AC_ENTRIES. <b>Type</b> : Create -- Optional Modify -- Optional <b>Default value:</b> 256
<i>learning enable disable</i>	The State of Learning on this bridge port. The value enable (1) indicates that unicast Mac address learning is enabled and the value disable indicates that unicast Mac address learning is disabled on this bridge port. The default value of learning status for CPE/Downlink side bridge ports shall be GS_CFG_DEF_PORT_LEARNING_STATUS and for NET side bridge port default value shall be GS_CFG_DEF_NET_PORT_LEARNING_STATUS <b>Type</b> : Create --Optional Modify -- Optional <b>Valid Values:</b> enable or disable <b>Default value:</b> Enable
<i>status enable disable</i>	The desired state of the bridge port. On creation, the bridge port shall be created in enabled AdminStatus by default. <b>Type</b> : Create --Optional

	<p>Modify -- Optional  <b>Valid Values:</b> enable or disable  <b>Default value:</b> disable</p>
<b><i>stickystatus enable   disable</i></b>	<p>Indicates if the port has been set as sticky. The value enable (1) indicates that the entries learnt on this port will not be aged out. It also indicates that the entries learnt on this port shall not be learnt on any other port. The entries learnt on this port can only be removed by management action or by making the value as disable (2) so that the entries can be aged out.  <b>Type :</b> Create --Optional                  Modify -- Optional  <b>Valid Values:</b> enable or disable  <b>Default value:</b> enable</p>
<b><i>aciglbdenyapply Enable   Disable</i></b>	<p>This specifies whether the global acl macentry deny list represented by MO AclGlobalMacList is to be applied to this port or not. The default value of this parameter shall depend on the port type. For Net side ports, the default value shall be GS_CFG_DEF_NET_PORT_ACL_GLB_DENY_S STATUS and for the cpe side ports the default value shall be GS_CFG_DEF_CPE_PORT_ACL_GLB_DENY_STATUS.  <b>Type:</b> Modify --Optional</p>
<b><i>aciglbtrackapply Enable   Disable</i></b>	<p>This specifies whether the global acl macentry track list represented by MO AclGlobalMacList is to be applied to this port or not. The default value of this parameter shall depend on the port type. For Net side ports, the default value shall be GS_CFG_DEF_NET_PORT_ACL_GLB_TRACK_STATUS and for the cpe side ports the default value shall be GS_CFG_DEF_CPE_PORT_ACL_GLB_TRACK_STATUS.  <b>Type:</b> Modify --Optional</p>

**Example**     ***\$ create bridge port intf ifname eth-0 portid 10 maxucast 200 learning enable stickystatus enable enable aciglbdenyapply Disable aciglbtrackapply Disable***

**Output**       Entry Created

```

Set Done
Port Id           : 10           IfName           :
eth-0
Max Unicast Addresses : 200       Learning Status  :
Enable
Port Oper Status   : Disable     Port Admin Status :
Disable
Sticky Status      : Enable       FDB Modify       :
Disable
Acl Global Deny Apply : Disable
Acl Global Track Apply : Disable
    
```

**Output Fields**

FIELD	Description
<b><i>Port Id</i></b>	The bridge port identifier
<b><i>If Name</i></b>	The interface name associated with the given port.

<p><b>Max Unicast Addresses</b></p>	<p>This specifies the maximum number of unicast addresses, which can be learned from this port. This can be modified when the admin status of bridge port is disabled. Maximum number of unicast entries that can be learned/configured on a bridge port on CPE side is  GS_CFG_MAX_NUM_CPE_PORT_UCAST_MAC_ENTRIES. The default value for number of unicast entries that can be learned or configured on a bridge port is  GS_CFG_DEF_NUM_CPE_PORT_UCAST_MAC_ENTRIES. Maximum number of unicast entries that can be learned/configured on a bridge port on NET side is  GS_CFG_MAX_NUM_NET_PORT_UCAST_MAC_ENTRIES. The default value for number of unicast entries that can be learned or configured on a bridge port is  GS_CFG_DEF_NUM_NET_PORT_UCAST_MAC_ENTRIES. Maximum number of unicast entries that can be learned/configured on a bridge port on down-link side is  GS_CFG_MAX_NUM_DNLINK_PORT_UCAST_M AC_ENTRIES. The default value for number of uni-cast entries that can be learned or configured on a bridge port is  GS_CFG_DEF_NUM_DNLINK_PORT_UCAST_M AC_ENTRIES.</p>
<p><b>Learning status</b></p>	<p>The state of learning on this bridge port. The value <b>enable (1)</b> indicates that unicast Mac address learning is enabled and the value <b>disable</b> indicates that unicast Mac address learning is disabled on this bridge port. The default value of learning status for CPE/Downlink side bridge ports shall be  GS_CFG_DEF_PORT_LEARNING_STATUS and for NET side bridge port default value shall be  GS_CFG_DEF_NET_PORT_LEARNING_STATU S.</p>
<p><b>Port oper status</b></p>	<p>The current operational state of the bridge port. If AdminStatus of the bridge port is <b>disable (2)</b> then OperStatus of the port should be <b>disable (2)</b>. If AdminStatus of the bridge port is changed to <b>enable(1)</b> then OperStatus of port should change to <b>enable(1)</b> if the bridge port is ready to transmit and receive network traffic.</p>
<p><b>Port admin status</b></p>	<p>The desired state of the bridge port. On creation the bridge port shall be created in enabled AdminStatus by default.</p>
<p><b>Sticky Status</b></p>	<p>Indicates if the port has been set as sticky. The value <b>enable (1)</b> indicates that the entries learned on this port will not be aged out. It also indicates that the entries learned on this port shall not be learned on any other port. The entries learned on this port can only be removed by management action or by making the value as <b>disable (2)</b>, so that the entries can be aged out.</p>
<p><b>Acl Global Deny Apply</b></p>	<p>This specifies whether the global acl macentry deny list represented by MO AclGlobalMacList is to be applied to this port or not. The default value of this parameter shall depend on the port type. For Net side ports, the default value shall be</p>

	GS_CFG_DEF_NET_PORT_ACL_GLB_DENY_S TATUS and for the cpe side ports the default value shall be GS_CFG_DEF_CPE_PORT_ACL_GLB_DENY_S TATUS.
<b><i>Acl Global Track Apply</i></b>	This specifies whether the global acl macentry track list represented by MO AclGlobalMacList is to be applied to this port or not. The default value of this parameter shall depend on the port type. For Net side ports, the default value shall be GS_CFG_DEF_NET_PORT_ACL_GLB _TRACK_STATUS and for the cpe side ports the default value shall be GS_CFG_DEF_CPE_PORT_ACL_GLB_ TRACK_STATUS.

### 5.5.23 Bridge Port Stats Table Commands

▶ **get bridge port stats**

**Description:** Use this command to get the statistics of a single port, or all the ports.

**Command Syntax:** *get bridge port stats [portid portid]*

▶ **reset bridge port stats**

**Description:** Use this command to reset bridge port statistics.

**Command Syntax:** *reset bridge port stats portid portid*

**Parameters**

Name	Description
<i>portid portid</i>	This is the bridge port identifier. If this is not specified in the <b>get</b> command, then information for all ports is displayed. <b>Type</b> : Get – Optional Reset -- Mandatory <b>Valid values</b> : 1-GS_CFG_MAX_BRIDGE_PORTS

**Example**      *\$ get bridge port stats portid 1*

**Output**        Verbose Mode On

```

PortId          : 1
Max Info Size   : 1500
Out Frames      : 138
In Frames       : 129
In Discards     : 3
HC In Frames    : 300
HC Out Frames   : 350
HC In Discards  : 400
    
```

**Output Fields**

FIELD	Description
<i>PortId</i>	This is the bridge port identifier. It can be : 1- GS_CFG_MAX_BRIDGE_PORTS
<i>Max Info Size</i>	The maximum size of the INFO (non-MAC) field that this port will receive or transmit.
<i>Out Frames</i>	The number of frames that have been transmitted by this port to its segment.
<i>In Frames</i>	The number of frames that have been received by this port from its segment.
<i>In Discards</i>	Count of valid frames received, which were discarded (i.e., filtered) by the Forwarding Process.
<i>HC In Frames</i>	Number of frames that have been received by this port from its segment. This is valid only for Ethernet interfaces.
<i>HC Out Frames</i>	Number of frames that have been transmitted by this port to its segment. This is valid only for Ethernet interfaces.
<i>HC In Discards</i>	Count of valid frames received and discarded (i.e filtered) by the Forwarding Process. This is valid only for Ethernet interfaces.

### 5.5.24 Bridge Port Cap Commands

► **get bridge port cap**

**Description:** Use this command is used to get.

**Command Syntax:** *get bridge port cap [ portid portid ] Parameter*

**Parameters**

Name	Description
<i>portid portid</i>	The index of base port <b>Type</b> :Optional <b>Valid values:</b> 1-GS_CFG_MAX_BRIDGE_PORTS <b>Default value:</b> None

**Mode** Super-User, User

**Example** *get bridge port cap*

**Output** portid : 45 Port Capabilites : Tagging Frame Types

**Output Fields**

Field	Description
<i>portid</i>	The index of base port.
<i>Port Capabilites</i>	Capabilities that are allowed on a per-port basis.

**Caution** None

**References** None



## 5.5.25 Ping Commands

### ► ping

**Description:** This command is used to send one or more ICMP messages to another host for a reply.

**Command Syntax:** *ping {ip-address | domain-name} [-t | -n number] [-i time-to-live] [-w seconds] [-s size]*

#### Parameters

Name	Description
<i>ip-address   domain-name</i>	This specifies the Destination address to be pinged. <b>Type</b> : Mandatory <b>Valid values</b> : Any Valid IP Address (0.0.0.0 – 255.255.255.255) or Domain Name - String of Max 63 characters ('a'-'z', 'A'-'Z', '0'-'9', '-', '_' and ':')
<i>-t</i>	This indicates continuous ping to host, until the user interrupts. <b>Type:</b> Optional
<i>-n number</i>	This specifies the number of pings to send to host. <b>Type</b> : Optional <b>Valid values</b> : 1-65535 <b>Default Value:</b> 4
<i>-w seconds</i>	This specifies the time interval between successive ping requests <b>Type</b> : Optional <b>Valid values</b> : 0-65535 <b>Default Value</b> : 2
<i>-l time-to-live</i>	This specifies the time-to-live, to be filled in the ping request <b>Type</b> : Optional <b>Valid values</b> : 0 – 255 <b>Default Value</b> : 64
<i>-s size</i>	This specifies the size of payload for ping. <b>Type</b> : Optional <b>Valid values</b> : 4-1500 <b>Default Value</b> : 64

**Example**      **\$ ping 192.168.1.13**

#### Output

```
$ ping 192.168.1.13
64 bytes of data from 192.168.1.13, seq=0 ttl=64 rtt=0.000 msec
64 bytes of data from 192.168.1.13, seq=1 ttl=64 rtt=0.000 msec
64 bytes of data from 192.168.1.13, seq=2 ttl=64 rtt=0.000 msec
64 bytes of data from 192.168.1.13, seq=3 ttl=64 rtt=0.000 msec
```

-----Ping Statistics -----

4 packets transmitted, 4 packets received, 0 percent packet loss

Output Fields

FIELD	Description
<i>64 bytes of...</i>	This denotes the number of bytes in the ping packet and the source IP Address.
<i>Seq</i>	This denotes the ping attempt counter value.
<i>Ttl</i>	This is the Time to live for the packet.
<i>Rtt</i>	This denotes the Round trip Time for the packet. A value less than 10ms is shown as 0.

### 5.5.26 ADSL Line Profile Commands

► **get adsl line profile**

Description: Use this command to get.

Command Syntax: *get adsl line profile [ifname ifname]*

► **modify adsl line profile**

Description: Use this command to modify.

Command Syntax: *modify adsl line profile ifname ifname [ atucrateadaptation fixed | adaptAtStartup | adaptAtRuntime ] [ gparamtestinputfile gparamtestinputfile ] [ atuctargetsnr atuctargetsnr ] [ atucmaxsnrmargin atucmaxsnrmargin ] [ atucgrsintcorrectionup 125us | 250us | 500us | 1ms | 2ms | 4ms | disable ] [ atucdnshiftsnrmargin atucdnshiftsnrmargin ] [ atucupshiftsnrmargin atucupshiftsnrmargin ] [ atucminupshifttime atucminupshifttime ] [ atucmindnshifttime atucmindnshifttime ] [ atucfastmintxrate atucfastmintxrate ] [ atucintlmintxrate atucintlmintxrate ] [ atucfastmaxtxrate atucfastmaxtxrate ] [ atucintlmaxtxrate atucintlmaxtxrate ] [ atucmaxintldelay atucmaxintldelay ] [ type noChannel | fastOnly | interleavedOnly | fastOrInterleaved | fastAndInterleaved ] [ atucgstxendbin atucgstxendbin ] [ atucgstxstartbin atucgstxstartbin ] [ atucgsmaxbitsperbin atucgsmaxbitsperbin ] [ atucgsrxstartbin atucgsrxstartbin ] [ atucgsrxendbin atucgsrxendbin ] [ atucgsrxbinadjust disable ] [ atucgsltriggermode disable | {locCrc | rmtCrc | snrInc | snrDec}+ ] [ atucgsadi2x standard ] [ atucgsstandard t1413 | gLite | gDmt | alctl14 | multimode | adi | alctl | t1413Auto | adslPlus | GspanPlus ] [ atucgsinitiate waitPn | ctone | initiatePn ] [ atucgstxpoweratten0|.1|.2|.3|.4|.5|.6|.7|.8|.9 | 1 | 2 | 3 | 4 | 5 | 6 | 7 ] [ atucgscodinggain Auto | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 ] [ atucgrsfastovrhddn 50 | 25 | 12 | 6 | 3 | 1 | Disable ] [ atucgrsintcorrectiondn 125Us | 250Us | 500Us | 1Ms | 2Ms | 4Ms | Disable ] [ atucgrsfastovrhdup 50 | 25 | 12 | 6 | 3 | 1 | Disable ] [ atucgsdrstby Disable | Enable ] [ atucgsexpexch Expanded | Short ] [ atucgsecfastretrain Enable | Disable ] [ atucgsfastretrain Enable | Disable ] [ atucgsbitswap Disable | Enable ] [ atucgsntr LocalOcs | Refck8K ]*

[ atucgsannextype AnnexA | AnnexB | HighSpeed | GspanPlus | V1010 ] [ atucgsalctclusver Unknown ] [ atucgsusecustombin Enable | Disable ] [ atucgsdnbinusage atucgsdnbinusage ] [ atucgsmaxdco 64 | 128 | 256 ] [ atucgsfullretrain Enable | Disable ] [ atucgsadvcap disable | {annexa | annexb | adslplus | gspanplus}+ ] [ atucgspsdmasktype Adsl | HsadsIM1 | HsadsIM2 ] [ dmtconfmode ecMode | fdmMode ] [ atucgseraseprofs enable | disable ] [ atucgsextrsmemory present | notpresent ] [ paramhybridlossteststart paramhybridlossteststart ] [ paramhybridlosstestend paramhybridlosstestend ] [ dmttrellis on | off ] [ aturtargetsnrmargin aturtargetsnrmargin ] [ aturdnshiftsnrmargin aturdnshiftsnrmargin ] [ aturupshiftsnrmargin aturupshiftsnrmargin ] [ aturminupshifttime aturminupshifttime ] [ aturmindnshifttimeaturmindnshifttime ] [ aturfastmintxrate aturfastmintxrate ] [ aturintlmaxtxrate aturintlmaxtxrate ] [ aturfastmaxtxrateaturfastmaxtxrate ] [ aturintlmaxtxrate aturintlmaxtxrate ] [ aturmaxintldelay aturmaxintldelay ] [ databoost Enable|Disable ] [ upstreampsd Extended|Standard ]

**Parameters**

Name	Description
<i>ifname ifname</i>	The ADSL line interface name, whose profile is to be modified or viewed <b>Type</b> : Modify - Mandatory Get Optional <b>Valid values:</b> dsl-0 - dsl-*
<i>atucrateadaptation fixed   adaptAtStartup   adaptAtRuntime</i>	Defines what form of transmit rate adaptation is configured, on this modem. Refer to ADSL Forum TR- 005 for more information. <b>Type</b> : Modify Optional
<i>gsparmtestinputfile gsparmtestinputfile</i>	Indicates Name of the Input file, which contains the Mask Array Size, lower and upper mask Array. Null string means no file is specified. <b>Type</b> : Modify -- Optional
<i>atuctargetsnr atuctargetsnr</i>	Configured Target Signal/Noise Margin. This is the Noise Margin the modem must achieve with a BER of 10 to the power 7, or better, to successfully complete initialization. <b>Type</b> : Modify -- Optional <b>Valid values:</b> 0 - 310
<i>atucmaxsnrmargin atucmaxsnrmargin</i>	Configured Maximum acceptable Signal/Noise Margin. If the Noise Margin is above this, the modem should attempt to reduce its power output to optimize its operation. <b>Type</b> : Modify -- Optional <b>Valid values:</b> 0 - 310
<i>atucgrrsintcorrectionup 125us   250us   500us   1ms   2ms   4ms   disable</i>	Sets the correction time for the upstream interleaved buffer. RS can also be disabled. <b>Type</b> : Modify -- Optional

<p><b>atucdnshiftsnrmargin</b> <b>atucdnshiftsnrmargin</b></p>	<p>Configured Signal/Noise Margin for rate downshift. If the noise margin falls below this level, the modem should attempt to decrease its transmit rate. In the case that RADSL mode is not present, the value will be 0. <b>Type</b> : Modify -- Optional <b>Valid values:</b> 0 - 310</p>
<p><b>atucupshiftsnrmargin</b> <b>atucupshiftsnrmargin</b></p>	<p>Configured Signal/Noise Margin for rate upshift. If the noise margin rises above this level, the modem should attempt to increase its transmit rate. In the case that RADSL is not present, the value will be 0. <b>Type</b> : Modify -- Optional <b>Valid values:</b> 0 - 310</p>
<p><b>atucminupshifttime</b> <b>atucminupshifttime</b></p>	<p>Minimum time that the current margin is above UpshiftSnrMgn, before an upshift occurs. In the case that RADSL is not present, the value will be 0. <b>Type</b> : Modify -- Optional <b>Valid values:</b> 0 - 16383</p>
<p><b>atucmindnshifttime</b> <b>atucmindnshifttime</b></p>	<p>Minimum time that the current margin is below DownshiftSnrMgn, before a downshift occurs. In the case that RADSL is not present, the value will be 0. <b>Type</b> : Modify -- Optional Get -- Optional <b>Valid values:</b> 0 - 16383</p>
<p><b>atucfastmintxrate</b> <b>atucfastmintxrate</b></p>	<p>Configured Minimum Transmit rate for 'Fast' channels, in bps. Also refer to 'adslAtucConfRateChanRatio' for information regarding RADSL mode. Refer to ATU-R transmit rate for ATU-C receive rates. <b>Type</b> : Modify -- Optional <b>Valid values:</b> 0 - 0xffffffff</p>
<p><b>atucintlmintxrate</b> <b>atucintlmintxrate</b></p>	<p>Configured Minimum Transmit rate for 'Interleave' channels, in bps. Also refer to 'adslAtucConfRate-ChanRatio' for information regarding RADSL mode and refer to ATU-R transmit rate for ATU-C receive rates. <b>Type</b> : Modify --Optional <b>Valid values:</b> 0 - 0xffffffff</p>
<p><b>atucfastmaxtxrate</b> <b>atucfastmaxtxrate</b></p>	<p>Configured Maximum Transmit rate for 'Fast' channels, in bps. Also refer to 'adslAtucConfRateChanRatio' for information regarding RADSL mode. Refer to ATU-R transmit rate for ATU-C receive rates. <b>Type</b> : Modify -- Optional <b>Valid values:</b> 0 - 0xffffffff</p>
<p><b>atucintlmaxtxrate</b> <b>atucintlmaxtxrate</b></p>	<p>Configured Maximum Transmit rate for 'Interleave' channels, in bps. Also refer to 'adslAtucConfRateChanRatio' for information regarding RADSL mode and ATU-R transmit rate for ATU-C receive rates. <b>Type</b> : Modify -- Optional <b>Valid values:</b> 0 - 0xffffffff</p>

<b>atucmaxintldelay</b> <b>atucmaxintldelay</b>	Configured maximum Interleave Delay for this channel. Interleave delay applies only to the interleave channel and defines the mapping (relative spacing) between subsequent input bytes at the interleaver input and their placement in the bit stream at the interleaver output. Larger numbers provide greater separation between consecutive input bytes in the output bit stream, allowing for improved impulse noise immunity at the expense of payload latency. <b>Type</b> : Modify -- Optional <b>Valid values:</b> 0 - 255
<b>type noChannel   fastOnly   interleavedOnly   fastOrInterleaved   fastAndInterleaved</b>	This object is used to configure the ADSL physical line mode <b>Type</b> : Modify --Optional
<b>atucgstxendbin</b> <b>atucgstxendbin</b>	The highest bin number allowed for Tx signal. <b>Type</b> : Modify -- Optional <b>Valid values:</b> 0x06 - GS_CFG_MAX_ATUC_TX_END_BIN
<b>atucgstxstartbin</b> <b>atucgstxstartbin</b>	The lowest bin number allowed for Tx signal. <b>Type</b> : Modify -- Optional <b>Valid values:</b> 0x06 - GS_CFG_MAX_ATUC_TX_START_BIN
<b>atucgsmaxbitsperbin</b> <b>atucgsmaxbitsperbin</b>	The maximum Rx number of bits per bin. <b>Type</b> : Modify Optional <b>Valid values:</b> 0 - 15
<b>atucgsrxstartbin</b> <b>atucgsrxstartbin</b>	The lowest bin number allowed for Rx signal. <b>Type</b> : Modify -- Optional <b>Valid values:</b> 0x01 - GS_CFG_MAX_ATUC_RX_START_BIN
<b>atucgsrxendbin</b> <b>atucgsrxendbin</b>	The highest bin number allowed for Rx signal. <b>Type</b> : Modify - Optional <b>Valid values:</b> 0x06 - GS_CFG_MAX_ATUC_RX_END_BIN
<b>atucgsrxbinadjust disable</b>	This parameter employs Rx Start/End bin settings <b>Type</b> : Modify -- Optional
<b>atucgsltrigggermode disable   {locCrc   rmtCrc   snrInc   snrDec}+</b>	The type of event that triggers a fast retrain <b>Type</b> : Modify --Optional
<b>atucgsadi2x standard</b>	For non-standard compliant ADI CPE <b>Type</b> : Modify --Optional
<b>atucgsstandard t1413   gLite   gDmt   alct114   multimode   adi   alct1   t1413Auto adsIPlus  GspanPlus</b>	Preferred standard compliance. Outcome is dependent upon standard support of the remote unit. GlobespanVirata High Speed ADSL DMT (AD-SL+)applications only <b>Type</b> : Modify --Optional
<b>atucgsinitiate waitPn   ctone   initiatePn</b>	Specifies which end initiates startup. It is also used to send a C-tone to the remote unit. <b>Type</b> : Modify --Optional
<b>atucgstxpoweratten0 .1 .2 .3 .4 .5 .6 .7 .8 .9 1 2 3 4 5 6 7 8 9 10 11 12</b>	The value in dB of Tx power attenuation <b>Type</b> : Modify --Optional
<b>atucgscodinggain Auto   0  1  2 3 4  5 6 7</b>	Sets the coding gain in dB increments <b>Type</b> : Modify --Optional

**Dynamix DC-48A/SA**

<b>atucgsrcfastovrhddn 50   25 12 6  3 1  Disable</b>	This parameter sets the percentage overhead for the downstream fast buffer. RS can also be disabled. <b>Type:</b> Modify --Optional
<b>atucgsrcintcorrectiondn 125Us   250Us   500Us   1Ms   2Ms   4Ms   Disable</b>	This parameter sets the correction time for the downstream interleaved buffer. RS can also be disabled. <b>Type:</b> Modify --Optional
<b>atucgsrcfastovrhdup 50   25 12 6  3 1  Disable</b>	This parameter sets the percentage overhead for the upstream fast buffer. RS can also be disabled. <b>Type:</b> Modify --Optional
<b>atucgsdrstby Disable   Enable</b>	This parameter provides the ability to disable power to the line driver <b>Type:</b> Modify --Optional
<b>atucgsexpexch Expanded   Short</b>	T1.413 parameter that Enables/Disables EES <b>Type:</b> Modify --Optional
<b>atucgsescfastretrain Enable   Disable</b>	This parameter enables/disables escape to the fast retrain capability <b>Type:</b> Modify --Optional
<b>atucgsfastretrain Enable   Disable</b>	This parameter enables/disables the fast retrain capability. Currently supported only in G.lite mode. <b>Type:</b> Modify --Optional
<b>atucgsbitswap Disable   Enable</b>	This parameter enables/disables bit swapping <b>Type:</b> Modify --Optional
<b>atucgsntr LocalOcs   Refck8K</b>	This parameter enables/disables NTR on a per chip basis <b>Type:</b> Modify --Optional
<b>atucgsannextype AnnexA   AnnexB   HighSpeed   GspanPlus   V1010</b>	This parameter is set as per annex compliance of the code release. GlobespanVirata High Speed ADSL DMT (ADSL+) applications only <b>Type:</b> Modify --Optional
<b>atucgsalctlusver Unknown</b>	For T1.413 demo purposes only <b>Type:</b> Modify --Optional

<b><i>tucgsusecustombin Enable   Disable</i></b>	This parameter enables/disables user selection of any of the 511 bins that will be enabled for upstream and downstream transmission. <b>Type:</b> Modify --Optional
<b><i>atucgsdnbinusage atucgsdnbinusage</i></b>	'1' in bit position indicates usage of corresponding bin. '0' disables usage of corresponding bin. <b>Type:</b> Modify --Optional
<b><i>atucgsmaxdco 64   128  256</i></b>	Maximum interleaving depth supported by the customer's hardware <b>Type:</b> Modify --Optional
<b><i>atucgsfullretrain Enable   Disable</i></b>	Indicates enable/disable of auto retrain capability <b>Type:</b> Modify --Optional
<b><i>atucgsadvcap disable   {annexa   annexb   adslplus   gspanplus}+</i></b>	This parameter controls if the CO will attempt to startup using alternate standards if the CPE does not support ADSL+. <b>Type:</b> Modify --Optional
<b><i>atucgspsdmasktype Adsl   HsadsIM1   HsadsIM2</i></b>	This parameter selects the PSD mask option to be used <b>Type:</b> Modify --Optional
<b><i>dmtconfmode ecMode   fdmMode</i></b>	Indicates whether there is overlap or no overlap of bins <b>Type:</b> Modify --Optional
<b><i>atucgseraseprofs enable   disable</i></b>	This parameter enables/disables the ability to erase all fast retrain profiles at startup <b>Type:</b> Modify --Optional
<b><i>atucgsextrsmemory present   notpresent</i></b>	Indicates whether customer's Hardware uses external RS RAM <b>Type:</b> Modify --Optional
<b><i>paramhybridlossteststart paramhybridlossteststart</i></b>	Start bin for range of bins to be measured <b>Type</b> : Modify -- Optional <b>Valid values:</b> 0x0 - GS_CFG_MAX_ATUC_HYBRID_TEST_START_BIN
<b><i>paramhybridlosstestend paramhybridlosstestend</i></b>	End bin for range of bins to be measured <b>Type</b> : Modify -- Optional <b>Valid values:</b> 0x0 - GS_CFG_MAX_ATUC_HYBRID_TEST_END_BIN
<b><i>dmttrellis on   off</i></b>	This parameter enables/disables trellis coding. Trellis coding should always be enabled for its clear performance advantage. <b>Type</b> : Modify -- Optional
<b><i>aturtargetsnrmargin aturtargetsnrmargin</i></b>	Configured Target Signal/Noise Margin. This is the Noise Margin the modem must achieve with a BER of 10to the power 7 or better, to successfully complete initialization. <b>Type</b> : Modify -- Optional <b>Valid values:</b> 0 - 310

<p><b><i>aturdnshiftsnrmargin</i></b> <b><i>aturdnshiftsnrmargin</i></b></p>	<p>Configured Signal/Noise Margin for rate downshift. If the noise margin falls below this level, the modem should attempt to decrease its transmit rate. In the case that RADSL mode is not present, the value will be 0. <b>Type</b> : Modify -- Optional <b>Valid values:</b> 0 - 310</p>
<p><b><i>aturupshiftsnrmargin</i></b> <b><i>aturupshiftsnrmargin</i></b></p>	<p>Configured Signal/ Noise Margin for rate upshift. If the noise margin rises above this level, the modem should attempt to increase its transmit rate. In the case that RADSL is not present, the value will be 0. <b>Type</b> : Modify -- Optional <b>Valid values:</b> 0 - 310</p>
<p><b><i>aturminupshifttime</i></b> <b><i>aturminupshifttime</i></b></p>	<p>Minimum time that the current margin is above Up shiftSnrMgn before an upshift occurs. In the case that RADSL is not present, the value will be 0. <b>Type</b> : Modify -- Optional <b>Valid values:</b> 0 - 16383</p>
<p><b><i>aturmindnshifttime</i></b> <b><i>aturmindnshifttime</i></b></p>	<p>Minimum time that the current margin is below DownshiftSnrMgn before a downshift occurs. In the case that RADSL mode is not present, the value will be 0. <b>Type</b> : Modify -- Optional <b>Valid values:</b> 0 - 16383</p>
<p><b><i>aturfastmintxrate</i></b> <b><i>aturfastmintxrate</i></b></p>	<p>Configured Minimum Transmit rate for 'Fast' channels, in bps. Also refer to 'adslAturConfRateChan-Ratio' for information regarding RADSL mode and ATU-C transmit rate for ATU-R receive rates. <b>Type</b> : Modify -- Optional <b>Valid values:</b> 0 - 0xffff</p>
<p><b><i>aturintlmintxrate</i></b> <b><i>aturintlmintxrate</i></b></p>	<p>Configured Minimum Transmit rate for 'Interleave' channels, in bps. Also refer to 'adslAturConfRate-ChanRatio' for information regarding RADSL mode and refer to ATU-C transmit rate for ATUR receive rates. <b>Type</b> : Modify -- Optional <b>Valid values:</b> 0 - 0xffff</p>
<p><b><i>aturfastmaxtxrate</i></b> <b><i>aturfastmaxtxrate</i></b></p>	<p>Configured Maximum Transmit rate for 'Fast' channels, in bps. Also refer to 'adslAturConfRateChan-Ratio' for information regarding RADSL mode and refer to ATU-C transmit rate for ATUR receive rates. <b>Type</b> : Modify -- Optional <b>Valid values:</b> 0 - 0xffff</p>
<p><b><i>aturintlmaxtxrate</i></b> <b><i>aturintlmaxtxrate</i></b></p>	<p>Configured Maximum Transmit rate for 'Interleave' channels, in bps. Also refer to 'adslAturConfRate-ChanRatio' for information regarding RADSL mode and ATU-C transmit rate for ATU-R receive rates. <b>Type</b> : Modify -- Optional <b>Valid values:</b> 0 - 0xffff</p>



<p><b>aturmaxintldelay</b> <b>aturmaxintldelay</b></p>	<p>Configured maximum Interleave Delay for this channel. Interleave delay applies only to the interleave channel and defines the mapping (relative spacing) between subsequent input bytes at the interleaver input and their placement in the bit stream at the interleaver output. Larger numbers provide greater separation between consecutive input bytes in the output bit stream, allowing for improved impulse noise immunity at the expense of payload latency. <b>Type</b> : Modify -- Optional <b>Valid values:</b> 0 - 255</p>
<p><b>databoost Enable Disable</b></p>	<p>GlobespanVirata parameter that enables/disables DataBoost option <b>Type</b> : Modify -- Optional <b>Valid values:</b> Enable Disable</p>
<p><b>upstreampsd</b> <b>Extended Standard</b></p>	<p>GlobespanVirata parameter that sets the upstream PSD to be either extended or standard. Used for GSpan Plus only <b>Type</b> : Modify -- Optional <b>Valid values:</b> Extended Standard</p>

**Example**     **\$ get adsl line profile ifname dsl-0**

**Output**        Verbose Mode On

                  IfName                         : dsl-0

                  ADSL ATUC Configuration :

```

-----
Rate Adaptation           : fixed                         Max Snr Margin(dB/10)     : 40
Target Snr Margin(dB/10) : 20                                 Dnshift SnrMargin(dB/10) : 35
GsRsIntCorrectionUp      : 1ms                                 Min Upshift Time(sec)     : 70
Upshift SnrMargin(dB/10) : 50                                 Fast Min Tx Rate(bps)     : 0x20
Min Dnshift Time(sec)    : 10                                 Fast Max Tx Rate(bps)     : 0x50
Intl Min Tx Rate(bps)    : 0x40                                 Max Intl Delay(ms)        : 10
Intl Max Tx Rate(bps)    : 0x60                                 GsTxEndBin                : 0x06
GsTxStartBin             : 0x20                                 GsRxEndBin                : 0x1f
GsRxStartBin             : 0x06                                 GsMaxDCo                 : 64
GsMaxBitsPerBin         : 15                                 GsEraseProfiles         : enable
GsRxBinAdjust            : enable                                 GsStandard                : t1413
GsAdi2x                  : standard                                 GsTxPowerAtten           : .6
GsInitiate               : waitPn                                 GsRsFastOvrhdDown        : 1
GsCodingGain             : Auto                                 GsRsFastOvrhdUp         : 50
GsRsIntCorrectionDown   : 125Us                                 GsExpandedExchange       : Short
GsDrStby                 : Disable                                 GsFastRetrain            : Enable
GsEscapeFastRetrain     : Enable                                 GsNtr                     :
LocalOcs
GsBitSwap                : Enable                                 GsAlctlUsVer             :
Unknown
GsAnnexType              : AnnexA                                 GsFullRetrain             : Enable
GsUseCustomBin           : Enable                                 DmtConfMode               :
ecMode
GsPsdMaskType            : Adsl                                 GsParamHybridLossTestStart : 0x10
GsExtRsMemory            : ExtRsMemory                                 GsDmtTrellis             : on
GsParamHybridLossTestEnd : 0x23
GslTriggerMode           : rmtCrc
Type                      : noChannel
GsDnBinUsage             : 0xff
ParametricTestInputFile : TestFile
Data Boost                : Enable                                 Upstream
PSD                       : Standard

```

ADSL ATUR Configuration :

Target Snr Margin(dB/10) : 20	Dnshift
SnrMargin(dB/10) : 35	
Upshift SnrMargin(dB/10) : 50	Min Upshift
Time(sec) : 70	
Min Dnshift Time(sec) : 10	Fast Min Tx
Rate(bps) : 0x20	
Intl Min Tx Rate(bps) : 0x10	Fast Max Tx
Rate(bps) : 0x40	
Intl Max Tx Rate(bps) : 0x60	Max Intl
Delay(ms) : 10	

### Output Fields

Field	Description
<b>IfName</b>	The ADSL line interface name, whose profile is to be modified or viewed.
<b>Rate Adaptation</b>	Defines what form of transmit rate adaptation is configured on this modem. Refer to ADSL Forum TR-005 for more information.
<b>Target Snr Margin(dB/10)</b>	Configured Target Signal/Noise Margin. This is the Noise Margin the modem must achieve with a BER of 10 to the power -7 or better to successfully complete initialization.
<b>Max Snr Margin(dB/10)</b>	Configured Maximum acceptable Signal/Noise Margin. If the Noise Margin is above this, the modem should attempt to reduce its power output to optimize its operation.
<b>GsRsIntCorrectionUp</b>	Sets the correction time for the upstream interleaved buffer. RS can also be disabled.
<b>Dnshift SnrMargin(dB/10)</b>	Configured Signal/Noise Margin for rate downshift. If the noise margin falls below this level, the modem should attempt to decrease its transmit rate. In the case that RADSLS mode is not present, the value will be 0.
<b>Upshift SnrMargin(dB/10)</b>	Configured Signal/Noise Margin for rate upshift. If the noise margin rises above this level, the modem should attempt to increase its transmit rate. In the case that RADSLS is not present, the value will be 0.
<b>Min Upshift Time(sec)</b>	Minimum time that the current margin is above UpshiftSnrMgn before an upshift occurs. In the case that RADSLS is not present, the value will be 0.
<b>Min Dnshift Time(sec)</b>	Minimum time that the current margin is below DownshiftSnrMgn before a downshift occurs. In the case that RADSLS is not present, the value will be 0.
<b>Intl Min Tx Rate(bps)</b>	Configured Minimum Transmit rate for 'Interleave' channels, in bps. Also refer to 'adslAtucConfRate-ChanRatio' for information regarding RADSLS mode and refer to ATU-R transmit rate for ATU-C receive rates.
<b>Fast Max Tx Rate(bps)</b>	Configured Maximum Transmit rate for 'Fast' channels, in bps. Also refer to 'adslAtucConfRateChan-Ratio' for information regarding RADSLS mode and ATU-R transmit rate for ATU-C receive rates.
<b>Intl Max Tx Rate(bps)</b>	Configured Maximum Transmit rate for 'Interleave' channels, in bps. Also refer to 'adslAtucConfRateChanRatio' for information regarding RADSLS mode and ATU-R transmit rate for ATU-C receive rates.
<b>Max Intl Delay(ms)</b>	Configured maximum Interleave Delay for this channel. Interleave delay applies only to the interleave channel and defines the mapping (relative spacing) between subsequent input bytes at the interleaver input and their placement in the bit stream at the interleaver output. Larger numbers provide greater separation between consecutive input bytes in the output bit stream, allowing

## Dynamix DC-48A/SA

	for improved impulse noise immunity at the expense of payload latency.
<b>GsTxStartBin</b>	The lowest bin number allowed for Tx signal.
<b>GsTxEndBin</b>	The highest bin number allowed for Tx signal.
<b>GsRxStartBin</b>	The lowest bin number allowed for Rx signal.
<b>GsRxEndBin</b>	The highest bin number allowed for Rx signal.
<b>GsMaxBitsPerBin</b>	The maximum Rx number of bits per bin.
<b>GsMaxDCo</b>	Maximum interleaving depth supported by the customer's hardware.
<b>GsRxBinAdjust</b>	This parameter employs Rx Start/End bin settings.
<b>GsEraseProfiles</b>	This parameter enables/disables the ability to erase all fast retrain profiles at startup.
<b>GsAdi2x</b>	For non-standard compliant ADI CPE.
<b>GsStandard</b>	Preferred standard compliance. Outcome is dependent upon standard support of the remote unit. GlobespanVirata High Speed ADSL DMT (ADSL+) applications only.
<b>GsInitiate</b>	Specifies which end initiates startup. It is also used to send a C-tone to the remote unit.
<b>GsTxPowerAtten</b>	The value in dB of Tx power attenuation.
<b>GsCodingGain</b>	Sets the coding gain in dB increments.
<b>GsRsFastOvrhdDown</b>	This parameters sets the percentage overhead for the downstream fast buffer. RS can also be disabled.
<b>GsRsIntCorrectionDown</b>	This parameter sets the correction time for the downstream interleaved buffer. RS can also be disabled.
<b>GsRsFastOvrhdUp</b>	This parameter sets the percentage overhead for the upstream fast buffer. RS can also be disabled.
<b>GsDrStby</b>	This parameter provides the ability to disable power to the line driver.
<b>GsExpandedExchange</b>	T1.413 parameter that Enables/Disables EES.
<b>GsEscapeFastRetrain</b>	This parameter enables/disables escape to the fast retrain capability.
<b>GsFastRetrain</b>	This parameter enables/disables the fast retrain capability. Currently supported only in G.lite mode.
<b>GsBitSwap</b>	This parameter enables/disables bit swapping.
<b>GsNtr</b>	This parameter enables/disables NTR on a per chip basis.
<b>GsAnnexType</b>	This parameter is set as per Annex compliance of the code release. GlobespanVirata High Speed ADSL DMT (ADSL+) applications only
<b>GsAlctlUsVer</b>	For T1.413 demo purposes only.
<b>GsUseCustomBin</b>	This parameter enables/disables user selection of some of those 511 bins that will be enabled for upstream and downstream transmission.
<b>GsFullRetrain</b>	Indicates enable/disable of auto retrain capability.
<b>GsPsdMaskType</b>	This parameter selects the PSD mask option to be used
<b>DmtConfMode</b>	Indicates whether there is overlap or no overlap of bins.
<b>GsExtRsMemory</b>	Indicates whether customer's Hardware uses external RS RAM.

## Dynamix DC-48A/SA

<b>GsParamHybridLossTest Start</b>	Start bin for range of bins to be measured.
<b>GsParamHybridLossTest End</b>	End bin for range of bins to be measured.
<b>GsDmtTrellis</b>	This parameter enables/disables trellis coding. Trellis coding should always be enabled for its clear performance advantage.
<b>GsAdvertisedCapabilities</b>	This parameter controls if the CO will attempt to startup using alternate standards if the CPE does not support ADSL+.
<b>GsTriggerMode</b>	The type of event that triggers a fast retrain.
<b>Type</b>	This object is used to configure the ADSL physical line mode.
<b>GsDnBinUsage</b>	'1' in bit position indicates usage of corresponding bin, whereas a '0' disables usage of corresponding bin.
<b>ParametricTestInputFile</b>	Indicates Name of the Input file that contains the Mask Array Size, lower and upper mask Array. Null string means no file is specified.
<b>Target Snr Margin(dB/10)</b>	Configured Target Signal/Noise Margin. This is the Noise Margin the modem must achieve with a BER of 10 to the power -7, or better, to successfully complete initialization.
<b>Upshift SnrMargin(dB/10)</b>	Configured Signal/ Noise Margin for rate upshift. If the noise margin rises above this level, the modem should attempt to increase its transmit rate. In the case that RADSLS is not present, the value will be 0.
<b>Min Upshift Time(sec)</b>	Minimum time that the current margin is above UpshiftSnrMgn, before an upshift occurs. In the case that RADSLS is not present, the value will be 0.
<b>Min Dnshift Time(sec)</b>	Minimum time that the current margin is below DownshiftSnrMgn, before a downshift occurs. In the case that RADSLS mode is not present, the value will be 0.
<b>Fast Min Tx Rate(bps)</b>	Configured Minimum Transmit rate for 'Fast' channels, in bps. Also refer to 'adslAturConfRateChanRatio' for information regarding RADSLS mode and ATU-C transmit rate for ATU-R receive rates.
<b>Intl Min Tx Rate(bps)</b>	Configured Minimum Transmit rate for 'Interleave' channels, in bps. Also refer to 'adslAturConfRateChanRatio' for information regarding RADSLS mode and to ATU-C transmit rate for ATUR receive rates.
<b>Fast Max Tx Rate(bps)</b>	Configured Maximum Transmit rate for 'Fast' channels, in bps. Also refer to 'adslAturConfRateChan-Ratio' for information regarding RADSLS mode and to ATU-C transmit rate for ATUR receive rates.
<b>Intl Max Tx Rate(bps)</b>	Configured Maximum Transmit rate for 'Interleave' channels, in bps. Also refer to 'adslAturConfRateChanRatio' for information regarding RADSLS mode and to ATU-C transmit rate for ATU-R receive rates.
<b>Max Intl Delay(ms)</b>	Configured maximum Interleave Delay for this channel. Interleave delay applies only to the interleave channel and defines the mapping (relative spacing) between subsequent input bytes at the interleaver input and their placement in the bit stream at the interleaver output. Larger numbers provide greater separation between consecutive input bytes in the output bit stream, allowing for improved impulse noise immunity at the expense of payload latency.
<b>Data Boost</b>	GlobespanVirata parameter that enables/disables

	DataBoost option
<b>Upstream PSD</b>	GlobespanVirata parameter that sets the upstream PSD to be either extended or standard. Used for GSpan Plus only

### 5.5.27 ADSL Line Intf Commands

▶ **get adsl line intf**

**Description:** Use this command to view ADSL line configuration.  
**Command Syntax:** *get adsl line intf [ ifname ifname ]*

▶ **modify adsl line intf**

**Description:** Use this command to modify ADSL line configuration.  
**Command Syntax:** *modify adsl line intf ifname ifname [ lineconfgsaction startup | spectrumReverb | analogLb | digitalLb | atmLp | spectrumMedley | spectrumPilot | spectrumCMtpr | spectrumRMtpr | hybridLossTest | rcvLinearityTest | rcvFilterTest | rcvPowerPerBinTest | idleNoisePerBinTest | totalIdleNoiseTest|self ] [enable | disable]*

**Parameters**

Name	Description
<i>ifname ifname</i>	The Interface name of DSL port. <b>Type :</b> Modify – Mandatory Get - Optional <b>Valid values:</b> <i>dsl-*</i>
<i>lineconfgsaction startup   spectrumReverb   analogLb   digitalLb   atmLp   spectrumMedley   spectrumPilot   spectrumCMtpr   spectrumRMtpr   hybridLossTest   rcvLinearityTest   rcvFilterTest   rcvPowerPerBinTest   idleNoisePerBinTest   totalIdleNoiseTest self</i>	Allows action on per-line basis. <b>Type :</b> Optional
<i>Enable disable</i>	Administrative Status of the interface. <b>Type :</b> Optional <b>Valid values:</b> <i>enable</i> or <i>disable</i>

**Example**    \$ get adsl line intf ifname dsl-0

**Output**     Verbose Mode On

## Dynamix DC-48A/SA

```

IfName           : dsl-0
Line Type        : Interleaved
GsUtopia L2TxAddr : 23
Coding Type      : dmt
GsUtopia L2RxAddr : 10

Gs Clock Type    : oscillator
Admin Status     : Enable
Trans Atuc Cap   : q9921PotsNonOverlapped
Trans Atuc Actual : q9921PotsNonOverlapped
GsDmtTrellis    : trellisOn
Trans Atur Cap   : ansit1413
Gs Action        : StartUp
Oper Status      : Enable
    
```

### Output Fields

Field	Description
<i>IfName</i>	The interface name of the DSL port.
<i>Line Type</i>	Line type used by the DSL port.
<i>Coding Type</i>	Line coding type used by the port.
<i>GsUtopia L2TxAddr</i>	UTOPIA Level 2 Tx address for a line.
<i>GsUtopia L2RxAddr</i>	UTOPIA Level 2 Rx address.
<i>Gs Clock Type</i>	Indicates use of crystal or oscillator.
<i>Gs Action</i>	Allows action on per-line basis.
<i>Admin Status</i>	Administrative Status of the interface.
<i>Oper Status</i>	Operational Status of the interface.
<i>Trans Atuc Cap</i>	Transmission modes that ATU-C is capable of.
<i>Trans Atuc Actual</i>	Transmission modes
<i>GsDmtTrellis</i>	Indicates whether trellis coding has been enabled or not.
<i>Trans Atur Cap</i>	The transmission modes that the ATU-R is capable of supporting. The modes available are limited by the design of the equipment (length = 4 bytes).

**Caution**            None

**References**

- modify adsl line profile
- modify adsl alarm profile
- get adsl line profile
- get adsl alarm profile.

## 5.5.28 DSL System Commands

### ▶ get dsl system

**Description:** Use this command to view DSL system sizing information  
**Command Syntax:** *get dsl system*

### ▶ create dsl system

**Description:** Use this command to create.

**Command** *create dsl system [ dsItype Adsl | Sdsl | Shdsl ]*

**Syntax:** *[ linecodingOther|Dmt|Cap|Qam ] [ txcfg {ansit1413 | etsi  
|q9921PotsNonOverlapped | q9921PotsOverlapped  
|q9921IsdnNonOverlapped |  
q9921IsdnOverlapped|q9921TcmIsdnNonOverlapped |  
q9921TcmIsdnOverlapped |q9922PotsNonOverlapped |  
q9922PotsOverlapped |q9922TcmIsdnNonOverlapped |  
q9922TcmIsdnOverlapped |q9921TcmIsdnSymmetric |  
adslPlusPotsNonOverlapped  
|q9921GspanPlusPotsNonOverlapped|q9921GspanPlusPotsOve*

*rlapped | vds/NonOverlapped |vds/Overlapped }+ ]*

**Parameters**

Name	Description
<i>dsltype Adsl   Sdsl  </i>	Identifies the firmware to be downloaded. <b>Type</b> :Optional for all commands <b>Default value:</b> <i>adsl</i>
<i>linecoding Other   Dmt   Cap   Qam</i>	ADSL line code type. <b>Type</b> :Optional for all commands <b>Default value:</b> <i>Dmt</i>
<i>txcfg {ansit1413   etsi   q9921PotsNonOverlapped   q9921PotsOverlapped   q9921IsdnNonOverlapped   q9921IsdnOverlapped   q9921TcmIsdnNonOverlapped   q9921TcmIsdnOverlapped   q9922PotsNonOverlapped   q9922PotsOverlapped   q9922TcmIsdnNonOverlapped   q9922TcmIsdnOverlapped  q9921TcmIsdnSymmetric   q9921GspanPlusPotsNonOverlapped   q9921GspanPlusPotsOverlapped   vds/NonOverlapped   vds/Overlapped }+ adslPlusPotsNonOverlapped }+</i>	Transmission capabilities with which the DSL system is configured. <b>Type</b> : Optional for all commands <b>Default value:</b> q9921PotsNonOverlapped   q9921PotsOverlapped

**Example**     *\$ create dsl system txcfg q9921potsNonOverlapped*

**Output**        Verbose Mode On  
DSL Type : Adsl Line coding : Dmt  
Tx Config : q9921potsNonOverlapped

**Output Fields**

Field	Description
<i>DSL Type</i>	Identifies the firmware to be downloaded.
<i>Line coding</i>	ADSL line code type.
<i>Tx Config</i>	Transmission capabilities with which the DSL system is configured.

**Caution** None.

**5.5.29 ADSL Cap Commands**

▶ **get adsl cap**

**Description:** Use this command to view DSL transmission capability.  
**Command Syntax:** *get adsl cap*

**Parameters** None  
**Example** `$ get adsl cap`  
**Output** Verbose Mode On  
 Tx Capability : q9921potsOverlapped  
 q9921potsNonOverlapped

**Output Fields**

<u>Field</u>	<u>Description</u>
<i>Tx Capability</i>	Transmission capabilities of the DSL system._

**Caution** None  
**References**

- create dsl system
- get dsl system.

### 5.5.30 ADSL Alarm Profile Commands

▶ **get adsl alarm profile**

**Description:** Use this command to view ADSL alarm profile, corresponding to an ADSL interface.

**Command Syntax:** `get adsl alarm profile [ ifname ifname ]`

▶ **modify adsl alarm profile**

**Description:** Use this command to modify ADSL alarm profile, corresponding to an ADSL interface.

**Command Syntax:** `modify adsl alarm profile ifname ifname [ atucthresh15minlofs atucthresh15minlofs ] [ atucthresh15minloss atucthresh15minloss ] [ atucthresh15minlols atucthresh15minlols ] [ atucthresh15minlprs atucthresh15minlprs ] [ atucthresh15minessatucthresh15miness ] [ atucthreshfastrateup atucthreshfastrateup ] [ atucthreshinlrateup atucthreshinlrateup ] [ atucthreshfastratedn atucthreshfastratedn ] [ atucthreshinlratedn atucthreshinlratedn ] [ atucinitfailtrap atucinitfailtrap ][ atucoptrapenable atucoptrapenable ] [ aturthresh15minlofs aturthresh15minlofs ][ aturthresh15minloss aturthresh15minloss ] [ aturthresh15minlprsaturthresh15minlprs ] [ aturthresh15miness aturthresh15miness ] [ aturthreshfastrateup aturthreshfastrateup ] [ aturthreshinlrateupaturthreshinlrateup ] [ aturthreshfastratedn aturthreshfastratedn ] [ aturthreshinlratedn aturthreshinlratedn ]`

**Parameters**

<b>Name</b>	<b>Description</b>
<i>ifname ifname</i>	The ADSL alarm interface name, whose profile is to be modified or viewed <b>Type :</b> Modify -- Mandatory Get Optional <b>Valid values:</b> dsl-0 - dsl-*



<p><b>atucthresh15minlofs</b> <b>atucthresh15minlofs</b></p>	<p>The number of Loss of Frame Seconds encountered by an ADSL interface within any given 15 minutes performance data collection period, which causes the SNMP agent to send an 'adslAtucPerfLofsThreshTrap' <b>Type</b> : Modify -- Optional <b>Valid values</b>: 0 - 900</p>
<p><b>atucthresh15minloss</b> <b>atucthresh15minloss</b></p>	<p>The number of Loss of Signal Seconds encountered by an ADSL interfac, within any given 15 minutes performance data collection period, which causes the SNMP agent to send an 'adslAtucPerfLossThreshTrap' <b>Type</b> : Modify -- Optional <b>Valid values</b>: 0 - 900</p>
<p><b>atucthresh15minlols</b> <b>atucthresh15minlols</b></p>	<p>The number of Loss of Link Seconds encountered by an ADSL interface, within any given 15 minutes performance data collection period, which causes the SNMP agent to send an 'adslAtucPerfLolsThreshTrap'. <b>Type</b> : Modify - Optional <b>Valid values</b>: 0 - 900</p>
<p><b>atucthresh15minlprs</b> <b>atucthresh15minlprs</b></p>	<p>The number of Loss of Power Seconds encountered by an ADSL interface, within any given 15 minutes performance data collection period, which causes the SNMP agent to send an 'adslAtucPerfLprsThreshTrap'. <b>Type</b> : Modify - Optional <b>Valid values</b>: 0 - 900</p>
<p><b>atucthresh15miness</b> <b>atucthresh15miness</b></p>	<p>The number of Errored Seconds encountered by an ADSL interface, within any given 15 minutes performance data collection period, which causes the SNMP agent to send an 'adslAtucPerfESsThreshTrap'. <b>Type</b> : Modify - Optional <b>Valid values</b>: 0 - 900</p>
<p><b>atucthreshfastrateup</b> <b>atucthreshfastrateup</b></p>	<p>Applies to 'Fast' channels only. Configured change in rate causing an adslAtucRateChangeTrap. A trap is produced when, ChanCurrTxRate &gt;= ChanPrevTxRate plus the value of this object <b>Type</b> : Modify – Optional <b>Valid values</b>: 0 - 0xffff</p>
<p><b>atucthreshintrateup</b> <b>atucthreshintrateup</b></p>	<p>Applies to 'Interleave' channels only. Configured change in rate causing an adslAtucRateChangeTrap. A trap is produced when, ChanCurrTxRate &gt;= ChanPrevTxRate plus the value of this object. <b>Type</b> : Modify -- Optional <b>Valid values</b>: 0 - 0xffff</p>
<p><b>atucthreshfastratedn</b> <b>atucthreshfastratedn</b></p>	<p>Applies to 'Fast' channels only. Configured change in rate causing an adslAtucRateChangeTrap. A trap is produced when, ChanCurrTxRate &lt;= ChanPrevTxRate minus the value of this object. <b>Type</b> : Modify -- Optional <b>Valid values</b>: 0 - 0xffff</p>
<p><b>atucthreshintratedn</b> <b>atucthreshintratedn</b></p>	<p>Applies to 'Interleave' channels only. Configured change in rate causing an adslAtucRateChangeTrap. A trap is produced when, ChanCurrTxRate &lt;= ChanPrevTxRate minus the value of this object. <b>Type</b> : Modify -- Optional <b>Valid values</b>: 0 - 0xffff</p>

<b>atucinitfailtrap</b> <b>atucinitfailtrap</b>	Enables and disables the InitFailureTrap. This object is defaulted disable. <b>Type :</b> Modify -- Optional <b>Valid values:</b> true, false
<b>atucoptrapenable</b> <b>atucoptrapenable</b>	Enables/disables the OpStateChangeTrap. <b>Type :</b> Modify - Optional <b>Valid values:</b> true, false
<b>aturthresh15minlofs</b> <b>aturthresh15minlofs</b>	The number of Loss of Frame Seconds encountered by an ADSL interface, within any given 15 minutes performance data collection period, which causes the SNMP agent to send an 'adslAturPerfLofsThreshTrap'. <b>Type :</b> Modify -- Optional <b>Valid values:</b> 0 - 900
<b>aturthresh15minloss</b> <b>aturthresh15minloss</b>	The number of Loss of Signal Seconds encountered by an ADSL interface, within any given 15 minutes performance data collection period, which causes the SNMP agent to send an 'adslAturPerfLossThreshTrap'. <b>Type :</b> Modify -- Optional <b>Valid values:</b> 0 - 900
<b>aturthresh15minlprs</b> <b>aturthresh15minlprs</b>	The number of Loss of Power Seconds encountered by an ADSL interface, within any given 15 minutes performance data collection period, which causes the SNMP agent to send an 'adslAturPerfLprsThreshTrap'. <b>Type :</b> Modify -- Optional <b>Valid values:</b> 0 - 900
<b>aturthresh15miness</b> <b>aturthresh15miness</b>	The number of Errored Seconds encountered by an ADSL interface, within any given 15 minutes performance data collection period, which causes the SNMP agent to send an 'adslAturPerfESsThreshTrap'. <b>Type :</b> Modify -- Optional <b>Valid values:</b> 0 - 900
<b>aturthreshfastrateup</b> <b>aturthreshfastrateup</b>	Applies to 'Fast' channels only. Configured change in rate causing an adslAturRateChangeTrap. A trap is produced when, ChanCurrTxRate > ChanPrevTxRate plus the value of this object. <b>Type :</b> Modify -- Optional <b>Valid values:</b> 0 - 900
<b>aturthreshintlrateup</b> <b>aturthreshintlrateup</b>	Applies to 'Interleave' channels only. Configured change in rate causing an adslAturRateChangeTrap. A trap is produced when, ChanCurrTxRate > ChanPrevTxRate plus the value of this object. <b>Type :</b> Modify -- Optional <b>Valid values:</b> 0 - 900
<b>aturthreshfastratedn</b> <b>aturthreshfastratedn</b>	Applies to 'Fast' channels only. Configured change in rate causing an adslAturRateChangeTrap. A trap is produced when, ChanCurrTxRate < ChanPrevTxRate minus the value of this object. <b>Type :</b> Modify -- Optional <b>Valid values:</b> 0 - 900
<b>aturthreshintlratedn</b> <b>aturthreshintlratedn</b>	Applies to 'Interleave' channels only. Configured change in rate causing an adslAturRateChangeTrap. A trap is produced when, ChanCurrTxRate < ChanPrevTxRate minus the value of this object. <b>Type :</b> Modify -- Optional <b>Valid values:</b> 0 - 900

**Example**      **\$ get adsl alarm profile ifname dsl-0**

**Output**        Verbose Mode On

## Dynamix DC-48A/SA

```

IfName : dsl-0
ADSL ATUC Configuration :
-----
Thresh 15Min Lofs(sec) : 10      Thresh 15Min Loss(sec) : 20
Thresh 15Min Lols(sec) : 30      Thresh 15Min Lprs(sec) : 50
Thresh 15Min Ess(sec) : 40       Thresh Fast Rate Up(bps) : 70
Thresh Intl Rate Up(bps) : 30    Thresh Fast Rate Down(bps) :
10
Thresh Intl Rate Down(bps) : 30  Init Fail Trap : true
OpStateTrapEnable : false
ADSL ATUR Configuration :
-----
Thresh 15Min Lofs(sec) : 10      Thresh 15Min Loss(sec) : 10
Thresh 15Min Lprs(sec) : 10      Thresh 15Min Ess(sec) : 10
Thresh Fast Rate Up(bps) : 10    Thresh Intl Rate Up(bps) :
10
Thresh Fast Rate Down(bps) : 10  Thresh Intl Rate Down(bps) :
10
    
```

### Output Fields

Field	Description
<b>IfName</b>	The ADSL alarm interface name, whose profile is to be modified or viewed.
<b>Thresh 15Min Lofs(sec)</b>	The number of Loss of Frame Seconds encountered by an ADSL interface, within any given 15 minutes performance data collection period, which causes the SNMP agent to send an 'adslAtucPerfLofsThreshTrap'.
<b>Thresh 15Min Loss(sec)</b>	The number of Loss of Signal Seconds encountered by an ADSL interface, within any given 15 minutes performance data collection period, which causes the SNMP agent to send an 'adslAtucPerfLossThreshTrap'.
<b>Thresh 15Min Lols(sec)</b>	The number of Loss of Link Seconds encountered by an ADSL interface, within any given 15 minutes performance data collection period, which causes the SNMP agent to send an 'adslAtucPerfLol-sThreshTrap'.
<b>Thresh 15Min Lprs(sec)</b>	The number of Loss of Power Seconds encountered by an ADSL interface, within any given 15 minutes performance data collection period, which causes the SNMP agent to send an 'adslAtucPerfLprsThreshTrap'.
<b>Thresh 15Min Ess(sec)</b>	The number of Errored Seconds encountered by an ADSL interface within any given 15 minutes performance data collection period, which causes the SNMP agent to send an 'adslAtucPerfESsThresh-Trap'.
<b>Thresh Fast Rate Up(bps)</b>	Applies to 'Fast' channels only. Configured change in rate causing an adslAtucRateChangeTrap. A trap is produced when, ChanCurrTxRate >= ChanPrevTxRate plus the value of this object.
<b>Thresh Intl Rate Up(bps)</b>	Applies to 'Interleave' channels only. Configured change in rate causing an adslAtucRateChangeTrap. A trap is produced when, ChanCurrTxRate >= ChanPrevTxRate plus the value of this object.
<b>Thresh Fast Rate Down(bps)</b>	Applies to 'Fast' channels only. Configured change in rate causing an adslAtucRateChangeTrap. A trap is produced when, ChanCurrTxRate <= ChanPrevTxRate minus the value of this object.
<b>Thresh Intl Rate Down(bps)</b>	Applies to 'Interleave' channels only. Configured change in rate causing an adslAtucRateChange-Trap. A trap is produced when, ChanCurrTxRate <= ChanPrevTxRate minus the value of this object.
<b>Init Fail Trap</b>	Enables and disables the InitFailureTrap. This

	object is, by default <b>disable</b> .
<b>OpStateTrapEnable</b>	Enables/disables the OpStateChangeTrap.
<b>Thresh 15Min Lofs(sec)</b>	The number of Loss of Frame Seconds encountered by an ADSL interface, within any given 15 minutes performance data collection period, which causes the SNMP agent to send an 'adslAturPerfLofsThreshTrap'.
<b>Thresh 15Min Loss(sec)</b>	The number of Loss of Signal Seconds encountered by an ADSL interface, within any given 15 minutes performance data collection period, which causes the SNMP agent to send an 'adslAturPerfLossThreshTrap'.
<b>Thresh 15Min Lprs(sec)</b>	The number of Loss of Power Seconds encountered by an ADSL interface, within any given 15 minutes performance data collection period, which causes the SNMP agent to send an 'adslAturPerfLprsThreshTrap'.
<b>Thresh 15Min Ess(sec)</b>	The number of Errored Seconds encountered by an ADSL interface, within any given 15 minutes performance data collection period, which causes the SNMP agent to send an 'adslAturPerfESsThreshTrap'.
<b>Thresh Fast Rate Up(bps)</b>	Applies to 'Fast' channels only. Configured change in rate causing an adslAturRateChangeTrap A trap is produced when, ChanCurrTxRate > ChanPrevTxRate plus the value of this object.
<b>Thresh Intl Rate Up(bps)</b>	Applies to 'Interleave' channels only. Configured change in rate causing an adslAturRateChangeTrap. A trap is produced when, ChanCurrTxRate > ChanPrevTxRate plus the value of this object.
<b>Thresh Fast Rate Down(bps)</b>	Applies to 'Fast' channels only. Configured change in rate causing an adslAturRateChangeTrap. A trap is produced when, ChanCurrTxRate < ChanPrevTxRate minus the value of this object.
<b>Thresh Intl Rate Down(bps)</b>	Applies to 'Interleave' channels only. Configured change in rate causing an adslAturRateChange-Trap A trap is produced when, ChanCurrTxRate < ChanPrevTxRate minus the value of this object.

**Caution**          None

**References**      • ADSL commands.

### 5.5.31 ADSL ATUR Trapsext Commands

#### ▶ get adsl atur trapsext

**Description:** This command is used to get.

**Command Syntax:** *get adsl atur trapsext [ ifname ifname ]*

**Example**          \$ *get adsl atur trapsext ifname dsl-0*

**Output**            Ifname : dsl-0  
 SesL Thresh 15Min Trap : 1 UasL Thresh 15Min Trap : 0  
 Lofs Thresh 1Day Trap : 1 Loss Thresh 1Day Trap : 0  
 Lprs Thresh 1Day Trap : 1 ESs Thresh 1Day Trap : 1  
 SesL Thresh 1Day Trap : 1 UasL Thresh 1Day Trap : 0

**Output field description**

Field	Description
<i>Ifname</i>	The ADSL Interface Name
<i>SesL Thresh 15Min Trap</i>	Severely Errored Seconds 15-minute interval threshold reached
<i>UasL Thresh 15Min Trap</i>	Unavailable Errored Seconds 15-minute interval threshold reached
<i>Lofs Thresh 1Day Trap</i>	Loss of Frames 1-day interval threshold reached
<i>Loss Thresh 1Day Trap</i>	Loss of Signal 1-day interval threshold reached
<i>Lprs Thresh 1Day Trap</i>	Loss of Power 1-day interval threshold reached
<i>ESs Thresh 1Day Trap</i>	Errored Seconds 1-day interval threshold reached
<i>SesL Thresh 1Day Trap</i>	Severely Errored Seconds 1-day interval threshold reached
<i>UasL Thresh 1Day Trap</i>	Unavailable Errored Seconds 1-day interval threshold reached

- Caution**      • None  
**References**    • ADSL Commands

### 5.5.32 ADSL ATUC Trapsext Commands

► **get adsl atuc trapsext**

**Description:** Use this command to get.

**Command Syntax:** *get adsl atuc trapsext [ ifname ifname ]*

**Example**      \$ *get adsl atuc trapsext ifname* dsl-0  
**Output**        Ifname : dsl-0  
                   Failed FastR Thresh 15Min Trap : 1 SesL Thresh 15Min Trap :  
                   1  
                   UasL Thresh 15Min Trap : 1 Lofs Thresh 1Day Trap : 0  
                   Loss Thresh 1Day Trap : 1 Lols Thresh 1Day Trap : 1  
                   Lprs Thresh 1Day Trap : 1 ESs Thresh 1Day Trap : 0  
                   SesL Thresh 1Day Trap : 0 UasL Thresh 1Day Trap : 1

**Output field description**

Field	Description
<i>Ifname</i>	The Ifindex of DSL port.
<i>Failed FastR Thresh 15Min Trap</i>	Failed retrains 15-minute interval threshold reached
<i>SesL Thresh 15Min Trap</i>	Severely Errored Seconds 15-minute interval threshold reached
<i>UasL Thresh 15Min Trap</i>	Unavailable Errored Seconds 15-minute interval threshold reached
<i>Lofs Thresh 1Day Trap</i>	Loss of Frames 1-day interval threshold reached
<i>Loss Thresh 1Day Trap</i>	Loss of Signal 1-day interval threshold reached
<i>Lols Thresh 1Day Trap</i>	Loss of Link 1-day interval threshold reached
<i>Lprs Thresh 1Day Trap</i>	Loss of Power 1-day interval threshold reached
<i>ESs Thresh 1Day Trap</i>	Errored Seconds 1-day interval threshold reached
<i>SesL Thresh 1Day Trap</i>	Severely Errored Seconds 1-day interval threshold reached
<i>UasL Thresh 1Day Trap</i>	Unavailable Errored Seconds 1-day interval threshold reached

Caution None.

### 5.5.33 ADSL Alarm Profilext Commands

#### ▶ get adsl alarm profilext

**Description:** This command is used to get.

**Command Syntax:** *get adsl alarm profilext [ ifname ifname ]*

### 5.5.34 ADSL ATUC Physical Commands

#### ▶ get adsl atuc physical

**Description:** Use this command to get ATUC physical interfaces.

**Command Syntax:** *get adsl atuc physical [ifname interface-name]*

**Parameters**

Name	Description
<i>ifname interface-name</i>	The ADSL ATUC physical interface name, for which configuration is to be viewed.  Type : Get – Optional  Valid values : <i>dsl-0-*</i>

**Example Output**      *\$ get adsl atuc physical ifname dsl-0*  
 Verbose Mode On

## Dynamix DC-48A/SA

```

Ifname                : ds1-0
Serial Number         : Glcbespan 1.0
Vendor ID             : 0039
Version Number        : 1.0
Curr Status           : noDefect
Curr Snr Margin(dB/10) : 20                Curr Atn(dB/10)      : 80
CurrAttainable Rate (bps) : 40                Curr Output Pwr (dB/10) : 90
GsOpState             : Data                GsActualStandard    : T1 413
GsTxAtmCellCounter   : 214                GsRxAtmCellCounter  : 215
GsStartProgress       : 213
GsIdleBertError       : 200                GsIdleBertCells     : 100
GsBertSync            : BertOutOfSync
GsParametricTestResult : Ok
GsBertError           : NoSync 0x0
GsSeltInfoValid       : NotConnected
GsSeltLoopLen (in Feet) : 20
GsSeltLoopEnd         : open
GsSeltLoopGauge       : greater_26awg
DataBoost Status      : Enable
GsSeltUpShannonCap (in bps) : 10
GsSeltDownShannonCap (in bps) : 20
Bin Number Number of bits/bin
[0 ] 82 117 110 0 4 0 0 0 1 0 0 0 0 0 0 0
[16] 4 0 0 0 211 0 0 0 0 0 0 0 4 0 0 0
[32]      0 255 0 0 15 0 0 0 7 0 0 0 15 0 0 0
[48]      0 0 0 0 0 128 0 0 0 0 0 0 0 128 0 0
    
```

Parametric Info

```

-----
[0 ]      0      0      0      0
[4 ]      0      0      0      0
[8 ]      0      0      0      0
[12]      0      0      0      0
[16]      0      0      0      0
[20]      0      0      0      0
[24]      0      0      0      0
[28]      0      0      0      0
    
```

### Output Fields

FIELD	Description
<i>Ifname</i>	The ADSL ATUC physical interface name.
<i>Serial Number</i>	The vendor specific string that identifies the vendor equipment.
<i>Vendor ID</i>	Vendor ID code.
<i>Version Number</i>	The vendor specific version number sent by this ATU as part of the initialization messages.
<i>Curr Status</i>	Indicates current state of the ATUC line. This is a bit-map of possible conditions.
<i>Curr Snr Margin(dB/10)</i>	Noise Margin as seen by this ATU with respect to its received signal in tenth dB.
<i>Curr Atn(dB/10)</i>	Measured difference in the total power transmitted by the peer ATU and the total power received by this ATU.
<i>CurrAttainable Rate(bps)</i>	Indicates the maximum currently attainable data rate by the ATU. This value will be equal to, or greater than the current line rate.
<i>Curr Output Pwr(dB/10)</i>	Measured total output power transmitted by this ATU. This is the measurement that was reported during the last activation sequence.
<i>GsOpState</i>	Operational state of the Xcvr.
<i>GsActualStandard</i>	Actual standard used for connection, based on the outcome of the negotiation with the Remote Unit.
<i>GsTxAtmCellCounter</i>	Provides Tx ATM cell counter.
<i>GsRxAtmCellCounter</i>	Provides Rx ATM cell counter.

<b>GsStartProgress</b>	Defines the current detailed start up state of Xcvr. 0x0 – startup not in progress; 0x0 – 0x0FFF Handshake/ Training/ Profile Management/ Fast Retrain in progress; 0x8000 – 0x8FFF DSP firmware Down-Load in progress; 0xF000 – 0xFFFF illegal Parameter
<b>GsBertError</b>	Provides the number of bit errors detected during BERT.
<b>Bin Number</b>	Bin index.
<b>Number of bits/bin</b>	Number of bits/ bin for the bin indexed by this element of the string. The 0 <sup>th</sup> element contains the number of bits per bin for 0, through the 31 <sup>st</sup> element, which contains the number bits for bin 31.
<b>GsIdleBertError</b>	Number of bit errors.
<b>GsIdleBertCell</b>	Number of idle cells.
<b>GsBertSync</b>	Indicates whether the Signal is in Sync or not.
<b>GsParametricTestResult</b>	Indicates the Result of the Parametric Test conducted on the Xcvr.
<b>GsSeltInfoValid</b>	Indicates the information validity for the SELT operation conducted on the Xcvr.
<b>GsSeltLoopLen (in Feet)</b>	Indicates the LOOP Length in Feet once when the SELT information is valid on the Xcvr.
<b>GsSeltLoopEnd</b>	Indicates whether the loop is short or open once when the SELT information is valid on the Xcvr.
<b>GsSeltLoopGauge</b>	Indicates the LOOP wire gauge information once, when the SELT information is valid on the Xcvr.
<b>GsSeltUpShannonCap (in bps)</b>	Indicates the upstream shannon capacity once, when the SELT information is valid on the Xcvr.
<b>GsSeltDownShannonCap (in bps)</b>	Indicates the downstream shannon capacity once, when the SELT information is valid on the Xcvr.
<b>Data Boost Status</b>	GlobespanVirata parameter that indicates whether DataBoost is utilized for the connection.
<b>Parametric Info</b>	GlobespanVirata parameter that indicates the Parametric Test Array.

Caution    None

References    • ADSL commands.

### 5.5.35 ADSL ATUC Channel Commands

#### ▶ get adsl atuc channel

**Description:** Use this command to get ADSL ATUC channels.  
**Command Syntax:** *get adsl atuc channel [ifname interface-name]*

**Example**        *\$ get adsl atuc channel ifname dsl1-0*

**Output**         Verbose Mode On

```
Ifname : dsl1-0
Interleave Delay(ms) : 20 Curr Tx Rate(bps) : 80
Prev Tx Rate(bps) : 40 Crc Block Length(byte) : 90
Gs Curr Atm Status : OK GsSymbolsPerRsWord : 10
GsRsDepth : 20 GsRedundantBytesPerRsCode : 100
```



**Output Fields**

FIELD	Description
<i>Ifname</i>	The ADSL ATUC channel interface name.
<i>Interleave Delay(ms)</i>	Interleave delay for this channel.
<i>Curr Tx Rate(bps)</i>	Actual transmit rate on this channel.
<i>Prev Tx Rate(bps)</i>	The rate at the time of the last adslAtucRateChangeTrap event.
<i>Crc Block Length(byte)</i>	Indicates the length of the channel data-block, on which the CRC operates.
<i>Gs Curr Atm Status</i>	Indicates the current ATM Status.
<i>GsSymbolsPerRsWord</i>	Indicates the number of DMT symbols per Reed-Solomon code word (S), in the downstream direction.
<i>GsRsDepth</i>	Indicates interleaving depth (D), in the downstream direction.
<i>GsRedundantBytesPerRsCode</i>	Indicates the number of redundant bytes (R), per Reed-Solomon code in the downstream direction

**Caution** None  
**References** • ADSL commands.

► **get adsl atuc chanperf**

**Description:** This command is used to get.

**Command Syntax:** *get adsl atuc chanperf [ifname interface-name] Parameters*

**Example**      \$ *get adsl atuc chanperf ifname dsli-0*

**Output**        Verbose Mode On

```
Ifname : dsli-0
Perf Valid Intervals : 20
Perf Invalid Intervals : 30
PerfData Curr15Min Curr1Day Prev1Day
Time Elapsed/Monitored(sec) 15 10 20 45
Rx Blocks 10 45 30 89
Tx Blocks 20 65 70 48
Corrected Blocks 25 35 35 25
Uncorrected Blocks 30 95 80 30
NCD Count 90 86 35 20
OCD Count 60 42 15 20
HEC Count 45 21 75 35
```

**Output Fields**

FIELD	Description
<i>Ifname</i>	The ADSL ATUC channel interface name.
<i>Perf Valid Intervals</i>	Number of previous 15-minute intervals, for which the data was collected.
<i>Perf Invalid Intervals</i>	Number of previous 15-min intervals for which no data is available
<i>Time Elapsed/Monitored(sec)</i>	Total elapsed seconds in the intervals – Curr15Min, Curr1Day and Monitored seconds in Prev1Day.
<i>Rx Blocks</i>	Performance Data: Count of all encoded blocks received on this channel since agent was reset. Curr15Min/Curr1Day/Prev1Day: Count of all encoded blocks received on this channel in the current 15 minute/ current 1 day/ previous 1 day interval.

<b>Tx Blocks</b>	Performance Data : Count of all encoded blocks transmitted on this channel since agent reset. Curr15Min/Curr1Day/Prev1Day: Count of all encoded blocks transmitted on this channel in the current 15-minute/ current 1-day/ previous 1-day interval.
<b>Corrected Blocks</b>	Performance Data: Count of all encoded blocks received with corrected errors on this channel since agent reset. Curr15Min/Curr1Day/Prev1Day: Count of all encoded blocks received with corrected errors on this channel, in the current 15 minute/ current 1 day/ previous 1 day interval.
<b>Uncorrected Blocks</b>	Performance Data: Count of all encoded blocks received with uncorrected errors on this channel since agent wasreset. Curr15Min/Curr1Day/Prev1Day: Count of all encoded blocks received with uncorrected errors on this channel in the current 15 minute/ current 1 day/ previous 1 day interval.
<b>NCD Count</b>	Performance Data : Number of packets with NCD (No Cell Delineation) error. Curr15Min/Curr1Day/Prev1Day: Number of packets with NCD error received in the current 15-minute/ current 1-day/ previous 1-day interval.
<b>OCD Count</b>	Performance Data : Number of packets with OCD (Out of Cell Delineation) error. Curr15Min/Curr1Day/Prev1Day: Number of packets with OCD error received in the current 15-minute/ current 1-day/ previous 1-day interval.
<b>HEC Count</b>	Performance Data : Number of packets with HEC error. Curr15Min/Curr1Day/Prev1Day : Number of packets with HEC error received in the current 15 minute/ current 1 day/ previous 1 day interval.

**Caution**                      None

**References**                      • ADSL Commands.

### 5.5.36 ADSL ATUC Channel Interval Commands

► **get adsl atuc chanintrvl**

**Description:** This command is used to get.

**Command Syntax:** *get adsl atuc chanintrvl ifname interface-name [sintrvl start-interval-number] [nintrvl num-of-intervals]*

**Parameters**

Name	Description
<i>ifname</i> <i>interface-name</i>	The ADSL atuc channel interface name whose performance data collection interval is to be viewed <b>Type:</b> Get                      – Mandatory <b>Valid values :</b> <i>dslr-0 - *, dsrf-0 - *</i>
<i>sintrvl</i> <i>start-interval-number</i>	Start interval number <b>Type:</b> Get                      – Optional <b>Valid values :</b> 1- 96 <b>Default Value :</b> 1
<i>nintrvl</i> <i>num-of-intervals</i>	Number of intervals. <b>Type:</b> Get                      – Optional <b>Valid values :</b> 1- 96

	Default Value : 12
--	--------------------

**Example**    `$ get adsl atuc chanintrvl ifname dsl-0 sintrvl 1 nintrvl 1`

**Output**      Ifname : dsl-0 IntervalNumber : 1  
                  Rx Blocks : 10 Tx Blocks : 45  
                  Corrected Blocks : 20 Uncorrected Blocks : 1  
                  Gs Time Elapsed(sec) : 30 Valid Data : true  
                  GsNoCellDelineation : 20 GsHeaderErrorCheck : 10  
                  GsOutOfCellDelineation : 50

**Output Fields**

FIELD	Description
<i>Ifname</i>	The ADSL ATUC channel interface name.
<i>IntervalNumber</i>	Performance Data Interval number.
<i>Rx Blocks</i>	Count of all encoded blocks received on this channel during this interval.
<i>Tx Blocks</i>	Count of all encoded blocks transmitted on this channel during this interval.
<i>Corrected Blocks</i>	Count of all encoded blocks received with errors that were corrected on this channel during this interval.
<i>Uncorrected Blocks</i>	Count of all encoded blocks received with uncorrected errors on this channel during this interval.
<i>Gs Time Elapsed(sec)</i>	Total time elapsed (in seconds) in this interval.
<i>Valid Data</i>	Indicates if the data for this interval is valid.
<i>GsNoCellDelineation</i>	Count of no cell delineation on this channel for this interval.
<i>GsHeaderErrorCheck</i>	Header error check counter on this channel during this interval.
<i>GsOutOfCellDelineation</i>	Count of out cell delineation on this channel for this interval.

**Caution**    None

**References**    • ADSL Commands.

### 5.5.37 ADSL ATUC Trap Commands

► **get adsl atuc traps**

**Description:** This command is used to get.

**Command Syntax:** `get adsl atuc traps [ifname interface-name]`

**Example**      `$ get adsl atuc traps ifname dsl-0`

**Output**        Verbose Mode On

```
Ifname : dsl-0
Lofs Thresh Trap : 0 Loss Thresh Trap : 1
Lols Thresh Trap : 0 Lprs Thresh Trap : 1
ESs Thresh Trap : 1 Init Failure Trap : 1
Rate Change Trap : 0 Gs OpState Trap : 1
```

**Output Fields**

FIELD	Description
-------	-------------

<b><i>ifname</i></b>	The ADSL interface name.
<b><i>Lofs Thresh Trap</i></b>	Loss of Framing 15 minute threshold reached.
<b><i>Loss Thresh Trap</i></b>	Loss of Signal 15 minute threshold reached.
<b><i>Lols Thresh Trap</i></b>	Loss of Link 15 minute threshold reached.
<b><i>Lprs Thresh Trap</i></b>	Loss of Power 15 minute threshold reached.
<b><i>ESs Thresh Trap</i></b>	Errored Second 15 minute threshold reached.
<b><i>Init Failure Trap</i></b>	ATUC initialization failed.
<b><i>Rate Change Trap</i></b>	ATUC transmit rate has changed.
<b><i>Gs OpState Trap</i></b>	Op State change of Line.

Caution            None

References            • ADSL commands.

### 5.5.38 ADSL ATUC Perf Commands

#### ▶ get adsl atuc perf

**Description:** This command is used to get.

**Command Syntax:** *get adsl atuc physical [ifname ifname]*

#### Parameters

Name	Description
<i>ifname ifname</i>	The ADSL Interface Name <b>Type :</b> Get -- Optional <b>Valid values:</b> dsl-0 - dsl-*

### 5.5.39 ADSL ATUC Interval Commands

#### ▶ get adsl atuc interval

**Description:** This command is used to get.

**Command Syntax:** *get adsl atuc interval ifname interface-name [sintrvl start-interval-number] [nintrvl num-of-intervals]*

#### Parameters

Name	Description
<i>ifname interface-name</i>	The ADSL ATUC channel interface name, for which performance data collection interval is to be viewed. <b>Type :</b> Get – Mandatory <b>Valid values :</b> <i>dsl-0, dsl-*</i>
<i>Sintrvl start-interval-number</i>	Start interval number. <b>Type :</b> Get – Optional <b>Valid values :</b> 1- 96 <b>Default Value :</b> 1
<i>Nintrvl num-of-intervals</i>	Number of intervals. <b>Type :</b> Get – Optional <b>Valid values :</b> 1- 96 <b>Default Value :</b> 12

## 5.5.40 ADSL ATUR Physical Commands

### ► get adsl atur physical

**Description:** This command is used to get.

**Command Syntax:** *get adsl atur physical [ifname ifname]*

#### Parameters

Name	Description
<i>ifname ifname</i>	The ADSL Interface Name <b>Type :</b> Get -- Optional <b>Valid values:</b> dsl-0 - dsl-*

## 5.5.41 ADSL ATUR Channel Commands

### ► get adsl atur channel

**Description:** This command is used to get.

**Command Syntax:** *get adsl atur channel [ifname ifname]*

#### Parameters

Name	Description
<i>ifname ifname</i>	The ADSL Interface Name <b>Type :</b> Get -- Optional <b>Valid values:</b> <i>dsl-0 - dsl-*</i> , <i>dslf-0 - dslf-*</i>

## 5.5.42 ADSL ATUR Trap Commands

### ► get adsl atur traps

**Description:** This command is used to get.

**Command Syntax:** *get adsl atur traps [ifname ifname]*

#### Parameters

Name	Description
<i>ifname ifname</i>	The ADSL Interface Name <b>Type :</b> Get -- Optional <b>Valid values:</b> <i>dsl-0 - dsl-*</i>

## 5.5.43 ADSL ATUR Perf Commands

### ► get adsl atur perf

**Description:** This command is used to get.

**Command Syntax:** *get adsl atur perf [ifname ifname]*

#### Parameters

Name	Description
<i>ifname ifname</i>	The ADSL Interface Name <b>Type</b> :Get -- Optional <b>Valid values</b> : <i>dsl-0 - dsl-*</i>

### 5.5.44 ADSL ATUR Interval Commands

► **get adsl atur interval**

**Description:** This command is used to get.

**Command Syntax:** *get adsl atur interval ifname ifname [sintrvl sintrvl] [nintrvl nintrvl]*

**Parameters**

Name	Description
<i>ifname ifname</i>	The ADSL interface name. <b>Type</b> : Get – Mandatory <b>Valid values</b> : <i>dsl-0 – dsl-*</i> .
<i>sintrvl sintrvl</i>	Start interval number. Performance Data Interval number 1 is the most recent previous interval; interval 96 is 24 hours ago. <b>Type</b> : Get – Optional <b>Valid values</b> : 1- 96 <b>Default Value</b> : 1
<i>nintrvl nintrvl</i>	Number of 15 minutes intervals. <b>Type</b> : Get Optional <b>Valid values</b> : 1 - 96 <b>Default value</b> : 12

**Example Output**      **\$ get adsl atur interval ifname dsl-0 sintrvl 1 nintrvl 1**  
Verbose Mode On

```
Ifname : dsl-0
IntervalNumber : 1 IntervalValidData : true
IntervalLofs(sec) : 10 IntervalLoss(sec) : 10
IntervalLprs(sec) : 10 IntervalESs(sec) : 10
IntervalSesl(sec) : 10 IntervalUasL(sec) : 10
```

**Output Fields**

FIELD	Description
<i>ifname</i>	The ADSL interface name.
<i>IntervalNumber</i>	Count from 1 through 96, of 15 minute intervals.
<i>IntervalValidData</i>	This indicates if the data for this interval is valid.
<i>IntervalLofs(sec)</i>	Count of seconds in the interval when there was Loss of Framing.
<i>IntervalLoss(sec)</i>	Count of seconds in the interval when there was Loss of Signal.
<i>IntervalLprs(sec)</i>	Count of seconds in the interval when there was Loss of Power.
<i>IntervalESs(sec)</i>	Count of Errored Seconds in the interval. The errored second parameter is a count of one-second intervals containing one or more crc anomalies, or one or more los or sef defects.
<i>IntervalSesl(sec)</i>	Count of seconds in the interval when there was severely errored seconds.
<i>IntervalUasL(sec)</i>	Count of seconds in the interval when there was

	unavailable errored seconds.
--	------------------------------

**Caution**                      None

**References**                      • ADSL commands

### 5.5.45 ADSL ATUR Chanperf Commands

#### ▶ get adsl atur chanperf

**Description:** This command is used to get.

**Command Syntax:** *get adsl atur chanperf [ ifname ifname ]*

**Example**                      \$ *get adsl atur chanperf ifname dsli-0*

**Output**                      Verbose Mode On

```
Ifname : dsli-0
Perf Valid Intervals : 20
Perf Invalid Intervals : 30
PerfData Curr15Min Curr1Day Prev1Day
Time Elapsed/Monitored(sec) - 10 20 45
Rx Blocks 10 45 30 89
Tx Blocks 20 65 70 48
Corrected Blocks 25 35 35 25
Uncorrected Blocks 30 95 80 30
NCD Count 90 86 35 20
HEC Count 45 21 75 35
```

#### Output Fields

FIELD	Description
<i>ifname</i>	The ADSL interface name.
<i>Perf Valid Intervals</i>	Number of previous 15-minute intervals, for which the data was collected.
<i>Perf Invalid Intervals</i>	Number of previous 15- minute intervals, for which no data is available.
<i>Time Elapsed/ Monitored(sec)</i>	Total elapsed seconds in the intervals – Curr15Min, Curr1Day and Monitored seconds in Prev1Day.
<i>Rx Blocks</i>	Performance Data: Count of all encoded blocks received on this channel, since agent was reset. Curr15Min/Curr1Day/Prev1Day : Count of all encoded blocks received on this channel in the current 15 minute/ current 1 day/ previous 1 day interval.
<i>Tx Blocks</i>	Performance Data: Count of all encoded blocks transmitted on this Channel, since agent reset. Curr15Min/Curr1Day/Prev1Day: Count of all encoded blocks transmitted on this channel in the current 15-minute/ current 1-day/ previous 1-day interval.
<i>Corrected Blocks</i>	Performance Data: Count of all encoded blocks received with corrected errors on this channel, since agent reset. Curr15Min/Curr1Day/Prev1Day: Count of all encoded blocks received with corrected errors on this channel, in the current 15 minute/ current 1 day/ previous 1 day interval.
<i>Uncorrected Blocks</i>	Performance Data: Count of all encoded blocks received with uncorrected errors on this channel, since agent was reset.

	Curr15Min/Curr1Day/Prev1Day : Count of all encoded blocks received with uncorrected errors on this channel, in the current 15 minute/ current 1 day/ previous 1 day interval.
<b>NCD Count</b>	Performance Data: Number of packets with NCD (No Cell Delineation) errors. Curr15Min/Curr1Day/Prev1Day: Number of packets with NCD error, received in the current 15-minute/ current 1-day/ previous 1-day interval.
<b>HEC Count</b>	Performance Data: Number of packets with HEC error. Curr15Min/Curr1Day/Prev1Day: Number of packets with HEC error received in the current 15 minute/ current 1 day/ previous 1 day interval.

**Caution** None  
**References** • ADSL commands

### 5.5.46 ADSL ATUR Chanintrvl Commands

#### ► get adsl atur chanintrvl

**Description:** This command is used to get.

**Command Syntax:** *get adsl atur chanintrvl ifname ifname [sintrvl sintrvl] [nintrvl nintrvl]*

#### Parameters

Name	Description
<i>ifname ifname</i>	The ADSL interface name. <b>Type :</b> Get – Mandatory <b>Valid values:</b> <i>dslj-0 – dslj-*, dsli-0 – dsli-*</i> .
<i>sintrvl sintrvl</i>	Start interval number. Performance Data Interval number 1 is the most recent previous interval; interval 96 is 24 hours ago. <b>Type :</b> Get – Optional <b>Valid values :</b> 1- 96 <b>Default Value :</b> 1
<i>nintrvl nintrvl</i>	Number of 15 minutes intervals. <b>Type :</b> Get -- Optional <b>Valid values:</b> 1 - 96 <b>Default value:</b> 12

### 5.5.47 System Configuration Save And Restore Commands

#### ► commit

**Description:** Use this command to commit the active configuration to the flash.

**Command Syntax:** *commit*

#### Parameters

None



► **reboot**

**Description:** Use this command to reboot the system and to set the boot configuration.

**Command Syntax:** *reboot [control <nvram|network>] [dataplane <nvram|network>] [config <network | default | last | backup | clean | minimum >]*

**Parameters**

Name	Description
<i>control</i> <nvram network>	This specifies whether the control plane binaries are to be fetched from the network or the binaries already present in NVRAM are to be used. <b>Type :</b> Optional <b>Default value:</b> Binary present in NVRAM.
<i>dataplane</i> <nvram network>	This specifies whether the data plane binaries are to be fetched from the network or the binaries already present in NVRAM are to be used. <b>Type:</b> Optional <b>Default value:</b> Binaries present in NVRAM.
<i>config</i> <network default last backup clean minimum>	This specifies the boot configuration – the <last backup clean minimum> source, from which to boot up. The boot configuration is set to <i>last</i> automatically, whenever a <i>commit</i> command is given. The boot configuration being an optional parameter, if it is not specified, it retains the previous value. So giving <i>reboot</i> after a <i>commit</i> will result in a reboot from the committed configuration. <i>Default:</i> Use Default factory configuration while booting up. <i>Backup:</i> Use the Backup configuration to boot the system. <i>Last:</i> Use last committed configuration to boot the system. <i>Minimum:</i> Use a configuration in which: • the size command is executed. • the user (login name and password as root) is created. • an Ethernet interface with IP address 192.168.1.1 mask 255.255.0.0 is created. <i>Clean:</i> The system comes up with nothing configured. <i>Network:</i> The system fetches the default configuration file from the remote host and system comes up with this default configuration. <b>Type :</b> Optional <b>Default value:</b> If a reboot is being given for the first time, then the default value is <i>default</i> . Otherwise, the default value is the same as what was given the last time.

**5.5.48 System Control Table Commands**

► **create user**

**Description:** Use this command to create a user account. A maximum two accounts can exist.

**Command Syntax:** *create user name user-name passwd password [root/user]*

► **delete user**

**Description:** Use this command to delete a user login.

**Command Syntax:** *delete user name user-name*

► **get user**

**Description:** Use this command to display information of all the users. Password information is not displayed.

**Command Syntax:** *get user*

**Parameters**

Name	Description
<i>Name user-name</i>	This specifies the User Name to be created. <b>Type:</b> Mandatory <b>Valid values:</b> String of up to 64 characters ( 'A'- 'Z', 'a'- 'z', '0'- '9', '-', '_', ) and any combination of printable characters excluding “;”
<i>passwd password</i>	This specifies the password required by this user to login to the unit. <b>Type :</b> Mandatory <b>Valid values:</b> String of up to 64 characters ( 'A'- 'Z', 'a'- 'z', '0'- '9', '-', '_', ) and any combination of printable characters excluding “;”.
<i>Root user</i>	This indicates the privilege level of the user. <b>Type :</b> Optional <b>Default value:</b> <i>user</i>

**Example**      \$ *create user name user1 passwd temp1 user*

**Output**      Verbose Mode On

```

Entry Created
Privilege UserName
-----
user user1
Verbose Mode Off
Entry Created
    
```

**Output Fields**

FIELD	Description
<i>UserName</i>	This shows the new user login, which has been created.
<i>Privilege</i>	This represents the privilege level associated with the user name shown. It may be: <i>user, root</i>

► **passwd**

**Description:** Use this command to change the password associated with a user login. An ordinary user may change the password for another user if he knows the old password. However, the root does not need to know a user’s existing password before changing it. The passwords are not echoed on to the screen.

**Command Syntax:** *passwd [user-id]*

**Parameters**

Name	Description
------	-------------

<b>User-id</b>	<p>The id of the user whose password is to be changed. If not specified then the current user is assumed.</p> <p><b>Type:</b> Mandatory, if user is logged in through serial port and user authentication is disabled through serial port. Otherwise, Optional.</p> <p><b>Valid values:</b> String of up to 64 characters (All printable characters except ';')</p>
----------------	---

**Example** Normal Usage

```

$passwd
Old Password:
New Password:
Confirm New Password:
Set Done.
Super User (for ordinary user)
$passwd User1
New Password:
Confirm New Password:
Set Done.
    
```

### 5.5.49 System Info Commands

▶ **get system info**

**Description:** This command to get system parameters.  
**Command Syntax:** *get system info*

▶ **modify system info**

**Description:** Use this command to modify the system parameters.  
**Command Syntax:** *modify system info [contact sys-contact ] [name sys-name ][location sys-location ] [vendor sys-vendor-info ] [logthreshsys-log-threshold ] [systime systime ] [dst <on |off>] [timezone <timezone> ]*

**Parameters**

Name	Description:
<i>contact sys-contact</i>	<p>This contains the textual identification of the contact person for this modem, together with information on how to contact this person</p> <p><b>Type :</b> Optional  <b>Valid values:</b> String of up to 63 ASCII Characters</p>
<i>name sys-name</i>	<p>This specifies the name of the modem</p> <p><b>Type :</b> Optional  <b>Valid values:</b> String of up to 63 ASCII Characters</p>
<i>Location sys-location</i>	<p>This specifies the physical location of this modem</p> <p><b>Type :</b> Optional  <b>Valid values:</b> String of up to 63 ASCII Characters</p>
<i>vendor sys-vendor-info</i>	<p>This contains the vendor-specific information</p> <p><b>Type :</b> Optional  <b>Valid values:</b> String of up to 63 ASCII Characters</p>
<i>logthresh sys-log-threshold</i>	<p>This specifies the severity level of the trap equal to or lower than that shall be logged. 1 is the lowest and represents critical traps.</p> <p><b>Type:</b> Optional  <b>Valid values:</b> 1-4</p>

<b>Systime</b> <i>systime</i>	This specifies the current system time. <b>Type:</b> Optional <b>Valid values:</b> System Time String in format. The total string length must be 20 characters. Single digits should be prepended with a '0', e.g. '1' should be given as '01' mon dd hh:mm:ss year e.g. "Feb 01 21:20:10 2001"
<b>dst</b> <on   off>	This specifies if the Daylight Savings Time has been enabled or not. <b>Type:</b> Optional <b>Valid values:</b> on off

**Example**    \$ get system info

**Output**     Verbose Mode On

```

Crash Id : 1 Crash IU : 0
Time of Crash : Thu Jan 01 00:00:25 1970
Crash Cause : CP crashed after DP Init
PSR Reg : 0x940060de Wim Reg : 0x0
PC : 0x474204c nPC : 0x4742050
Y Reg MSW : 0x0 Y Reg LSW : 0x491f699
Trap Num : 0x92 Trap Base Reg : 0x4602920
Fault Status Reg : 0x14 Double Fault Reg : 0x9e0
IER : 0x2000
Alternate Window # 0x1f
Reg#:Local : In |Reg#:Local : In |
0 : 0x1 : 0x0 | 1 : 0x2 : 0x0
2 : 0x3 : 0x0 | 3 : 0x4 : 0x0
4 : 0x5 : 0x0 | 5 : 0x6 : 0x0
6 : 0x7 : 0x0 | 7 : 0x7 : 0x0
.....
Alternate Window # 0x18
Reg#:Local : In |Reg#:Local : In |
0 : 0x0 : 0x0 | 1 : 0x0 : 0x0
2 : 0x0 : 0x0 | 3 : 0x0 : 0x0
4 : 0x0 : 0x0 | 5 : 0x0 : 0x0
6 : 0x0 : 0x0 | 7 : 0x0 : 0x0
Current Standard Window Dump
Registers : Global : Out : Local : In
0 : 0x0 : 0x5848940 : 0x5844e34 : 0x5848940
1 : 0x940060e9 : 0x4d13d7a : 0x3b1a : 0x4d13d78
2 : 0x7 : 0x4741fd4 : 0x3800 : 0x2000000
3 : 0x18 : 0x8 : 0x3b18 : 0x4d13d78
4 : 0x0 : 0x4d13d80 : 0x5844e34 : 0x4d13d80
5 : 0x2050044c : 0x3b17 : 0x5854d0d : 0x3b14
6 : 0x58f3c00 : 0x4d13c18 : 0x1 : 0x4d13c90
7 : 0x0 : 0x471073c : 0x3b1c : 0x4700f28
CCP Register Dump
CCSR Register : 0x1a2a4021 CCCRC Register : 0x1ffffbbd
CCPR Register : 0xa2aabdfc
CCIR Register : 0xbabfbfe1 CCIBR Register : 0x3fd1ed7f
CCOBR Register : 0x44208200 CCOR Register : 0x9bb2eccc
Stack at the time of the Crash
StackDepth : CallAddress : Return Address: Frame Ptr : StackPtr
8 : 0x48ea65c : 0x471073c : 0x4d13c18 : 0x4951e60
7 : 0x471073c : 0x4700f28 : 0x4d13c90 : 0x4d13c18
6 : 0x4700f28 : 0x46eab20 : 0x4d13d10 : 0x4d13c90
5 : 0x46eab20 : 0x46ea25c : 0x4d14360 : 0x4d13d10
4 : 0x46ea25c : 0x46e9d20 : 0x4d143e8 : 0x4d14360
3 : 0x46e9d20 : 0x48e356c : 0x4d144f0 : 0x4d143e8

```

**Output Fields**

Field	Description
<b>Crash Id</b>	Crash Number
<b>Crash IU</b>	Internal processor Number
<b>Time of Crash</b>	This specifies the time at which the crash occurred.

<b>Crash Cause</b>	This specifies crash cause. Following are the possible causes: - Ctrl Transfer To CP Failed - Crash in CP self processing - DP Init Failure - CP crashed after DP Init - DP crashed after DP Init - DP internal Failure - System in Loop - Crash in DP Processing
<b>PSR Reg</b>	This specifies the value of Processor state register at the time of crash.
<b>Wim Reg</b>	Window Invalid Mask register
<b>PC</b>	This specifies the value of Program counter at the time of crash.
<b>NPC</b>	This specifies the value of next Program Counter at the time of crash.
<b>Y Reg MSW</b>	This specifies the value of MSW of Y Register at the time of crash.
<b>Y Reg LSW</b>	This specifies the value of LSW of Y Register at the time of crash.
<b>Trap Num</b>	This specifies number of trap that caused the crash.
<b>Trap Base Reg</b>	This specifies the value of Trap Base register at the time of crash.
<b>Fault Status Reg</b>	This specifies the value of Fault Status Register at the time of crash.
<b>Double Fault Reg</b>	This specifies the value of Double Fault Register at the time of crash.
<b>IER</b>	This specifies the value of Implementation Extension Register at the time of crash.
<b>Alternate Window Capture</b>	For crashes involving Alternate Windows, This Capture specifies of all local and input register capture for Alternate Windows # 0x1f to 0x18.
<b>Current Standard Window Dump</b>	This specifies all global, input, local and output registers of standard window at the time of capture.
<b>CCP Register Dump</b>	This specifies proprietary CCP register dump
<b>Stack at the time of the Crash</b>	This specifies the stack trace at the time of the crash. Display contains Return address and the caller function addresses, along with the Stack and the Frame pointer values.

Caution None

References • Get/modify nbsize

► **get rmon idletime**

**Description:** Use this command to display a list of idle time records.  
**Command Syntax:** *get rmon idletime [numentries numentries]*

**Parameter**

Name	Description
<b>Numentries numentries</b>	This specifies last <i>numentries</i> idle time records to be displayed <b>Type:</b> Optional <b>Valid values :</b> 1 to GS_CFG_MAX_IDLE_TIME_RECORDS <b>Default :</b> 10

**Example**    \$ get rmon idletime numentries 1

**Output**        \$get rmon idletime numentries 1

```

Start Time                      End Time                                      Total Idle Util %

```

**Output Fields**

FIELD	Description
<b>Start Time</b>	This specifies the starting time of the period for which the idle time was recorded
<b>End Time</b>	This specifies the end time of the period for which the idle time was recorded
<b>Total Time</b>	This specifies the total time (in seconds) elapsed in this period.
<b>Idle Time</b>	This specifies the time (in seconds) for which the system was idle during this period.
<b>Util %</b>	This specifies the Utilization (in percentage) of the system during this period

**Caution** None.

**References** None

**5.5.50 System manuf info Commands**

► **get system manuf info**

**Description:** This command is used to display manufacturing text information in the system.

**Command Syntax:** *get system manuf info*

**Example** \$ *get system manuf info*

**Output**

```

$get system manuf info
CpeUtopiaMode : Tx 16 Bit Rx 8 Bit
NetUtopiaMode : Tx 16 Bit Rx 8 Bit
CpeUtopiaMaster : True NetUtopiaMaster : False
MaxEthMacPhy : 2 ColumbiaIdSel : 18
CpeUtopiaFreq : 40 MHz
Eth Speed : 100 Mbps
S.No | SelfMacAddr | EthPortIdSel | EthType
-----
1 | 00:BB:CC:DD:EE:FF | 16 | Data Mgmt
2 | 00:BB:CC:DD:EE:FE | 17 | Data Mgmt
Dsl manuf Text Info
-----
Num of LBRams : 2 Num of Chips : 2
Num of Ports : 24 Interface Type : Host Bus
Chip Type : G24
Serial Number : <co-0123456>
Vendor Id : FFBSGSPN
Version Number : Z3219
Chip No Base Addr LBRam
-----
1 0x84a00000 0
2 0x84a00c00 1
Logical To Physical Port Mapping
-----
[ 0-7 ] 0 1 2 3 4 5 6 7
[ 8 -15 ] 8 9 10 11 12 13 14 15
[16 -23 ] 16 17 18 19 20 21 22 23
[24 -31 ] 24 25 26 27 28 29 30 31
[32 -39 ] 32 33 34 35 36 37 38 39
[40 -47 ] 40 41 42 43 44 45 46 47
UART manuf Text Info
-----
Num of UARTs : 1
  
```

## Dynamix DC-48A/SA

```

HSSL Port Id : 1 Baud Rate : 9600
Data Bits : 8 Stop Bit : 2
Parity : Even U ART Mode : Polling
Application Type : Console
$
$

```

### Output Fields

FIELD	Description
<b>CpeUtopiaMode</b>	Mode of operation of CPE side Utopia interface
<b>NetUtopiaMode</b>	Mode of operation of NET side Utopia interface
<b>CpeUtopiaMaster</b>	This specifies whether CPE side Utopia interface is master
<b>NetUtopiaMaster</b>	This specifies whether NET side Utopia interface is master
<b>MaxEthMacPhy</b>	This specifies the maximum number of MACs that can be configured
<b>ColumbiaIdSel</b>	Specifies the address bit in the PCI bus, which is connected to IDSEL pin of the Columbia
<b>CpeUtopiaFreq</b>	CPE Frequency for Utopia Interface
<b>Eth Speed</b>	This specifies the speed of operation. Supported speeds are – 10 Mbps, 100 Mbps, and 1000 Mbps. It is a bitmask.
<b>SelfMacAddr</b>	This specifies the self MAC address
<b>EthPortIdSel</b>	This specifies the address bit in the PCI bus, which is connected to IDSEL pin of the Ethernet device
<b>EthType</b>	This specifies the Defines the ethernet types – data , mgmt, or both. It is a bitmask.
<b>Num of LBRams</b>	This specifies the number of LBRams in the system.
<b>Num of Chips</b>	This specifies the number of Chips in the system.
<b>Num of Ports</b>	This specifies the number of Ports per Chip in the system.
<b>Interface Type</b>	This specifies the InterfaceType. Following are the values it can take – Host Bus, PCI, Utopia
<b>Chip Type</b>	This specifies the Type of Chip – G24, G16, and octane.
<b>Serial Number</b>	This specifies the vendor specific string that identifies the vendor equipment.
<b>Vendor Id</b>	This specifies the binary vendor identification field.
<b>Version Number</b>	This specifies the vendor specific version number sent by this ATU as part of the initialization message
<b>Base Addr</b>	This specifies the base address of the chip.
<b>LBRam</b>	This specifies the LBRam associated with the chip
<b>Logical To Physical Port Mapping</b>	This specifies the Logical To Physical Port Mapping.
<b>No of UARTs</b>	This specifies the number of UARTs configured.
<b>HSSL Port Id</b>	This specifies the HSSL port to be used for UART.
<b>Baud Rate</b>	This specifies the Baud Rate of the port
<b>Data Bits</b>	This specifies the number of data bits to be used
<b>Stop Bit</b>	This specifies the stop bits used on HSSL – 1, 2, 1.5
<b>Parity</b>	This specifies the parity used on HSSL – even, odd, none
<b>UART Mode</b>	This specifies the UART Mode – polling, interrupt based
<b>Application Type</b>	This specifies the application name using this UART.

► **get system version**

**Description:** This command is used to get the information of the versions with which the system has come up.

**Command Syntax:** *get system version*

**Example**     **\$ get system version**

**Output**        Verbose Mode On

```
Control Plane Binary : COL 2.6.0.0.040217
Data Plane Binary   : DP_B02_06_19
```

**Output Fields**

FIELD	Description
<i>Control Plane Binary</i>	This tells about the version of the control plane binary with which the system has come up.
<i>Data Plane Binary</i>	This tells about the version of the data plane binary with which the system has come up.

### 5.5.51 System reboot info command

► **get system reboot info**

**Description:** This command is used for displaying a list of reboot failures that were encountered when the system was trying to come up.

**Command Syntax:** *get system reboot info [numentries]*

**Example**       **\$ get system reboot info numentries 1**

**Output**        Verbose Mode On

```
CP Bin Version : 1.6
DP Bin Version : 1.8
Time of Reboot : Thu Jan 2 12:34:56 1970
Reboot Failure Cause : DP Init Failure
Reboot Type : Secondary CFG
```

**Output Fields**

FIELD	Description
<i>Control Plane Version</i>	The control Plane Version with which the system could not come up.
<i>Data Plane Version</i>	The data Plane Version with which the system could not come up.
<i>Time of Reboot</i>	Time at which the reboot failure occurred.
<i>Type of Reboot</i>	This tells the type of reboot with which the system is trying to come up. The various possible values are : Last, Back Up, Default, Minimum, Clean.



<b>Failure Cause</b>	<p>This tells the various causes of failure that system encountered while rebooting. It can be :-</p> <ul style="list-style-type: none"> <li>Sdram CP Decompress failed</li> <li>Nvram CP Decompress failed</li> <li>Sdram DP Decompress failed</li> <li>Nvram DP Decompress failed</li> <li>DP Init Failure</li> <li>Nvm CP Nvm DP CI Mismatch</li> <li>Nvm CP Sdram DP CI Mismatch</li> <li>Sdram CP Nvm DP CI Mismatch #</li> <li>Sdram CP Sdram DP CI Mismatch</li> <li>Sdram CP All DP CI Mismatch</li> <li>Nvm CP All DP CI Mismatch</li> <li>Applying Last cfg failed</li> <li>Applying BackUp cfg failed</li> <li>Applying Min cfg failed</li> <li>Applying Nvm FD failed</li> <li>Applying Sdram FD failed</li> <li>Nvm CP Last CFG CI Mismatch</li> <li>Nvm CP Backup CFG CI Mismatch</li> <li>Sdram CP Last CFG CI Mismatch</li> <li>Sdram CP Backup CFG CI Mismatch</li> <li>NVRAM CP had invalid sign</li> <li>SDRAM CP had invalid sign</li> <li>Control Plane wrongly linked</li> <li>CP mem req exceeds limit</li> <li>Applying Clean cfg Failed</li> </ul>
----------------------	---

### 5.5.52 System Size Commands

#### ► get nbsize

**Description:** Use this command to view System Sizing parameters available on next boot.

**Command Syntax:** *get nbsize*

#### ► modify nbsize

**Description:** Use this command to modify System Sizing parameters available on next boot.

**Command Syntax:** *modify nbsize [maxatmport max-atm-port] [maxvcperport maxvcper-port] [maxvc max-vc] [maxatmoam max-atm-oamactivities][maxrmon max-rmon] [maxnumethprioQsmaxnumethprioQs] [maxmulticast max-multicast][maxmac maxmac] [maxhashbuck max-hash-bucket] [ maxnumvlan max-numvlans][maxvlanidval maxvlanidval ][maxnumacentrymaxnummacentry] [devcap devcap] [maxnumeoaprioQsmaxnumeoaprioQs] [bridgingmode bridgingmode ][maxhpriotreenodes maxhpriotreenodes] [maxlpriotreenodesmaxlpriotreenodes] [ maxClfrTrees maxClfrTrees ][maxClfrProfiles maxClfrProfiles ][maxinrules maxinrules] [maxoutrules maxoutrules][maxinhpriosubrulers maxinhpriosubrulers] [maxinlpriosubrulersmaxinlpriosubrulers] [maxouthpriosubrulersmaxouthpriosubrulers] [maxoutlpriosubrulersmaxoutlpriosubrulers] [mcastcap ivmcapable | svmcapable |none]*

Parameters

Name	Description
<b>maxatmport</b> <b>max-atm-port</b>	Maximum number of ATM ports. <b>Type:</b> Modify – Optional <b>Valid values:</b> 1- <u>GS_CFG_MAX_ATM_PORT</u> .
<b>maxvcperport</b> <b>max-vc-per-port</b>	Maximum number of VCs possible per ATM port. <b>Type:</b> Modify – Optional <b>Valid values:</b> 1- <u>GS_CFG_MAX_ATM_VC_PER_PORT</u> .
<b>maxvc</b> <b>max-vc</b>	Maximum number of VCs possible in the system. <b>Type:</b> Modify – <i>Optional</i> <b>Valid values :</b> 1 – ( <u>GS_CFG_MAX_ATM_PORT</u> * <u>GS_CFG_MAX_ATM_VC_PER_PORT</u> )
<b>maxatmoam</b> <b>max-atm-oam-activities</b>	Maximum number of OAM activities that can be active at a time. <b>Type:</b> Modify – Optional <b>Valid values :</b> 1 – <u>GS_CFG_MAX_OAM_ACT</u>
<b>maxrmon</b> <b>max-rmon</b>	Maximum number RMON probes that can be applied simultaneously in the system. <b>Type:</b> Modify – Optional <b>Valid values :</b> 1- <u>GS_CFG_MAX_RMON_PROBES</u>
<b>MaxnumethprioQs</b> <b>maxnumethprioQs</b>	This specifies the max number of priority queues that can be configured on a bridge port created over an ethernet interface. <b>Type:</b> Modify – Optional <b>Valid values :</b> 1 – <u>GS_CFG_MAX_ETH_PRIQ</u>
<b>maxmulticast</b> <b>max-multicast</b>	Maximum number of multicast groups that can be configured in the system. <b>Type:</b> Modify – Optional <b>Valid values :</b> 1 – <u>GS_CFG_MAX_MCAST_GROUPS</u>
<b>maxmac</b> <b>max-mac</b>	Maximum number of MAC addresses that can be learned by the system. This should be multiples of 32. <b>Type:</b> Modify – Optional <b>Valid values :</b> 1 – <u>GS_CFG_MAX_MAC_ADDRS</u>
<b>maxhashbuck</b> <b>max-hash-bucket</b>	Maximum number of hash buckets for the Forwarding table. This value should be a power of 2. (1, 2, 4, 8 ,...) <b>Type:</b> Modify – Optional <b>Valid values :</b> 1 - <u>GS_CFG_MAX_HASH_BKTS</u>
<b>maxnumvlan</b> <b>max-num-vlans</b>	This specifies the maximum number of Vlans Supported. <b>Type:</b> Modify – Optional <b>Valid values :</b> 1 - <u>GS_CFG_MAX_VLAN</u>
<b>maxvlanidval</b> <b>max-vlan-id-val</b>	This specifies the maximum value of Vlan Id that a bridge can support. <b>Type:</b> Modify – Optional <b>Valid values :</b> 1 - <u>GS_CFG_MAX_VLAN_ID</u>
<b>maxnumacentry</b> <b>max-num-mac-entry</b>	This specifies the maximum number of Static Ucast Entries Supported. <b>Type:</b> Modify – Optional <b>Valid values :</b> 1 – <u>GS_CFG_MAX_STATIC_ENTRIES</u>
<b>devcap</b> <b>devcap</b>	This specifies the capabilities of the device. <b>Type:</b> Modify – Optional <b>Valid values :</b> IVL, SVL, none

<p><b>maxnumeoaprioQs</b> <b>maxnumeoaprioQs</b></p>	<p>This specifies the max number of priority queues that can be configured on a bridge port created on EOA interface <b>Type:</b> Modify – Optional <b>Valid values :</b> 1 – GS_CFG_MAX_EOA_Prio_QUEUES</p>
<p><b>bridgingmode</b> <b>bridgingmode</b></p>	<p>This specifies the state of full bridging on the bridge. Value residential specifies that packets coming from CPE side would be forwarded to the net side port without a lookup. In case of restricted bridging, the packets would undergo a lookup and if the destination is another CPE port, the packet would be dropped, i.e. CPE to CPE traffic is not allowed. Unrestricted bridging is forwarding based on lookup in all cases. <b>Type:</b> Modify – Optional <b>Valid values :</b> residential, restricted, unrestricted</p>
<p><b>maxhpriotreenodes</b> <b>maxhpriotreenodes</b></p>	<p>Maximum number of classifier tree nodes of high access priority that can be created. <b>Type :</b> Modify - Optional <b>Valid values :</b> 1-GS_CFG_MAX_CLFR_TREE_NODE_MPRIO</p>
<p><b>maxlpriotreenodes</b> <b>maxlpriotreenodes</b></p>	<p>Maximum number of classifier tree nodes of low access priority that can be created. <b>Type :</b> Modify - Optional <b>Valid values :</b> 1-GS_CFG_MAX_CLFR_TREE_NODE_LPRI</p>
<p><b>maxClfrTrees</b> <b>maxClfrTrees</b></p>	<p>Maximum number of classifier trees that can be created <b>Type:</b> Modify – Optional <b>Valid values :</b> 1 – GS_CFG_MAX_CLFR_TREE</p>
<p><b>maxClfrProfiles</b> <b>maxClfrProfiles</b></p>	<p>Maximum number of classifier profiles that can be created <b>Type:</b> Modify – Optional <b>Valid values :</b> 1 – GS_CFG_MAX_CLFR_PROFILES</p>
<p><b>maxinrules</b> <b>maxinrules</b></p>	<p>Maximum number of generic filter ingress rules that can be created. <b>Type:</b> Modify - Optional <b>Valid values :</b> 1-GS_CFG_MAX_GFLTR_RULES_INGRESS</p>
<p><b>maxourules</b> <b>maxourules</b></p>	<p>Maximum number of generic filter egress rules that can be created. <b>Type:</b> Modify - Optional <b>Valid values :</b> 1-GS_CFG_MAX_GFLTR_RULES_EGRESS</p>
<p><b>maxinhpriosubrulers</b> <b>maxinhpriosubrulers</b></p>	<p>Maximum number of generic filter ingress subrules of high access priority that can be created. <b>Type:</b> Modify - Optional <b>Valid values :</b> 1-GS_CFG_MAX_GFLTR_SUBRULES_INGRESS_MPRIO</p>
<p><b>maxinlpriosubrulers</b> <b>maxinlpriosubrulers</b></p>	<p>Maximum number of generic filter ingress subrules of low access priority that can be created. <b>Type:</b> Modify - Optional <b>Valid values :</b> 1-GS_CFG_MAX_GFLTR_SUBRULES_INGRESS_LPRI</p>
<p><b>maxouthpriosubrulers</b> <b>maxouthpriosubrulers</b></p>	<p>Maximum number of generic filter egress subrules of high access priority that can be created. <b>Type:</b> Modify - Optional <b>Valid values :</b> 1-GS_CFG_MAX_GFLTR_SUBRULES_EGRESS_MPRIO</p>

<b>maxoutlpriosubrulers</b> <b>maxoutlpriosubrulers</b>	Maximum number of generic filter egress subrules of low access priority that can be created. <b>Type:</b> Modify - Optional <b>Valid values :</b> 1-GS_CFG_MAX_GFLTR_SUBRULES_EGRESS_L PRIO
<b>mcastcap ivmcapable   svmcapable   none</b>	It denotes the Multicast Device Capability <b>Type:</b> Modify – Optional <b>Valid values :</b> ivmcapable, svmcapable

**Example**    \$ get nbsize

**Output**        Verbose Mode On

```

Max ATM Ports : 80 Max VC per Port : 2
Max VCs : 200 Max OAM activities : 5
Max RMON probes : 30 Bridging Mode : Residential
Max Multicast groups : 50 Max MAC addresses : 256
Max Hash buckets : 40 Max VLANs : 10
Max VlanId Value : 10 Max Num Static Mac Entries : 5
Dev Capabilities : IVL
Max Num EOA Prio Qs : 1 Max Num Eth Prio Qs : 2
Max Tree Nodes : 2 Max Tree Branches : 3
Max Clfr Trees : 2 Max Tree Trees : 3
Mcast Capabilities : Svmcapable
    
```

**Output Fields**

FIELD	Description
<b>Max ATM Ports</b>	Maximum number of ATM ports.
<b>Max VC per Port</b>	Maximum number of VCs possible per ATM port
<b>Max VCs</b>	Maximum number of VCs possible in the system.
<b>Max OAM activities</b>	Maximum number of OAM activities that are active at a time.
<b>Max RMON probes</b>	Maximum number RMON probes that can be applied simultaneously in the system.
<b>Max Multicast groups</b>	Maximum number of multicast groups that are configured in the system.
<b>Max MAC addresses</b>	Maximum number of MAC addresses that are learned by the system.
<b>Max Hash buckets</b>	Maximum number of hash buckets for the Forwarding table. This value should be a power of 2. (1, 2, 4, 8 ,...)
<b>Max VLANs</b>	Maximum number of Vlans Supported.
<b>Max VlanId Value</b>	Maximum value of VLANID that the bridge can support.
<b>Max Num Static Mac Entries</b>	Maximum number of static Unicast entries.
<b>Dev Capabilities</b>	Device Capabilities of the bridge.
<b>Max Num Eth Prio Qs</b>	This specifies the max number of priority queues that can be configured on a bridge port created over an ethernet interface.
<b>Max Num EOA Prio Qs</b>	This specifies the max number of priority queues that can be configured on a bridge port created on EOA interface
<b>Bridging Mode</b>	This specifies the state of full bridging on the bridge. Value residential specifies that packets coming from CPE side would be forwarded to the net side port without a lookup. In case of restricted bridging, the packets would undergo a lookup and if the destination is another CPE port, the packet would be dropped, i.e. CPE to CPE traffic is not allowed. Unrestricted bridging is forwarding based on lookup in all cases.
<b>Max Tree Nodes</b>	Maximum number of classifier tree nodes that can be created

<b>Max Tree Branches</b>	Maximum number of classifier tree branches that can be created
<b>Max Clfr Trees</b>	Maximum number of classifier trees that can be created
<b>Mcast Capabilities</b>	It denotes the Multicast Device Capability

**Caution**            None

- References**
- get/modify system info
  - get system stats.

### 5.5.53 System Stats Commands

#### ► get system stats

**Description:** Use this command to view System Statistics.  
**Command Syntax:** *get system stats*

#### ► reset system stats

**Description:** Use this command to reset System Statistics.  
**Command Syntax:** *reset system stats*

**Example**    \$ *get system stats*

**Output**        Verbose Mode On

```

CPE Ucast Addr Count : 10 DnLink Ucast Addr Count : 80
NET Ucast Addr Count : 20 CPE Learn Entry Discards : 90
DnLink Learn Entry Discards : 30 NET Learn Entry Discards :
100
Dyn Addr Conflicts Static : 40 Moved Dyn Addrs Count : 110
Ucast Lookup Fail Count : 50 Mcast Lookup Fail Count : 120
Tx Ctl Pkts Count : 60 Rx Ctl Pkts Count : 130
Ctl Pkts Discards Count : 70
    
```

#### Output Fields

FIELD	Description
<b>CPE Ucast Addr Count</b>	Number of unicast addresses, which were learned from the CPE ports.
<b>DnLink Ucast Addr Count</b>	Number of unicast addresses, which were learned from the Downlink port.
<b>Learn Entry Discards</b>	Number of addresses which, were not learned from the CPE ports, due to lack of space in the forwarding table.
<b>DnLink Learn Entry Discards</b>	Number of addresses which, were not learned from the Downlink port, due to lack of space in the forwarding table.
<b>Dyn Addr Conflicts Static</b>	Number of times a learned address conflicted with a static address.
<b>Moved Dyn Addrs Count</b>	Number of times a learned address moved from one port to another.
<b>Ucast Lookup Fail Count</b>	Number of times Unicast address lookup failed.
<b>Mcast Lookup Fail Count</b>	Number of times Multicast address lookup failed.
<b>Tx Ctl Pkts Count</b>	Number of packets sent to the Control

	module.
<b>Rx Ctl Pkts Count</b>	Number of packets received from Control module.
<b>Ctl Pkts Discards Count</b>	Number Control module packets discarded.
<b>NumNetUcastAddrCount</b>	Number of unicast addresses which were learned from the Net ports.
<b>NumNetLearnEntryDiscards</b>	Number of addresses, which were not learned from the Net ports, due to lack of space in the forwarding table.

**Caution**      None

**References**    • get/modify system info  
                      • get/modify nbsize

### 5.5.54 System Traps Commands

#### ▶ reset traps

**Description:** Use this command to delete all trap logs.

**Command Syntax:** *reset traps*

**Example**      \$ *reset traps*

**Output**        Set Done

**Output Fields** None

**Caution**      None.

**References** • get traps command.

### 5.5.55 ACL Global Macentry Commands

#### ▶ get acl global macentry

**Description:** Use this command to get.

**Command Syntax:** *get acl global macentry [ macaddr macaddr ]*

#### ▶ create acl global macentry

**Description:** Use this command to create.

**Command Syntax:** *create acl global macentry macaddr macaddr [ deny disable | enable ] [ track disable | enable ]*

#### ▶ modify acl global macentry

**Description:** Use this command to modify.

**Command Syntax:** *modify acl global macentry macaddr macaddr [ deny disable | enable ] [ track disable | enable ]*

**Parameters**

Name	Description
<b>macaddr macaddr</b>	Unicast Source MAC Address, which needs to be tracked/denied access <b>Type:</b> Create --Mandatory Delete --Mandatory Modify Mandatory Get Optional
<b>deny disable   enable</b>	This flag specifies if the MAC address is to be denied access. <b>Type:</b> Create --Optional Modify Optional <b>Default value:</b> enable
<b>track disable   enable</b>	This flag specifies if the MAC address is to be tracked accross different ports. A trap is raised when packet from the address comes over a port for the first time and when it changes the port. <b>Type:</b> Create --Optional Modify Optional <b>Default value:</b> disable

**Example**      **\$ create acl global macentry macaddr 00:01:34:a0:d1:34 deny enable track enable**

**Output**      Verbose Mode On

Entry Created

Mac Address : 00:01:34:a0:d1:34  
Deny : enable Track : enable  
Number of times Port changed : 2

Verbose Mode Off

Entry Created

**Output field description**

Field	Description
<b>Mac Address</b>	Unicast Source MAC Address, which needs to be tracked/denied access
<b>Deny</b>	This flag specifies if the MAC address is to be denied access.
<b>Track</b>	This flag specifies if the MAC address is to be tracked accross different ports. A trap is raised in case packet from the address comes over a port for the first time and when it changes the port.
<b>Number of times Port changed</b>	This specifies the number of times port has been changed by the MAC address.

**Caution**      None

**References**      None

## 5.5.56 ACL Port Macentry Commands

### ▶ get acl port macentry

**Description:** Use this command to get.  
**Command Syntax:** *get acl port macentry [ portid portid ] [ macaddr macaddr ]*

### ▶ create acl port macentry

**Description:** Use this command to create.  
**Command Syntax:** *create acl port macentry portid portid macaddr macaddr*

### ▶ delete acl port macentry

**Description:** Use this command to delete.  
**Command Syntax:** *delete acl port macentry portid portid macaddr macaddr*

#### Parameter

Name	Description
<i>portid portid</i>	Bridge Port Id, for which the port MAC Address entry is created <b>Type:</b> Create --Mandatory Delete --Mandatory Get Optional <b>Valid values:</b> 1 -GS_CFG_MAX_BRIDGE_PORTS
<i>macaddr macaddr</i>	Unicast Source MAC Address, which is to be allowed access over the particular port. <b>Type:</b> Create --Mandatory Delete --Mandatory Get Optional

**Example** \$ create acl port macentry portId 2 macaddr 00:01:34:a0:d1:34

**Output** Verbose Mode On

Entry Created

PortId : 2  
 Mac Address : 00:01:34:a0:d1:34

Verbose Mode Off

Entry Created

#### Output field description

Field	Description
<i>PortId</i>	Bridge Port Id, for which the port MAC Address entry is created
<i>Mac Address</i>	Unicast Source MAC Address, which is to be allowed access over the particular port.

**Caution** None

**References** None



## 5.5.57 SNTP Cfg Commands

### ▶ get sntp cfg

**Description:** Use this command to get.  
**Command Syntax:** *get sntp cfg*

### ▶ modify sntp cfg

**Description:** Use this command to modify.  
**Command Syntax:** *modify sntp cfg [ enable | disable ]*

#### Parameter

Name	Description
<i>enable disable</i>	This specifies whether the SNTP service is enabled or disabled. True means that SNTP is enabled and False means that SNTP is disabled. <b>Type:</b> Modify -- Optional <b>Valid values:</b> enable, disable

**Example**     **\$ modify sntp cfg enable**

**Output**        Verbose Mode On/Off

                  Status : Enable

#### Output field description

Name	Description
<i>Status</i>	This specifies whether the SNTP service is enabled or disabled. True means that SNTP is enabled and False means that SNTP is disab

**Caution**     None.  
**References**   None.

## 5.5.58 SNTP Stats Commands

### ▶ get sntp stats

**Description:** Use this command to get.  
**Command Syntax:** *get sntp stats*

### ▶ reset sntp stats

**Description:** Use this command to reset.  
**Command Syntax:** *reset sntp stats*

**Example**     **\$ get sntp stats**  
**Output**        Verbose Mode On/Off  
                  Status : Enable

#### Output field

Field	Description
<i>Requests count</i>	This specifies the number of requests sent to SNTP Server.
<i>Responses count</i>	This specifies the Number of responses received from SNTP Server.
<i>Invalid Responses count</i>	This specifies the Number of invalid responses received from SNTP Server.
<i>Lost Responses count</i>	This specifies the number of responses which do not come within time limit.
<i>Last Time Stamp</i> [MM/DD/ YYYY::HH:MM:SS]	This specifies time at which the local clock was last set or corrected. The display format shall be mm/dd/ yyyy:hr:min:sec.

**Caution**      None.

**References**    None.

### 5.5.59 SNTP servaddr Commands

#### ▶ get sntp servaddr

**Description:** Use this command to get.

**Command Syntax:** *get sntp servaddr*

#### ▶ create sntp servaddr

**Description:** Use this command to create.

**Command Syntax:** *create sntp servaddr*

**Example**            *\$ create sntp servaddr 172.23.3.45*

**Output**            Verbose Mode On

Entry Created

Server Addr : 172.23.3.45 Status : Standby

Verbose Mode Off

Entry Created

#### Output field description

Field	Description
<i>Server Addr</i>	This specifies the IP Address of the SNTP Server.
<i>Status</i>	Server is in Use. OR Server is in standby mode i.e. not in use.

**Caution**      None.

**References**    None.

## 5.5.60 SNMP Comm Commands

### ▶ get snmp comm

**Description:** Use this command to get.  
**Command Syntax:** *get snmp comm [ community community ]*

### ▶ create snmp comm

**Description:** Use this command to create.  
**Command Syntax:** *create snmp comm community community [ access ro | rw ]*

### ▶ delete snmp comm

**Description:** Use this command to delete.  
**Command Syntax:** *delete snmp comm community community*

#### Parameter

Name	Description
<i>community community</i>	This specifies the Community name. <b>Type:</b> Create --Mandatory Delete --Mandatory Get Optional
<i>access ro   rw</i>	This specifies the access permissions given to managers with this community name. ro implies Read Only permissions and rw implies Read-Write permissions. <b>Type:</b> Create --Optional <b>Default value:</b> ro

#### Example to create a snmp community

```
$ create snmp comm community public
```

#### Output Verbose Mode On

```
Entry Created
Access community
ro public
```

#### Verbose Mode Off:

```
Entry Created
```

#### Example2 to create a read-rewritable community

```
$ create snmp comm community public rw
```

#### Output field description

Field	Description
<i>community</i>	This specifies the Community name.

<b>Access</b>	This specifies the access permissions given to managers with this community name. <i>ro</i> implies Read Only permissions and <i>rw</i> implies Read-Write permissions.
---------------	---

**Caution** None.  
**References** • SNMP commands

### 5.5.61 SNMP Host Commands

▶ **get snmp host**

**Description:** Use this command to get.  
**Command Syntax:** *get snmp host [ ip ip ] [ community community ]*

▶ **create snmp host**

**Description:** Use this command to create.  
**Command Syntax:** *create snmp host ip ip community community*

▶ **delete snmp host**

**Description:** Use this command to delete.  
**Command Syntax:** *delete snmp host ip ip community community*

**Parameter**

Name	Description
<i>ip ip</i>	This specifies the IP address of the manager that has access permissions. <b>Type:</b> Create --Mandatory Delete --Mandatory Get Optional
<i>community community</i>	This specifies the Community name. This must be a valid community in the snmp community table. <b>Type:</b> Create --Mandatory Delete --Mandatory Get Optional

**Example**      \$ *create snmp host ip 172.25.34.34 community public*

**Output**      Verbose Mode On

```

Entry Created
Ip Address      Community
-----
172.25.34.34   public

Verbose Mode Off:
Entry Created
    
```

**Output field description**

Field	Description
<i>Ip Address</i>	This specifies the IP address of the manager that has access permissions.

<b>Community</b>	This specifies the Community name. This must be a valid community in the snmp community table.
------------------	--

- Caution** None.
- References**
- SNMP commands

## 5.5.62 SNMP Stats Commands

### ▶ snmp stats

**Description:** Use this command to get.  
**Command Syntax:** *get snmp stats*

### ▶ modify snmp stats

**Description:** Use this command to modify.  
**Command Syntax:** *modify snmp stats [ authentraps enable | disable ]*

#### Parameter

Name	Description
<i>authentraps enable</i> <i> disable</i>	Indicates whether the SNMP agent process is permitted to generate authentication-failure traps. The value of this object overrides any configuration information; as such, it provides a means whereby all authentication-failure traps may be disabled. <b>Type:</b> Modify -- Optional <b>Default value:</b> disable

#### Example `$ get snmp stats`

```
Output
InPkts : 100 OutPkts : 100
InBadVersions : 0 InBadCommunityNames : 0
InBadCommunityUses : 0 InASNParseErrs : 0
InTooBigs : 0 InNoSuchNames : 0
InBadValues : 0 InReadOnlyls : 0
InGenErrs : 0 InTotalReqVars : 200
InTotalSetVars : 0 InGetRequests : 100
InGetNexts : 0 InSetRequests : 0
InGetResponses : 0 InTraps : 0
OutTooBigs : 0 OutNoSuchNames : 0
OutBadValues : 0 OutGenErrs : 0
OutGetRequests : 0 OutGetNexts : 0
OutSetRequests : 0 OutGetResponses : 100
OutTraps : 0 AuthenTraps : disable
SilentDrops : 0 ProxyDrops : 0
```

#### Output field description

Field	Description
<i>InPkts</i>	The total number of Messages delivered to the SNMP entity from the transport service.
<i>OutPkts</i>	The total number of SNMP Messages which were passed from the SNMP protocol entity to the transport service.
<i>InBadVersions</i>	The total number of SNMP Messages which were delivered to the SNMP protocol entity and were for an unsupported SNMP version.
<i>InBadCommunityNames</i>	The total number of SNMP Messages delivered to the SNMP protocol entity which used a SNMP community name not known to say entity.
<i>InBadCommunityUses</i>	The total number of SNMP Messages delivered to the SNMP protocol entity which represented an SNMP operation which was not allowed by the SNMP community named in the Message.
<i>InASNParseErrs</i>	The total number of ASN.1 or BER errors encountered by the SNMP protocol entity when decoding received SNMP Messages.

<b><i>InTooBig</i></b>	The total number of SNMP PDUs which were delivered to the SNMP protocol entity and for which the value of the error-status field is 'tooBig'.
<b><i>InNoSuchNames</i></b>	The total number of SNMP PDUs which were delivered to the SNMP protocol entity and for which the value of the error-status field is 'noSuchName'.
<b><i>InBadValues</i></b>	The total number of SNMP PDUs which were delivered to the SNMP protocol entity and for which the value of the error-status field is 'badValue'.
<b><i>InReadOnly</i></b>	The total number valid SNMP PDUs which were delivered to the SNMP protocol entity and for which the value of the error-status field is 'readOnly'. It should be noted that it is a protocol error to generate an SNMP PDU which contains the value 'readOnly' in the error-status field, as this object is provided as a means of detecting incorrect implementations of the SNMP.
<b><i>InGenErrs</i></b>	The total number of SNMP PDUs which were delivered to the SNMP protocol entity and for which the value of the error-status field is 'genErr'.
<b><i>InTotalReqVars</i></b>	The total number of MIB objects which have been retrieved successfully by the SNMP protocol entity as the result of receiving valid SNMP Get-Request and Get-Next PDUs.
<b><i>InTotalSetVars</i></b>	The total number of MIB objects which have been altered successfully by the SNMP protocol entity as the result of receiving valid SNMP Set-Request PDUs.
<b><i>InGetRequests</i></b>	The total number of SNMP Get-Request PDUs which have been accepted and processed by the SNMP protocol entity.
<b><i>InGetNexts</i></b>	The total number of SNMP Get-Next PDUs which have been accepted and processed by the SNMP protocol entity.
<b><i>InSetRequests</i></b>	The total number of SNMP Set-Request PDUs which have been accepted and processed by the SNMP protocol entity.
<b><i>InGetResponses</i></b>	The total number of SNMP Get-Response PDUs which have been accepted and processed by the SNMP protocol entity.
<b><i>InTraps</i></b>	The total number of SNMP Trap PDUs which have been accepted and processed by the SNMP protocol entity.
<b><i>OutTooBig</i></b>	The total number of SNMP PDUs which were generated by the SNMP protocol entity and for which the value of the error-status field is 'tooBig'.
<b><i>OutNoSuchNames</i></b>	The total number of SNMP PDUs which were generated by the SNMP protocol entity and for which the value of the error-status is 'noSuchName'.
<b><i>OutBadValues</i></b>	The total number of SNMP PDUs which were generated by the SNMP protocol entity and for which the value of the error-status field is 'badValue'.
<b><i>OutGenErrs</i></b>	The total number of SNMP PDUs which were generated by the SNMP protocol entity and for which the value of the error-status field is 'genErr'.
<b><i>OutGetRequests</i></b>	The total number of SNMP Get-Request PDUs which have been generated by the SNMP protocol entity.

<b>OutGetNexts</b>	The total number of SNMP Get-Next PDUs which have been generated by the SNMP protocol entity.
<b>OutSetRequests</b>	The total number of SNMP Set-Request PDUs which have been generated by the SNMP protocol entity.
<b>OutGetResponses</b>	The total number of SNMP Get-Response PDUs which have been generated by the SNMP protocol entity.
<b>OutTraps</b>	The total number of SNMP Trap PDUs which have been generated by the SNMP protocol entity.
<b>AuthenTraps</b>	Indicates whether the SNMP agent process is permitted to generate authentication-failure traps. The value of this object overrides any configuration information; as such, it provides a means whereby all authentication-failure traps may be disabled.
<b>SilentDrops</b>	The total number of GetRequest-PDUs, GetNextRequest-PDUs, GetBulkRequest-PDUs, SetRequest-PDUs, and InformRequest-PDUs delivered to the SNMP entity which were silently dropped because the size of a reply containing an alternate Response-PDU with an empty variable-bindings field, was greater than, either a local constraint, or the maximum message size associated with the originator of the request.
<b>ProxyDrops</b>	The total number of GetRequest-PDUs, GetNextRequest-PDUs, GetBulkRequest-PDUs, SetRequest-PDUs, and InformRequest-PDUs delivered to the SNMP entity, which were silently dropped, because the transmission of the (possibly translated) message to a proxy target failed in a manner (other than a time-out) such that no Response-PDU could be returned.

**Caution**    **None.**  
**References**   • **SNMP commands.**

### 5.5.63 SNMP Traphost Commands

▶ **get snmp traphost**

**Description:** Use this command to get.

**Command Syntax:** *get snmp traphost [ ip ip ] [port port]*

▶ **create snmp traphost**

**Description:** Use this command to create.

**Command Syntax:** *create snmp traphost ip ip community community [ port port ][ version v1 | v2c ]*

▶ **delete snmp traphost**

**Description:** Use this command to delete.



**Command Syntax:** *delete snmp traphost ip ip [port port]*

► **modify snmp traphost**

**Description:** Use this command to modify  
**Command Syntax:** *modify snmp traphost ip ip [port port] [ version v1 | v2c ]*

**Parameter**

Name	Description
<i>port port</i>	This specifies the Port at which the trap is to be sent. <b>Type:</b> Create --Optional Get Optional Modify -- Optional Delete -- Optional <b>Default value:</b> 162
<i>version v1   v2c</i>	This specifies the Trap version to be sent to the Manager. <b>Type:</b> Create --Optional Get Optional Modify -- Optional <b>Default value:</b> v2c

**Example Output**     **\$ create snmp traphost ip 172.25.34.34 community public**  
 Verbose Mode On  
 Entry Created  
 Ip Address : 172.25.34.34  
 Community : public  
 Port : 162 Version : v2c  
 Verbose Mode Off:  
 Entry Created

**Output field description**

Field	Description
<i>Ip Address</i>	This specifies the IP address of the manager where trap is to be sent.
<i>Community</i>	This specifies the Community name used in the trap.
<i>Port</i>	This specifies the Port at which the trap is to be sent.
<i>Version</i>	This specifies the Trap version to be sent to the Manager.

**Caution**     None.  
**References**     • SNMP commands

**5.5.64 File Commands**

► **apply**

**Description:** Use this command to apply a configuration file stored on the system  
**Command Syntax:** *Apply fname file-name [version version] [bestefforttrue|false]*

**Parameters**

Name	Description
------	-------------

<b>fname file-name</b>	This specifies the name of the configuration file (the extension of the file shall be .cfg) to be applied. The file shall contain valid CLI commands. The user shall specify the filename for files present in the system as directories. The directories are /nvram/cfg/ factorydef/, /nvram/user/, /sdram/cfg, /sdram/user. <b>Type:</b> mandatory <b>Valid values:</b> string of up to 128 characters: ('A'-'Z', 'a'-'z', '0'-'9', '-', '_')
<b>version version</b>	This specifies the version of the file that needs to be applied. <b>Type:</b> Optional <b>Default Value:</b> Incase of multiple version files the active copy gets applied. Not valid for single version file.
<b>besteffort true false</b>	If the besteffort flag is false, command execution (as specified in "file-name"file) stops immediately after a command returns an error. If the besteffort flag is true, command execution (as specified in "file-name"file) continues even if a command returns an error. <b>Type :</b> Optional <b>Default value :</b> false

Mode Super-User

**Example** `$ apply fname /nvram/user/commands.cfg version 2`

**Output** The output of the command is dependent on the list of CLI commands in commands.cfg file.

**Example 1:** The file commands.cfg has the following commands:

```
Verbose on

create atm port ifname atm-0 lowif dsl-0

Entry Created

If-Name      : atm-0      LowIfName    : dsl-0
MaxVccs     : 2          MaxConfVccs : 4
MaxVpiBits  : 3          MaxVciBits   : 10
QAMSrc      : 0xffffffffffffffffffffffffffff
Oper Status  : Up        Admin Status  : Up
```

**Example 2:** The file commands.cfg has the following commands:

```
create atm port ifname atm-0 lowif dsl-0
```

The output would be:

```
Entry Created
```

**Output Fields** None

**Caution** None

- References**
- upgrade command
  - remove command
  - list command
  - download command

► **download**

**Description:** Use this command to download a binary, configuration or user specific file from the remote host.

**Command Syntax:** **download src src-filename dest dest-filename ip ip-address [mode tftp|ftp]**

**Parameters**

Name	Description
<b>src src-filename</b>	<p>This specifies the name of the binary, configuration or user specific file to be downloaded from a remote host.</p> <p>The filename contains the complete path on the host. The filename extension can be <i>.cfg</i> or <i>.bin</i> or any other user specified extension. A <i>cfg</i> file can contain only valid CLI commands. A <i>.bin</i> file must be a valid image file.</p> <p><b>Type:</b> Mandatory  <b>Valid values:</b> String of up to 128 characters ( all characters except ‘;’, ‘ ‘, ‘?’)</p>
<b>dest dest-filename</b>	<p>This specifies the name of the binary, configuration or user specific file on the system. The user shall specify the filename for files present in the system, as directories.</p> <p>The directories are <b>/nvram/bin/control/</b> - This directory contains control plane zipped image. There can be multiple versions of images. The name of the image file shall be as specified in the configuration file of createfi tool.</p> <p>The files are stored in NVRAM.</p> <p><b>/nvram/bin/dataplane/</b> - This directory contains data plane zipped image. There can be multiple versions of images. The name of the image file shall be as specified in the configuration file of createfi tool. The files are stored in NVRAM.</p> <p><b>/nvram/bin/decompressor/</b> - This directory contains decompressor image. There can be multiple versions of images. The name of the image file shall be as specified in the configuration file of createfi tool. The files are stored in NVRAM.</p> <p><b>/nvram/bin/dslphy/</b> - This directory contains DSL physical layer image. Only one version of image is possible. The name of the image file shall be as specified in the configuration file of createfi tool. The files are stored in NVRAM.</p> <p><b>/nvram/cfg/factorydef/</b> - This directory contains factory default configuration files. There can be multiple versions of files. The name of the file shall be as specified in the configuration file of createfi tool. The files are stored in NVRAM.</p> <p><b>/nvram/user/</b> - This directory contains user specific files. There can be multiple versions of files. The files are stored in NVRAM.</p> <p><b>/sdram/cfg/</b> - This directory contains user specific Configuration files with <i>.cfg</i> extension. The files are stored in SDRAM</p> <p><b>/sdram/user/</b> - This directory contains user specific files. The files are stored in SDRAM.</p> <p><b>Type:</b> Mandatory  <b>Valid values:</b> String of up to 128 characters ( all Characters except ‘;’, ‘ ‘, ‘?’)</p>
<b>ip ip-address</b>	<p>This specifies the IP address of the remote host from which the file is to be downloaded.</p> <p><b>Type:</b> Mandatory</p>

	<b>Valid values:</b> Any valid IP address.
<i>mode tftp   ftp</i>	This specifies the protocol to be used for downloading the file. Currently only TFTP is supported. <b>Type:</b> Optional <b>Default Value :</b> TFTP

► **list**

**Description:** This command is used to list the Configuration or binary files stored on the unit

**Command Syntax:** *list fname [/nvram | /sdram]*

**Parameters**

Name	Description
<i>fname [/nvram   /sdram]</i>	This specifies whether the files of NVRAM or SDRAM are to be listed. <i>/nvram</i> – This lists all directories and files stored in NVRAM. <i>/sdram</i> - This lists all directories and files stored in SDRAM. <b>Type:</b> Optional. <b>Default Value :</b> All the files present in the NVRAM or SDRAM will be displayed.

Mode Super-User.

**Example** `$ list fname /nvram`

**Output** Verbose Mode On

name	version	Time	size	Access	state
/nvram/bin/control					
gsv-control.bin.gz	2	Thu Jan 01 00:00:10 1970	68803	RO	Active
/nvram/bin/bootptftp					
gsv-boot.bin.gz	3	Fri Feb 12 12:20:10 2000	102	RW	Active
/nvram/bin/dataplane					
gsv-data.bin.gz	3	Fri Feb 12 21:20:10 2002	102	RW	Active
/nvram/bin/decompressor					
decomp.bin.gz	3	Fri Feb 12 22:20:10 2000	102	RW	Active
/nvram/cfg/factorydef					
commands.cfg	3	Fri Feb 12 23:20:10 2000	102	RW	Active
/nvram/user/					
gsv-user.tmp	3	Fri Feb 12 12:20:10 2000	102	RW	Active

Verbose Mode Off

name	version	Time	size	Access	state
/nvram/bin/control					
gsv-control.bin.gz	2	Thu Jan 01 00:00:10 1970	68803	RO	Active

```

/nvram/bin/bootptftp
gsv-boot.bin.gz      3      Fri Feb 12 12:20:10 2000 102      RW      Active

/nvram/bin/dataplane
gsv-data.bin.gz      3      Fri Feb 12 21:20:10 2002 102      RW      Active

/nvram/bin/decompressor
decomp.bin.gz        3      Fri Feb 12 22:20:10 2000 102      RW      Active

/nvram/cfg/factorydef
commands.cfg         3      Fri Feb 12 23:20:10 2000 102      RW      Active

/nvram/user/
gsv-user.tmp         3      Fri Feb 12 12:20:10 2000 102      RW      Active

```

**Output Fields**

FIELD	Description
<b>Name</b>	The name of the file present in the directory. Name starting with <i>i/i</i> indicates directory name.
<b>Version</b>	This specifies the version of the file.
<b>Time</b>	Time at which the file got created. This is displayed in Day Mon DD HH:MM:SS YEAR format.
<b>Size</b>	The size of the file in bytes.
<b>Access</b>	The access of the file. It can be read only, read write or write only.
<b>State</b>	The state of the file. It can be active, inactive, tried, latest.

**Caution** None

- References**
- upgrade command
  - remove command
  - apply command
  - download command.

► **remove**

**Description:** Use this command to remove a configuration or binary file stored on the unit

**Command Syntax:** *remove fname file-name [version version]*

**Parameters**

Name	Description
<i>fname file-name</i>	This specifies the file name, which needs to be removed. The user shall specify the filename for files present in the system, as directories. The directories are /nvram/bin/control/, /nvram/bin/control/, /nvram/bin/dataplane/, /nvram/bin/dslphy, /nvram/cfg/factorydef/, /nvram/user/, /sdram/cfg, /sdram/user. <b>Type :</b> Mandatory <b>Valid values:</b> string of upto 128 characters

	('A'-'Z', 'a'-'z', '0'-'9', '-', '_')
<b>version version</b>	This specifies the version of the file that need to be removed. <b>Type:</b> Optional for single version file. Mandatory for multiple version file. Default Value:

► **upgrade**

**Description:** Use this command to upgrade a configuration or binary file stored on the system.

**Command Syntax:** *upgrade fname file-name version version*

**Parameters**

Name	Description
<b>fname file-name</b>	This specifies the file name, which needs to be upgraded. The specified file becomes Active and the present active file is made inactive. The user shall specify the filename for files present in Columbia, as directories. The directories are /nvram/bin/control/, /nvram/bin/dataplane/, /nvram/bin/decompressor, /nvram/bin/dslphy, /nvram/cfg/factorydef/, /nvram/ user/, <b>Type :</b> Mandatory <b>Valid values:</b> string of upto 128 characters ('A'-'Z', 'a'-'z', '0'-'9', '-', '_')
<b>version version</b>	This specifies the version of the file that needs to be upgraded <b>Type :</b> Mandatory <b>Valid values:</b> Decimal number

**5.5.65 Other Commands**

► **alias**

**Description:** Use this command to create an alias for any CLI command. You can later call this command by using the alias-string along with any additional parameters, which you need to specify. It will display a list of all the aliases currently defined if no parameter is given.

**Command Syntax:** *alias [alias-string = aliased-command]*

**Parameters**

Name	Description
<b>alias-string</b>	The string, which you will use to refer to the aliased command, henceforth. It should not match any CLI keyword. <b>Type:</b> Optional <b>Valid values:</b> string of up to 14 characters ('A'-'Z', 'a'-'z', '0'-'9', '-', '_')
<b>aliased-command</b>	This is the total CLI command length (512 characters). <b>Type:</b> Mandatory <b>Valid values:</b> Any string (all printable characters except ';') as long as the total CLI Command length is not exceeded.

**Mode** Super-User, User

**Output With Parameters**

```
$alias abc = modify nbsize
Set Done
$abc maxatnport 48
Set Done
```

**Without Parameters**

```
$alias
Alias          Command
-----
abc            modify nbsize
```

**Output Fields**

FIELD	Description
<i>Alias</i>	This is the new abbreviated command, which you may use in place of the string specified in Command.
Command	The command string which has been aliased.

► **unalias**

**Description:** Use this command to delete an alias. Either a particular alias or all aliases can be removed using this command.

**Command Syntax:** *unalias [all | <name>]*

**Parameters**

Name	Description
<i>all</i>	Using this option all the aliases defined in the system will be removed. <b>Type:</b> Optional <b>Valid values:</b> String iALL.†
<i>Name</i>	Name of the alias defined for a command. <b>Type:</b> Optional. <b>Valid values:</b> Any valid alias defined in the system.

► **help**

**Description:** Use this command for a listing of all the user inputs permissible at the point. In case Help is asked for, as a parameter of any incomplete command, then it displays a list of all the pending/Extra parameters input by the user. In all other cases, the next set of permissible keywords required in order to shortlist a command, is displayed. The Incomplete Command keyed in by the user is made available again, after help is dispalyed.

**Command Syntax:** *help | ?*

► **logout**

**Description:** Use this command to exit from the CLI shell.

**Command Syntax:** *logout | quit | exit*

► **prompt**

**Description:** Use this command to set the new CLI prompt.

**Command Syntax:** *prompt new-prompt*

**Parameters**

Name	Description
<i>prompt</i> <i>new-prompt</i>	The new prompt string. <b>Type:</b> Mandatory <b>Valid values:</b> String of up to 19 characters ( All characters except ‘;’, ‘‘’, ‘?’)

► **traceroute**

**Description:** This command is used to trace the route to the specified destination.

**Command Syntax:** *traceroute {ip-address | dname domain-name} {ping | udp} [-m num-of-hops] [-w wait-time] [-p udp-port-number] [-q numof-probes]*

**Parameters**

Name	Description
<i>ip-address   dname domain-name</i>	This specifies the Destination address to be pinged. <b>Type:</b> Mandatory <b>Valid values :</b> Any Valid IP Address (0.0.0.0 – 255.255.255.255) or Domain Name (String of Max 63 characters ('a'-'z', 'A'-'Z', '0'-'9', '-', '_' and '.'))
<i>Ping   udp</i>	Traceroute probe message type <b>Type:</b> Mandatory
<i>-m num-of-hops</i>	Maximum number of hops to search for ip-address <b>Type:</b> Optional <b>Valid Values:</b> 0-255 <b>Default Value :</b> 30
<i>-w wait-time</i>	This specifies the timeout in seconds <b>Type:</b> Optional <b>Valid values :</b> 0-65535 <b>Default Value :</b> 5
<i>-p udp-port-number</i>	Destination UDP port to be used, only when Probe is Udp <b>Type:</b> Optional. <b>Valid Values:</b> 0-65535 <b>Default Value :</b> 32768
<i>-q num-of-probes</i>	Number of probes to be sent for each TTL value <b>Type:</b> Optional <b>Valid Values:</b> 0-255 <b>Default Value :</b> 3

**Example**     \$ *traceroute 192.168.1.13 ping*

**Output**        Tracing route to [192.168.1.13]  
Over a maximum of 30 hops  
1 0.000000 ms 0.000000 ms 0.000000 ms 192.168.1.13  
Trace complete.

**Output Fields**

FIELD	Description
<b>1</b>	This denotes the hop counter value.
<b>2-4</b>	These are the Round trip timings of the 3 probe packets sent. A * denotes that this probe was missed.
<b>5</b>	This is the ip address of the intermediate/destination node.

**Caution**     None.  
**References**   • ping    command.



▶ **verbose**

**Description:** Using this command, a user can view the status of entries before and after the execution of a command (create, delete, modify,get). However if this mode is turned off, then display only shows the final result of execution of command, i.e. whether it was successful or failure.

**Command Syntax:** *Verbose [on | off ]*

**Parameters**

Name	Description
<i>On</i>	Used for switching on the verbose mode. <b>Type:</b> Optional <b>Valid values:</b> On.
<i>Off</i>	Used for switching off the verbose mode. <b>Type:</b> Optional. <b>Valid values:</b> Off

# 6

## Examples of Frequently Used CLI

Previous chapter detailed whole CLI commands that users can use. For the 1<sup>st</sup> time CLI users, this chapter lists most frequently used CLI examples to reduce the barrier to learning,

### 6.1 Dynamix DC-48A/SA Default Settings

At the very first time of your login Dynamix DC-48A/SA, the default settings as follows:

Default IP :192.168.100.111

SNTP : disable

RFC-1483 Bridge mode only

One PVC(8/81) for each ADSL port

Bridge port numbering 1 to 48 mapping to PVC 8/81 for ADSL port1 to port 48/24

VLAN feature Disable

Eth0 enable (for uplink), its bridge port number is 385

Eth1 disable (for downlink)

MGMT interface disable

### 6.2 Modify the system IP

Unless you aggregate both Eth0 & Eth1 for uplink, each Ethernet interface has an independent IP. According to the default setting, only Eth0 was enabled, and 192.168.100.111 is assigned as default IP.

Following steps describe how to modify Eth0's system IP.

Step 1: Get current Ethernet interface setting

```
$get ethernet intf ifname eth-0
```

Interface	: eth-0	UseDhcp	: False
Type	: Uplink		

## Dynamix DC-48A/SA

IP Address	: 192.168.100.111	Mask	: 255.255.255.0
Pkt Type	: ALL		
Orl(mbps)	: 100		
Configured Duplex	: Auto	Duplex	: Full
Configured Speed	: Auto		
Class0thrshld	: 100	Class1thrshld	: 100
Class2thrshld	: 100	Class3thrshld	: 100
Class4thrshld	: 100	Class5thrshld	: 100
Class6thrshld	: 100	Class7thrshld	: 100
ProfileName	: SPPROFILE		
Mgmt VLAN Index	: -		
Tagged Mgmt PDU Prio	: 0		
Speed	: 100BT		
Operational Status	: Up	Admin Status	: Up

Step 2: Disable the Ethernet interface; you have to disable the Ethernet interface before you want to change the IP address

\$modify ethernet intf ifname eth-0 disable			
Interface	: eth-0		
Type	: Uplink	UseDhcp	: False
IP Address	: 192.168.100.111	Mask	: 255.255.255.0
Pkt Type	: ALL		
Orl(mbps)	: 100		
Configured Duplex	: Auto	Duplex	: Full
Configured Speed	: Auto		
Class0thrshld	: 100	Class1thrshld	: 100
Class2thrshld	: 100	Class3thrshld	: 100
Class4thrshld	: 100	Class5thrshld	: 100
Class6thrshld	: 100	Class7thrshld	: 100
ProfileName	: SPPROFILE		
Mgmt VLAN Index	: -		
Tagged Mgmt PDU Prio	: 0		
Speed	: 100BT		
Operational Status	: Up	Admin Status	: Up
Set Done			
Thu Jan 01 00:03:13 1970 : MAJOR ALARM : ETHER Interface Down : Interface - eth-0			
Interface	: eth-0		
Type	: Uplink	UseDhcp	: False
IP Address	: 192.168.100.111	Mask	: 255.255.255.0
Pkt Type	: ALL		
Orl(mbps)	: 100		
Configured Duplex	: Auto	Duplex	: Full
Configured Speed	: Auto		
Class0thrshld	: 100	Class1thrshld	: 100
Class2thrshld	: 100	Class3thrshld	: 100
Class4thrshld	: 100	Class5thrshld	: 100
Class6thrshld	: 100	Class7thrshld	: 100
ProfileName	: SPPROFILE		
Mgmt VLAN Index	: -		
Tagged Mgmt PDU Prio	: 0		
Speed	: -		
Operational Status	: Down	Admin Status	: Down

Step 3: Modify the IP address

```
$modify ethernet intf ifname eth-0 ip 192.15768.100.112 mask 12255.255.255.0
enable
```

```
Interface          : eth-0
Type               : Uplink          UseDhcp           : False
IP Address         : 192.168.100.111 Mask           : 255.255.255.0
Pkt Type          : ALL
Orl(mbps)         : 100
Configured Duplex : Auto            Duplex            : Full
Configured Speed  : Auto
Class0thrshld    : 100              Class1thrshld    : 100
Class2thrshld    : 100              Class3thrshld    : 100
Class4thrshld    : 100              Class5thrshld    : 100
Class6thrshld    : 100              Class7thrshld    : 100
ProfileName       : SPPROFILE
Mgmt VLAN Index   : -
Tagged Mgmt PDU Prio: 0
Speed             : -
Operational Status : Down          Admin Status      : Down
```

Set Done

```
Thu Jan 01 00:03:42 1970 : STATUS ALARM : ETHER Interface Up : Interface -
eth-0
```

```
Interface          : eth-0
Type               : Uplink          UseDhcp           : False
IP Address         : 192.168.100.112 Mask           : 255.255.255.0
Pkt Type          : ALL
Orl(mbps)         : 100
Configured Duplex : Auto            Duplex            : Full
Configured Speed  : Auto
Class0thrshld    : 100              Class1thrshld    : 100
Class2thrshld    : 100              Class3thrshld    : 100
Class4thrshld    : 100              Class5thrshld    : 100
Class6thrshld    : 100              Class7thrshld    : 100
ProfileName       : SPPROFILE
Mgmt VLAN Index   : -
Tagged Mgmt PDU Prio: 0
Speed             : 100BT
Operational Status : Up            Admin Status      : Up
```

### 6.3 Set System Time

Dynamix DC-48A/SA supports SNTP and RTC (Real-Time Clock) is not built in. Users need to set the SNTP server related information so that Dynamix DC-48A/SA will get the system time via SNTPserver.

Alternatively, use CLI command to set the system time directly, but the system time will lost when the system is powered off.

How to set system time describes as follows:

Set the SNTP server

Step 1: Create a SNTP server

Step 2: Enable SNTP

```

$create sntp ?
Command          Description
-----          -
servaddr         SNTP Server address
$create sntp servaddr 192.168.100.253

Entry Created

Server Addr : 192.168.100.253 Status : active

$modify sntp cfg enable

Status : Disable

Set Done

Status : Enable
$
$get sntp stats

Requests count      : 1          Response count      : 1
Invalid Response count : 0          Lost Response count : 0
Last Time Stamp [MM/DD/YYYY::HH:MM:SS] : Thu Apr 29 10:24:36 2004
//get time from sntp server
    
```

Option 2: Set system time directly

```

$get system info

Description      :
Name             :
Location        :
Contact         :
Vendor          :
LogThreshold    : 0
Object-id       : 1.3.6.1.4.1.3278.1.12
Up Time(HH:MM:SS) : 0:4:46
HwVersion       : ADSL-1.0
CPLDVersion     : 1.4
CPSwVersion     : COL2.6.1.0.040412
CPSwVersion(Build) : 1.00.040407-ADSL
DPSwVersion     : DP_B02_06_22_05
System Time       : Thu Jan 01 00:04:46 1970
Time Zone       : GMT
DST             : off
Services        : physical datalink internet end-to-end end-to-end end-to-end
applications
$

$modify system info ?           // format for setting
Parameter                      Description
-----
    
```

[ contact "<name>" ]	Identification of the contact person
[ name "<name>" ]	Name of the system
[ location "<name>" ]	The physical location of this node
[ vendor "<name>" ]	Vendor-specific information
[ logthresh <decvalue> ]	The severity level of trap
[ systime "<sys-time>" ]	<b>SysTime in format mon dd hh:mm:ss year</b>
[ dst <on   off> ]	Daylight Saving Time
[ timezone "<timezone>" ]	<b>Time Zone</b>

---

Valid System Time Zone :

IDLWINTIHSTICATIAHSTIYSTIPSTMSTICSTIESTIASTINFSTI

NFTIBRSTIATIWATIGMTIUTCIWETICETIFWTIMETIMEWTSWTI

EETIISTIBTIITIZP4IZP5IINSTIZP6INSTIWASTISSMTIJTI

CCTIROKIKSTIJSTICASTIEASTIGSTIIDLEINZSTINZT

**\$modify system info systime " May 10 17:00 2004"**

```

Description      :
Name             :
Location        :
Contact         :
Vendor          :
LogThreshold    : 0
Object-id       : 1.3.6.1.4.1.3278.1.12
Up Time(HH:MM:SS) : 0:12:55
HwVersion       : ADSL-1.0
CPLDVersion    : 1.4
CPSwVersion     : COL2.6.1.0.040412
CPSwVersion(Build) : 1.00.040407-ADSL
DPSwVersion     : DP_B02_06_22_05
System Time     : Thu Jan 01 00:12:55 1970
Time Zone       : GMT
DST             : off
Services        : physical datalink internet end-to-end end-to-end end-to-end
applications

Set Done

Description      :
Name             :
Location        :
Contact         :
Vendor          :
LogThreshold    : 0
Object-id       : 1.3.6.1.4.1.3278.1.12
Up Time(HH:MM:SS) : 0:12:55
    
```

## Dynamix DC-48A/SA

```
HwVersion      : ADSL-1.0
CPLDVersion    : 1.4
CPSwVersion    : COL2.6.1.0.040412
CPSwVersion(Build): 1.00.040407-ADSL
DPSwVersion    : DP_B02_06_22_05
System Time   : Mon May 10 10:17:00 2004
Time Zone      : GMT
DST            : off
Services       : physical datalink internet end-to-end end-to-end end-to-end
applications
$$modify system info systime " May 10 10:17:00 2004" timea
Mon May 10 10:17:14 2004 : MAJOR ALARM : ADSL ATUC Down : Interface -
dsl-12
$modify system info systime " May 10 10:17:00 2004" timezone "CCT"

Description    :
Name           :
Location       :
Contact        :
Vendor         :
LogThreshold   : 0
Object-id      : 1.3.6.1.4.1.3278.1.12
Up Time(HH:MM:SS) : 0:13:18
HwVersion      : ADSL-1.0
CPLDVersion    : 1.4
CPSwVersion    : COL2.6.1.0.040412
CPSwVersion(Build): 1.00.040407-ADSL
DPSwVersion    : DP_B02_06_22_05
System Time    : Mon May 10 10:17:23 2004
Time Zone      : GMT
DST            : off
Services       : physical datalink internet end-to-end end-to-end end-to-end
applications

Set Done

Description    :
Name           :
Location       :
Contact        :
Vendor         :
LogThreshold   : 0
Object-id      : 1.3.6.1.4.1.3278.1.12
Up Time(HH:MM:SS) : 0:13:18
HwVersion      : ADSL-1.0
CPLDVersion    : 1.4
CPSwVersion    : COL2.6.1.0.040412
CPSwVersion(Build) : 1.00.040407-ADSL
DPSwVersion    : DP_B02_06_22_05
System Time    : Mon May 10 10:17:00 2004
Time Zone     : CCT
DST            : off
```

Services applications	: physical datalink internet end-to-end end-to-end end-to-end
-----------------------	---

## 6.4 VLAN

Dynamix DC-48A/SA supports port-based VLAN, and Group VLAN. This section shows how to create two VLAN groups (VLAN ID = 2, and 3), PVC 8/81 of both ADSL port 1 & 2 will join in VLAN group 2, and create a new PVC(8/82) for ADSL1, and assign this PVC to VLAN group 3.

Besides, uplink interface ETH-0 will join VLAN group 2 & 3 as trunk interface.

Step 1 : Create a VLAN group No.2, and assign to Bridge port 1(ADSL port 1 PVC 8/81), and 385(Eth-0)

```

$create vlan static vlnname vlan2 vlanid 2 egressports 1 385
upuntaggedports 1
// create a static vlan 1 then assign port 1 (portid-1) and port 385 (eth-0) as membership

Entry Created

VLAN Name           : vlan2
VLAN Index          : 2
Egress ports        : 1      385
Forbidden Egress Ports : None
Untagged Ports      : 1
Bridging Mode       : Residential
Flood support Status : enable
Broadcast support Status : enable
$
$
    
```

Step 2 : Set Bridge port 1(ADSL port 1 PVC 8/81) as PVID 2

```

$modify gvrp port info portid 1 portvlanid 2 acceptframetypes all
ingressfiltering true
// set the PVID 2 to portid 1

Port Id              : 1
Port VLAN Index      : 1          Accept Frame Types: All
Ingress Filtering    : False      Gvrp Status          : Disable
Failed Registrations : 0          Last Pdu Origin       :
00:00:00:00:00:00
Restricted Vlan Registration : False

Set Done
    
```



```

Port Id : 1
Port VLAN Index : 2 Accept Frame Types: All
Ingress Filtering : True Gvrp Status : Disable
Failed Registrations : 0 Last Pdu Origin :
00:00:00:00:00:00
Restricted Vlan Registration : False
$
$
$
$get vlan curr oninfo // Show current VLAN status

VLAN Index : 1
VLAN Status : Other
Egress ports : 1 2 3 4 5 6 7 8
9 10 11 12 13
14 15 16 17 18 19 20 21 22 23 24
25 26 27 28 29 30
31 32 33 34 35 36 37 38 39 40 41
42 43 44 45 46 4
7 48 385
Untagged Ports : 1 2 3 4 5 6 7 8
9 10 11 12 13
14 15 16 17 18 19 20 21 22 23 24
25 26 27 28 29 30
31 32 33 34 35 36 37 38 39 40 41
42 43 44 45 46 4
7 48 385
Bridging Mode : Residential
Flood support Status : enable
Broadcast support Status : enable

VLAN Index : 2
VLAN Status : permanent
Egress ports : 1 385
Untagged Ports : 1
Bridging Mode : Residential
Flood support Status : enable
Broadcast support Status : enable

VLAN Index : 3
VLAN Status : permanent
Egress ports : 2 385
Untagged Ports : 2
Bridging Mode : Residential
Flood support Status : enable
Broadcast support Status : enable

```

Step 3 : Create a new PVC(8/82) in ADSL port 1

```

// Create the second PVC on the DSL port
// Step 1 : Create atm vc and aal5 interface
// Step 2 : Create eoa interface

```

```
// Step 3 : Create bridge interface

$create atm vc intf ifname aal5-48 lowif atm-0 vpi 8 vci 82 // Step 1
```

Entry Created

```
VC IfName      : aal5-48          Low IfName      : atm-0
VPI            : 8                VCI            : 82
Admin Status   : Up              Oper Status     : Up
Aal5 Tx Size   : 1536            Aal5 Rx Size   : 1536
AAL Type       : AAL5            AAL5 Encap     : LLC Mux
Channel        : Interleaved     Last Change (sec) : 0
MgmtMode       : Data            Row Status      : active
VC Type        : PVC             VC Topology     : Point to Point
$
$
```

```
$create eoa intf ifname eoa-48 lowif aal5-48 // Step 2
```

Entry Created

```
IfName         : eoa-48          LowIfName      : aal5-48
FCS            : False
Pkt Type       : ALL
Oper Status    : Up             Admin Status   : Up
$
```

Step 4: Create a new bridge port 49, and maps to new created PVC 8/82 in ADSL port 1

```
$create bridge port intf ifname eoa-48 portid 49 learning enable status enable // Step 3
```

Entry Created

```
Port Id          : 49           IfName          : eoa-48
Max Unicast Addresses : 16     Learning Status : Enable
Port Oper Status  : Enable     Port Admin Status: Enable
Sticky Status     : Disable    FDB Modify      : Enable
Acl Global Deny Apply : Enable
Acl Global Track Apply: Enable
```

Step 5: Create a new VLAN group No.3, and assign to Bridge port 49(ADSL port 1 PVC 8/82), and 385(Eth-0)

```
// Set the second PVC to mapping to a vlan
```

```
$create vlan static vlanname vlan3 vlanid 3 egressports 49 385
untaggedports 49
```

```

Entry Created

VLAN Name           : vlan3
VLAN Index          : 3
Egress ports        : 49    385
Forbidden Egress Ports : None
Untagged Ports      : 49
Bridging Mode       : Residential
Flood support Status : enable
Broadcast support Status : enable
    
```

Step 6 : Set Bridge port 49(ADSL port 1 PVC 8/82) as PVID 3

```

//Set the PVID 3 to portid 49
$modify gvrp port info portid 49 portvlanid 3 acceptframetypes all
ingressfilter ing true

Port Id           : 49
Port VLAN Index   : 1           Accept Frame Types: All
Ingress Filtering : False       Gvrp Status       : Disable
Failed Registrations : 0           Last Pdu Origin    : 00:00:00:00:00:00
Restricted Vlan Registration: False

Set Done

Port Id           : 49
Port VLAN Index   : 3           Accept Frame Types: All
Ingress Filtering : True        Gvrp Status       : Disable
Failed Registrations : 0           Last Pdu Origin    : 00:00:00:00:00:00
Restricted Vlan Registration: False
    
```

Step 7 : Modify the VLAN group 2, and add Bridge port 2(ADSL port 2 PVC 8/81)

```

$modify vlan static vlanname vlan2 egressports 1 2 385 untaggedports 1
2
//Add port2 to vlan2 use vlanname index

VLAN Name           : vlan2
VLAN Index          : 2
Egress ports        : 1    385
Forbidden Egress Ports : None
Untagged Ports      : 1
Bridging Mode       : Residential
Flood support Status : enable
Broadcast support Status : enable

Set Done

VLAN Name           : vlan2
VLAN Index          : 2
    
```

```

Egress ports          : 1 2 385
Forbidden Egress Ports : None
Untagged Ports       : 1 2
Bridging Mode        : Residential
Flood support Status  : enable
Broadcast support Status : enable

$modify vlan static vlanid 2 egressports 1 2 3 385 untaggedports 1 2 3
//Add port3 to vlan2 use vlanid index
VLAN Name             : vlan2
VLAN Index            : 2
Egress ports          : 1 2 385
Forbidden Egress Ports : None
Untagged Ports       : 1 2
Bridging Mode        : Residential
Flood support Status  : enable
Broadcast support Status : enable

Set Done

VLAN Name             : vlan2
VLAN Index            : 2
Egress ports          : 1 2 3 385
Forbidden Egress Ports : None
Untagged Ports       : 1 2 3
Bridging Mode        : Residential
Flood support Status  : enable
Broadcast support Status : enable
    
```

Step 8 : Modify the VLAN from 8/81 to 0/35

```

The AAL5 start number is 0
$modify atm vc intf ifname aal5-1 disable

VC IfName      : aal5-1          Low IfName      : atm-1
VPI            : 8              VCI             : 81
Admin Status   : Up             Oper Status     : Down
Aal5 Tx Size   : 1536           Aal5 Rx Size   : 1536
AAL Type       : AAL5           AAL5 Encap     : LLC Mux
Channel        : Interleaved    Last Change (sec) : 0
MgmtMode       : Data           Row Status      : active
VC Type        : PVC            VC Topology     : Point to Point

Set Done

VC IfName      : aal5-1          Low IfName      : atm-1
VPI            : 8              VCI             : 81
Admin Status   : Down          Oper Status     : Down
    
```

Aal5 Tx Size	: 1536	Aal5 Rx Size	: 1536
AAL Type	: AAL5	AAL5 Encap	: LLC Mux
Channel	: Interleaved	Last Change (sec)	: 0
MgmtMode	: Data	Row Status	: active
VC Type	: PVC	VC Topology	: Point to Point

**\$modify atm vc intf ifname aal5-1 vpi 0 vci 35**

(Set VPI / VCI is 0 / 35)

VC IfName	: aal5-1	Low IfName	: atm-1
VPI	: 8	VCI	: 81
Admin Status	: Down	Oper Status	: Down
Aal5 Tx Size	: 1536	Aal5 Rx Size	: 1536
AAL Type	: AAL5	AAL5 Encap	: LLC Mux
Channel	: Interleaved	Last Change (sec)	: 0
MgmtMode	: Data	Row Status	: active
VC Type	: PVC	VC Topology	: Point to Point

Set Done

VC IfName	: aal5-1	Low IfName	: atm-1
VPI	: 0	VCI	: 35
Admin Status	: Down	Oper Status	: Down
Aal5 Tx Size	: 1536	Aal5 Rx Size	: 1536
AAL Type	: AAL5	AAL5 Encap	: LLC Mux
Channel	: Interleaved	Last Change (sec)	: 0
MgmtMode	: Data	Row Status	: active
VC Type	: PVC	VC Topology	: Point to Point

**\$modify atm vc intf ifname aal5-1 enable**

VC IfName	: aal5-1	Low IfName	: atm-1
VPI	: 0	VCI	: 35
Admin Status	: Down	Oper Status	: Down
Aal5 Tx Size	: 1536	Aal5 Rx Size	: 1536
AAL Type	: AAL5	AAL5 Encap	: LLC Mux
Channel	: Interleaved	Last Change (sec)	: 0
MgmtMode	: Data	Row Status	: active
VC Type	: PVC	VC Topology	: Point to Point

Set Done

VC IfName	: aal5-1	Low IfName	: atm-1
VPI	: 0	VCI	: 35
Admin Status	: Up	Oper Status	: Down
Aal5 Tx Size	: 1536	Aal5 Rx Size	: 1536

AAL Type	: AAL5	AAL5 Encap	: LLC Mux
Channel	: Interleaved	Last Change (sec)	: 0
MgmtMode	: Data	Row Status	: active
VC Type	: PVC	VC Topology	: Point to Point

## 6.5 Enable the Stacking

This procedure needs two units of Dynamix DC-48A/SA,

- Enables the downlink port(Eth-1) of the first unit, and then create the bridge port 386 for the Eth-1
- The second unit is the default configuration, and set the IP & system IP as previous description.
- Connect the downlink of the first unit to the uplink of the second unit.

**Note:** the stacking can support data channel only. The management capability for stacking is till not available,

```

// Create the second ethernet interface for stacking
// Step 1 : Create eth-1 to downlink
// Step 2 : Create bridge port to eth-1

$create ethernet intf ifname eth-1 type downlink enable // Step 1

Entry Created

Interface          : eth-1
Type               : Downlink          UseDhcp       : False
IP Address         : 0.0.0.0           Mask          : 0.0.0.0
Pkt Type          : ALL
Orl(mbps)         : 100
Configured Duplex  : Auto              Duplex        : None
Configured Speed   : Auto
Class0thrshld     : 100                Class1thrshld : 100
Class2thrshld     : 100                Class3thrshld : 100
Class4thrshld     : 100                Class5thrshld : 100
Class6thrshld     : 100                Class7thrshld : 100
ProfileName       : SPPROFILE
Mgmt VLAN Index   : -
Tagged Mgmt PDU Prio: -
Speed             : -
Operational Status : Down              Admin Status : Up
$
$

$create bridge port intf portid 386 ifname eth-1 learning enable status
enable // Step 2
    
```

Entry Created

```

Port Id           : 386           IfName           : eth-1
Max Unicast Addresses : 256       Learning Status  : Enable
Port Oper Status   : Disable     Port Admin Status : Enable
Sticky Status      : Disable     FDB Modify       : Enable
Acl Global Deny Apply : Enable
Acl Global Track Apply: Enable
$
$
    
```

## 6.6 Modify the Downstream/ Upstream Rate

The DSL port number is 0 to 47

**\$modify adsl line intf disable ifname dsl-11**  
 (Set ADSL port 12 disable)

```

IfName           : dsl-11
Line Type        : interleavedOnly   Coding Type       : dmt
GsUtopia L2TxAddr : 26               GsUtopia L2RxAddr : 26
Gs Clock Type    : oscillator         Gs Action         : startup
Admin Status     : Up                 Oper Status       : Up
Trans Atuc Cap   : ansit1413          q9921PotsNonOverlapped
q9921PotsOverlapped      q9921IsdnNonOverlapped
q9921isdnOverlapped
q9922potsOverlapped
q9922Adsl2PlusPotsNonOverlappedq9922Ads
l2PlusPotsOverlapped q9922Adsl2PotsNonOverlapped
Trans Atuc Actual : q9922Adsl2PlusPotsNonOverlapped
GsDmtTrellis    : trellisOn
Trans Atur Cap   :
q9922Adsl2PlusPotsNonOverlappedq9922Adsl2PlusPotsOverlapped
d q9922Adsl2PotsNonOverlapped
PM Conf PMSF     : idleop
Line DELT Conf LDSF : inhibit
    
```

Set Done

Thu Jan 01 07:19:36 1970 : MAJOR ALARM : ADSL ATUC Down : Interface - dsl-11

```

IfName           : dsl-11
Line Type        : interleavedOnly   Coding Type       : dmt
GsUtopia L2TxAddr : 26               GsUtopia L2RxAddr : 26
Gs Clock Type    : oscillator         Gs Action         : startup
Admin Status     : Down              Oper Status       : Down
Trans Atuc Cap   : ansit1413          q9921PotsNonOverlapped
q9921PotsOverlapped      q9921IsdnNonOverlapped
    
```

## Dynamix DC-48A/SA

```

q9921isdnOverlapped
      q9922potsOverlapped
q9922Adsl2PlusPotsNonOverlappedq9922Ads
l2PlusPotsOverlapped  q9922Adsl2PotsNonOverlapped
Trans Atuc Actual      :-
GsDmtTrellis          : trellisOn
Trans Atur Cap         :-
PM Conf PMSF          : idleop
Line DELT Conf LDSF   : inhibit
    
```

\$modify adsl line profile atucintlmaxtxrate 0x7d000 ifname dsl-11  
(Set ADSL port 12 interleave mode Downstream 512K)  
(The value is hex so you must conversion to decimal )

```
IfName          : dsl-11
```

ADSL ATUC Configuration :

```

-----
Rate Adaptation      : adaptAtStartup
Target Snr Margin(dB/10) : 60           Max Snr Margin(dB/10) : 310
GsRsIntCorrectionUp   : 125us         Dnshift SnrMargin(dB/10): 0
Upshift SnrMargin(dB/10) : 120       Min Upshift Time(sec) : 0
Min Dnshift Time(sec)  : 0           Fast Min Tx Rate(bps) : 0x7d00
Intl Min Tx Rate(bps)  : 0x7d00     Fast Max Tx Rate(bps) :
0x1f38300
Intl Max Tx Rate(bps)  : 0x1f38300    Max Intl Delay(ms)    : 0
GsTxStartBin          : 0x20         GsTxEndBin           :
0x1ff
GsRxStartBin          : 0x6         GsRxEndBin           :
0x1f
GsMaxBitsPerBin       : 15         GsMaxDCo             :
256
GsRxBinAdjust         : Disable     GsEraseProfiles      :
Disable
GsAdi2x               : standard    GsStandard           :
adsl2Plus
GsInitiate            : -           GsTxPowerAtten       : -
GsCodingGain          : Auto        GsRsFastOvrhdDown   : 1
GsRsIntCorrectionDown : 1Ms        GsRsFastOvrhdUp     : 1
GsDrStby              : Disable     GsExpandedExchange   :
Expanded
GsEscapeFastRetrain   : Disable     GsFastRetrain        :
Disable
GsBitSwap             : Enable      GsNtr                :
LocalOcs
GsAnnexType           : adsl2       GsAlctlUsVer         :
Unknown
GsUseCustomBin        : Disable     GsFullRetrain        :
Enable
GsPsdMaskType         : -           DmtConfMode          :
fdmMode
GsExtRsMemory         : notpresent   ParamHybridLossTestStart : 0x2
    
```



Dynamix DC-48A/SA

```

GsParamHybridLossTestEnd : 0x40          GsDmtTrellis          : on
GsAdvertisedCapabilities : AnnexA
GsITriggerMode           : Disable
Type                     : interleavedOnly
GsDnBinUsage             :
0xFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFF
FFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFF
FFFFFFFFFFFF
ParametricTestInputFile  : -
Data Boost               : Enable          Upstream PSD          :
Standard
Conf PM Mode             : pmstatal3enable pmstatal2enable
Conf PML0 Time(sec)      : 180
Conf PML2 Time(sec)      : 180          Conf PML2 ATPR (dB/10) : 30
Conf PML2 Rate(bps)      : 0x10000
Conf GsREADSL2 Enable   : disable

ADSL ATUR Configuration :
-----
Target Snr Margin(dB/10): 60          Dnshift SnrMargin(dB/10): 0
Upshift SnrMargin(dB/10): 120        Min Upshift Time(sec) : 0
Min Dnshift Time(sec) : 0          Fast Min Tx Rate(bps) : 0x7d00
Intl Min Tx Rate(bps) : 0x7d00     Fast Max Tx Rate(bps) : 0x109a00
Intl Max Tx Rate(bps) : 0x109a00    Max Intl Delay(ms) : 16

-----

Set Done

IfName                   : dsl-11

ADSL ATUC Configuration :
-----
Rate Adaptation         : adaptAtStartup
Target Snr Margin(dB/10): 60          Max Snr Margin(dB/10) : 310
GsRsIntCorrectionUp     : 125us        Dnshift SnrMargin(dB/10) : 0
Upshift SnrMargin(dB/10): 120        Min Upshift Time(sec) : 0
Min Dnshift Time(sec) : 0          Fast Min Tx Rate(bps) : 0x7d00
Intl Min Tx Rate(bps) : 0x7d00     Fast Max Tx Rate(bps) :
0x1f38300
Intl Max Tx Rate(bps) : 0x7d000     Max Intl Delay(ms) : 0
GsTxStartBin            : 0x20        GsTxEndBin            :
0x1ff
GsRxStartBin            : 0x6         GsRxEndBin            :
0x1f
GsMaxBitsPerBin         : 15          GsMaxDCo               :
256
GsRxBinAdjust           : Disable     GsEraseProfiles        : Disable
GsAdi2x                 : standard    GsStandard              :
adsl2Plus
GsInitiate              : -           GsTxPowerAtten         : -
GsCodingGain            : Auto        GsRsFastOvrhdDown     : 1

```

**Dynamix DC-48A/SA**

```

GsRsIntCorrectionDown : 1Ms          GsRsFastOvrhdUp      : 1
GsDrStby              : Disable      GsExpandedExchange   :
Expanded
GsEscapeFastRetrain  : Disable      GsFastRetrain        :
Disable
GsBitSwap             : Enable      GsNtr                :
LocalOcs
GsAnnexType          : adsl2      GsAlctlUsVer         :
Unknown
GsUseCustomBin       : Disable      GsFullRetrain        : Enable
GsPsdMaskType        : -          DmtConfMode          :
fdmMode
GsExtRsMemory        : notpresent  ParamHybridLossTestStart : 0x2
GsParamHybridLossTestEnd : 0x40      GsDmtTrellis        : on
GsAdvertisedCapabilities : AnnexA
GslTriggerMode       : Disable
Type                 : interleavedOnly
GsDnBinUsage         :
0xFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFF
FFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFF
FFFFFFFFFFFFFFF
ParametricTestInputFile : -
Data Boost           : Enable      Upstream PSD         :
Standard
Conf PM Mode         : pmstatel3enable pmstatel2enable
Conf PML0 Time(sec)  : 180
Conf PML2 Time(sec)  : 180      Conf PML2 ATPR (dB/10) : 30
Conf PML2 Rate(bps)  : 0x10000
Conf GsREADSL2 Enable : disable

ADSL ATUR Configuration :
-----
Target Snr Margin(dB/10) : 60          Dnshift SnrMargin(dB/10) : 0
Upshift SnrMargin(dB/10) : 120         Min Upshift Time(sec)    : 0
Min Dnshift Time(sec)    : 0          Fast Min Tx Rate(bps)    : 0x7d00
Intl Min Tx Rate(bps)    : 0x7d00      Fast Max Tx Rate(bps)    : 0x109a00
Intl Max Tx Rate(bps)    : 0x109a00     Max Intl Delay(ms)       : 16

$modify adsl line profile aturintlmaxtxrate 0x7d000 ifname dsl-11

(Set ADSL port 12  interleave mode upstream 512K)
(The value is hex so you must conversion to decimal )

IfName                : dsl-11

ADSL ATUC Configuration :
-----
Rate Adaptation       : adaptAtStartup
Target Snr Margin(dB/10) : 60          Max Snr Margin(dB/10)    : 310
GsRsIntCorrectionUp   : 125us         Dnshift SnrMargin(dB/10) : 0

```

## Dynamix DC-48A/SA

Upshift SnrMargin(dB/10) : 120	Min Upshift Time(sec) : 0
Min Dnshift Time(sec) : 0	Fast Min Tx Rate(bps) : 0x7d00
Intl Min Tx Rate(bps) : 0x7d00	Fast Max Tx Rate(bps) :
0x1f38300	
Intl Max Tx Rate(bps) : 0x1f38300	Max Intl Delay(ms) : 0
GsTxStartBin : 0x20	GsTxEndBin :
0x1ff	
GsRxStartBin : 0x6	GsRxEndBin :
0x1f	
GsMaxBitsPerBin : 15	GsMaxDCo :
256	
GsRxBinAdjust : Disable	GsEraseProfiles :
Disable	
GsAdi2x : standard	GsStandard :
adsl2Plus	
GsInitiate : -	GsTxPowerAtten : -
GsCodingGain : Auto	GsRsFastOvrhdDown : 1
GsRsIntCorrectionDown : 1Ms	GsRsFastOvrhdUp : 1
GsDrStby : Disable	GsExpandedExchange :
Expanded	
GsEscapeFastRetrain : Disable	GsFastRetrain :
Disable	
GsBitSwap : Enable	GsNtr :
LocalOcs	
GsAnnexType : adsl2	GsAActlUsVer :
Unknown	
GsUseCustomBin : Disable	GsFullRetrain :
Enable	
GsPsdMaskType : -	DmtConfMode :
fdmMode	
GsExtRsMemory : notpresent	ParamHybridLossTestStart : 0x2
GsParamHybridLossTestEnd : 0x40	GsDmtTrellis : on
GsAdvertisedCapabilities : AnnexA	
GsITriggerMode : Disable	
Type : interleavedOnly	
GsDnBinUsage :	
0xFF	
FF	
FFFFFFFFFFFF	
ParametricTestInputFile : -	
Data Boost : Enable	Upstream PSD :
Standard	
Conf PM Mode : pmstatal3enable	pmstatal2enable
Conf PML0 Time(sec) : 180	
Conf PML2 Time(sec) : 180	Conf PML2 ATPR (dB/10) : 30
Conf PML2 Rate(bps) : 0x10000	
Conf GsREADSL2 Enable : disable	
ADSL <a href="#">ATUR</a> Configuration :	
-----	
Target Snr Margin(dB/10): 60	Dnshift SnrMargin(dB/10): 0
Upshift SnrMargin(dB/10): 120	Min Upshift Time(sec) : 0
Min Dnshift Time(sec) : 0	Fast Min Tx Rate(bps) : 0x7d00

## Dynamix DC-48A/SA

Intl Min Tx Rate(bps) : 0x7d00	Fast Max Tx Rate(bps) : 0x109a00
Intl Max Tx Rate(bps) : 0x109a00	Max Intl Delay(ms) : 16
-----	
Set Done	
IfName : dsl-11	
ADSL ATUC Configuration :	
-----	
Rate Adaptation : adaptAtStartup	
Target Snr Margin(dB/10): 60	Max Snr Margin(dB/10) : 310
GsRsIntCorrectionUp : 125us	Dnshift SnrMargin(dB/10): 0
Upshift SnrMargin(dB/10): 120	Min Upshift Time(sec) : 0
Min Dnshift Time(sec) : 0	Fast Min Tx Rate(bps) : 0x7d00
Intl Min Tx Rate(bps) : 0x7d00	Fast Max Tx Rate(bps) : 0x1f38300
Intl Max Tx Rate(bps) : 0x1f38300	Max Intl Delay(ms) : 0
GsTxStartBin : 0x20	GsTxEndBin :
0x1ff	
GsRxStartBin : 0x6	GsRxEndBin :
0x1f	
GsMaxBitsPerBin : 15	GsMaxDCo :
256	
GsRxBinAdjust : Disable	GsEraseProfiles : Disable
GsAdi2x : standard	GsStandard :
adsl2Plus	
GsInitiate : -	GsTxPowerAtten : -
GsCodingGain : Auto	GsRsFastOvrhdDown : 1
GsRsIntCorrectionDown : 1Ms	GsRsFastOvrhdUp : 1
GsDrStby : Disable	GsExpandedExchange :
Expanded	
GsEscapeFastRetrain : Disable	GsFastRetrain : Disable
GsBitSwap : Enable	GsNtr :
LocalOcs	
GsAnnexType : adsl2	GsAlctlUsVer :
Unknown	
GsUseCustomBin : Disable	GsFullRetrain : Enable
GsPsdMaskType : -	DmtConfMode :
fdmMode	
GsExtRsMemory : notpresent	ParamHybridLossTestStart: 0x2
GsParamHybridLossTestEnd: 0x40	GsDmtTrellis : on
GsAdvertisedCapabilities: AnnexA	
GslTriggerMode : Disable	
Type : interleavedOnly	
GsDnBinUsage :	
0xFF	
FF	
FFFFFFFFFFFFFF	
ParametricTestInputFile : -	
Data Boost : Enable	Upstream PSD :
Standard	
Conf PM Mode : pmstatal3enable	pmstatal2enable

## Dynamix DC-48A/SA

```

Conf PML0 Time(sec)      : 180
Conf PML2 Time(sec)      : 180                Conf PML2 ATPR (dB/10)  : 30
Conf PML2 Rate(bps)      : 0x10000
Conf GsREADSL2 Enable    : disable
  
```

ADSL **ATUR** Configuration :

```

-----
Target Snr Margin(dB/10): 60                Dnshift SnrMargin(dB/10): 0
Upshift SnrMargin(dB/10): 120              Min Upshift Time(sec)    : 0
Min Dnshift Time(sec)      : 0              Fast Min Tx Rate(bps)    : 0x7d00
Intl Min Tx Rate(bps)      : 0x7d00        Fast Max Tx Rate(bps)    : 0x109a00
Intl Max Tx Rate(bps)      : 0x7d000       Max Intl Delay(ms)       : 16
  
```

**\$modify adsl line intf enable ifname dsl-11**

**(Set ADSL port 12 enable)**

```

IfName          : dsl-11
Line Type       : interleavedOnly          Coding Type       : dmt
GsUtopia L2TxAddr : 26                    GsUtopia L2RxAddr : 26
Gs Clock Type   : oscillator              Gs Action        : startup
Admin Status    : Down                    Oper Status      : Down
Trans Atuc Cap  : ansit1413                q9921PotsNonOverlapped
q9921PotsOverlapped          q9921IsdnNonOverlapped
q9921isdnOverlapped
q9922potsOverlapped
q9922Adsl2PlusPotsNonOverlappedq9922Ads
12PlusPotsOverlapped q9922Adsl2PotsNonOverlapped
Trans Atuc Actual  : -
GsDmtTrellis     : trellisOn
Trans Atur Cap    : -
PM Conf PMSF      : idleop
Line DELT Conf LDSF : inhibit
  
```

Set Done

```

IfName          : dsl-11
Line Type       : interleavedOnly          Coding Type       : dmt
GsUtopia L2TxAddr : 26                    GsUtopia L2RxAddr : 26
Gs Clock Type   : oscillator              Gs Action        : startup
Admin Status    : Up                      Oper Status      : Down
Trans Atuc Cap  : ansit1413                q9921PotsNonOverlapped
q9921PotsOverlapped          q9921IsdnNonOverlapped
q9921isdnOverlapped
q9922potsOverlapped
q9922Adsl2PlusPotsNonOverlappedq9922Ads
12PlusPotsOverlapped q9922Adsl2PotsNonOverlapped
Trans Atuc Actual  : -
GsDmtTrellis     : trellisOn
Trans Atur Cap    : -
PM Conf PMSF      : idleop
Line DELT Conf LDSF : inhibit
  
```

## 6.7 Enable SNMP function

```
//SNMP function
// Step 1 : Create SNMP community
// Setp 2 : Create SNMP host
// Setp 3 : Create SNMP traphost

$create snmp comm community public rw

Entry Created

Community          Access
-----
public             RW
:
$
$create snmp host ip 192.168.100.55 community public

Entry Created

Host Address          Community
-----
192.168.100.55      public
$
$

$create snmp traphost ip 192.168.100.55 community public

Entry Created

Ip Address : 192.168.100.55
Community  : public
Port       : 162          Version : v2c
```

## 6.8 LACP aggr

```
// Step 1 : Create Ethernet and Bridge port
// Step 2 : Create Aggregator interface
// Step 3 : Create LACP Aggregator

$ create ethernet intf ifname eth-0

Entry Created

Interface          : eth-0
Type               : Uplink          UseDhcp          : False
IP Address         : 0.0.0.0         Mask             : 0.0.0.0
Pkt Type          : ALL
Orl(mbps)         : 300
```

## Dynamix DC-48A/SA

```
Configured Duplex : Auto          Duplex          : None
Configured Speed  : Auto
Class0thrshld    : 100           Class1thrshld: 100
Class2thrshld    : 100           Class3thrshld: 100
Class4thrshld    : 100           Class5thrshld: 100
Class6thrshld    : 100           Class7thrshld: 100
ProfileName       : SPPROFILE
Mgmt VLAN Index   : -
Tagged Mgmt PDU Prio: -
Speed             : -
Operational Status : Down          Admin Status : Up
$
Thu Jan 01 00:02:33 1970 : STATUS ALARM : ETHER Interface Up : Interface - eth-0
```

**\$ create ethernet intf ifname eth-1**

Entry Created

```
Interface          : eth-1
Type                : Uplink          UseDhcp          : False
IP Address          : 0.0.0.0         Mask              : 0.0.0.0
Pkt Type            : ALL
Orl(mbps)           : 300
Configured Duplex   : Auto          Duplex           : None
Configured Speed    : Auto
Class0thrshld      : 100           Class1thrshld: 100
Class2thrshld      : 100           Class3thrshld: 100
Class4thrshld      : 100           Class5thrshld: 100
Class6thrshld      : 100           Class7thrshld: 100
ProfileName         : SPPROFILE
Mgmt VLAN Index     : -
Tagged Mgmt PDU Prio: -
Speed               : -
Operational Status  : Down          Admin Status : Up
$modify bridge mode enable
Bridging Mode is Enabled
```

Set Done

Bridging Mode is Enabled

**\$ create aggr intf ifname aggr-0 ip 192.168.100.111 mask 255.255.255.0 enable**

Entry Created

```
Interface Index      : aggr-0
IP Address            : 192.168.100.111  Mask              : 255.255.255.0
UseDhcp               : False
Mgmt VLAN Index       : -
Tagged Mgmt PDU Prio : 0
```

```

Admin Status          : Up
Operational Status   : Up
$create bridge port intf portid 385 ifname aggr-0 status enable

Entry Created

Port Id               : 385          IfName           : aggr-0
Max Unicast Addresses : 256          Learning Status  : Enable
Port Oper Status     : Enable       Port Admin Status: Enable
Sticky Status        : Disable      FDB Modify       : Enable
Acl Global Deny Apply : Disable
Acl Global Track Apply: Disable
Sensed IfIndex       : -

$ create lacp aggr aggrifname aggr-0 aggrtype static

Entry Created

Aggr IfName          : aggr-0
Mac Address          : FF:FF:FF:FF:FF:FF Aggregate         : True
Actor Sys Priority: 10 Partner Sys Priority: 0
Actor Sys ID         : 00:01:EB:08:05:B9 Partner Sys ID    : FF:FF:FF:FF:FF:FF
Actor Oper Key       : -             Partner Oper Key   : -
Actor Admin Key      : -             Collector Max Delay : 0
Aggregation Type    : Static

$ modify lacp aggrport info ifname eth-0 aggrstatus enable

Interface            : eth-0          Port Is Aggregate   :
-
Actor Oper Key       : -             Partner Oper
Key                  : -
Actor Admin Key      : -             Partner Admin
Key                  : -
Actor Port Priority   : -             Partner Admin Port Priority : -
Actor System Priority : -             Partner Oper Port Priority  : -
Actor System ID      : -             Partner Admin Sys Priority  : -
Actor Port           : -             Partner Oper Sys Priority   : -
Partner Admin Sys Id : -             Partner Admin Port         : -
Partner Oper Sys Id  : -             Partner Oper Port          : -
Port Actor Admin State : -
Port Partner Admin State : -
Port Actor Oper State : -
Port Partner Oper State : -
Attached Agg ID      : -             Selected Agg
ID                   : -
Aggregation Status   : Disable

Set Done
    
```



## Dynamix DC-48A/SA

Interface	: eth-0	Port Is Aggregate	:
True			
Actor Oper Key	: 20	Partner Oper	
Key	: 1000		
Actor Admin Key	: -	Partner Admin	
Key	: 1000		
Actor Port Priority	: 10	Partner Admin Port Priority	: 9
Actor System Priority	: 10	Partner Oper Port Priority	: 10
Actor System ID	: 00:01:EB:08:05:B9	Partner Admin Sys Priority	: 9
Actor Port	: 1	Partner Oper Sys Priority	: 9
Partner Admin Sys Id	: 01:02:03:04:05:06	Partner Admin Port	: 1
Partner Oper Sys Id	: 01:02:03:04:05:06	Partner Oper Port	: 1
Port Actor Admin State	: activity timeout	aggr	defaulted
Port Partner Admin State	: timeout	aggr	defaulted
Port Actor Oper State	: activity timeout	aggr	defaulted
Port Partner Oper State	: timeout	aggr	defaulted
Attached Agg ID	: -	Selected Agg	
ID	: -		
Aggregation Status	: Enable		
<b style="color: red;">\$ modify lacp aggrport info ifname eth-1 aggrstatus enable</b>			
Interface	: eth-1	Port Is Aggregate	:
-			
Actor Oper Key	: -	Partner Oper	
Key	: -		
Actor Admin Key	: -	Partner Admin	
Key	: -		
Actor Port Priority	: -	Partner Admin Port Priority	: -
Actor System Priority	: -	Partner Oper Port Priority	: -
Actor System ID	: -	Partner Admin Sys Priority	: -
Actor Port	: -	Partner Oper Sys Priority	: -
Partner Admin Sys Id	: -	Partner Admin Port	: -
Partner Oper Sys Id	: -	Partner Oper Port	: -
Port Actor Admin State	: -		
Port Partner Admin State	: -		
Port Actor Oper State	: -		
Port Partner Oper State	: -		
Attached Agg ID	: -	Selected Agg	
ID	: -		
Aggregation Status	: Disable		
Set Done			
Interface	: eth-1	Port Is Aggregate	:
True			
Actor Oper Key	: -	Partner Oper	
Key	: -		
Actor Admin Key	: -	Partner Admin	
Key	: 1000		
Actor Port Priority	: 10	Partner Admin Port Priority	: 9
Actor System Priority	: 10	Partner Oper Port Priority	: 0

## Dynamix DC-48A/SA

```
Actor System ID      : 00:01:EB:08:05:B9  Partner Admin Sys Priority  : 9
Actor Port           : 2                    Partner Oper Sys Priority   : 0
Partner Admin Sys Id : 01:02:03:04:05:06  Partner Admin Port        : 1
Partner Oper Sys Id  : FF:FF:FF:FF:FF:FF  Partner Oper Port         : 0
Port Actor Admin State : activity timeout aggr defaulted
Port Partner Admin State : timeout aggr defaulted
Port Actor Oper State  : activity timeout aggr defaulted
Port Partner Oper State : timeout aggr defaulted
Attached Agg ID       : -                    Selected Agg ID
ID                   : -Aggregation Status   : Enable
```

## 6.9 Multicast

```
// Step 1 : Create static multicast group

$CREATE BRIDGE STATIC MCAST VLANID 3 EGRESSPORTS 1 3 5 385
FORBIDEGRESSPORTS 48 MCASTADDR 01
:00:5E:01:01:04

ENTRY CREATED

VLAN INDEX          : 3          MCAST ADDRESS : 01:00:5E:01:01:04
EGRESS PORTS       : 1      3      5      385
FORBIDDEN EGRESS PORTS : 48

$CREATE BRIDGE STATIC MCAST VLANID 5 EGRESSPORTS 2 4 6 385
FORBIDEGRESSPORTS 48 MCASTADDR 01
:00:5E:01:01:05

ENTRY CREATED

VLAN INDEX          : 5          MCAST ADDRESS : 01:00:5E:01:01:05
EGRESS PORTS       : 2      4      6      385
FORBIDDEN EGRESS PORTS : 48
$
```

## 6.10 ACL

```
// Step 1 : create ACL global
// Step 2 : create ACL port

"Global ACL filter"
// deny the access

$CREATE ACL GLOBAL MACENTRY MACADDR 00:01:EB:00:23:23 DENY ENABLE TRACK
ENABLE
```

ENTRY CREATED

MAC ADDRESS : 00:01:EB:00:23:23  
 DENY : ENABLE TRACK : ENABLE  
 NUMBER OF TIMES PORT CHANGED : 0  
 \$

"Port ACL filter"  
 //allow the access

\$CREATE ACL PORT MACENTRY PORTID 1 MACADDR 00:01:23:23:23:34

ENTRY CREATED

PORTID : 1  
 MAC ADDRESS : 00:01:23:23:23:34  
 \$

\$CREATE ACL PORT MACENTRY PORTID 2 MACADDR 00:01:32:23:35:43

ENTRY CREATED

PORTID : 2  
 MAC ADDRESS : 00:01:32:23:35:43

## 6.11 IP Filter

// Step 1 : create the filer rule for IP filter  
 //Step 2 : create the subrule  
 //Step 3 : enable the rule  
 //Step 4 : create the port to map this filter  
 //Step 5 : create the IP you want to filter

\$CREATE FILTER RULE ENTRY RULEID 2 ACTION DROP RULEDIR IN

ENTRY CREATED

RULE ID : 2 RULE ACTION : DROP  
 SET PRIORITY : - ADMIN STATUS : DISABLE  
 STATS ADMIN STATUS : DISABLE RULE PRIORITY : HIGH  
 RULE DIRECTION : IN APPLYWHENREQ : DISABLE  
 PKT TYPE : UCAST  
 APPLICATION DESCRIPTION : -  
 SNOOP LEVEL : INTERFACE  
 \$

\$CREATE FILTER SUBRULE IP RULEID 2 SUBRULEID 1 SRCADDRCMP NOTINGENLIST

ENTRY CREATED

RULE ID : 2 SUBRULE ID : 1  
START SRC IP ADDR : - END SRC IP ADDR : -  
START DEST IP ADDR : - END DEST IP ADDR : -  
START IP PROT TYPE : - END IP PROT TYPE : -  
IP SRC ADDR MASK : 0xFFFFFFFF IP DEST ADDR MASK : -  
SRC IP ADDR COMP : NOT IN GEN LIST DEST IP ADDR COMP : ANY  
SUBRULE PRIORITY : ASINRULE IP PROT TYPE COMP : ANY  
TRANSPORT HEADER : ETHERNET  
\$

\$CREATE FILTER RULE MAP IFNAME EOA-0 STAGEID 1 RULEID 2

ENTRY CREATED

INTERFACE : EOA-0 STAGE ID : 1  
RULE ID : 2 ORDER ID : 2  
\$

\$CREATE FILTER RULE MAP IFNAME EOA-1 STAGEID 1 RULEID 2

ENTRY CREATED

INTERFACE : EOA-1 STAGE ID : 1  
RULE ID : 2 ORDER ID : 2

\$MODIFY FILTER RULE ENTRY RULEID 2 STATUS ENABLE

RULE ID : 2 RULE ACTION : DROP  
SET PRIORITY : - ADMIN STATUS : DISABLE  
STATS ADMIN STATUS : DISABLE RULE PRIORITY : HIGH  
RULE DIRECTION : IN APPLYWHENREQ : DISABLE  
PKT TYPE : UCAST  
APPLICATION DESCRIPTION : -  
SNOOP LEVEL : INTERFACE

SET DONE

RULE ID : 2 RULE ACTION : DROP

```

SET PRIORITY          : -          ADMIN STATUS : ENABLE
STATS ADMIN STATUS   : DISABLE     RULE PRIORITY  : HIGH
RULE DIRECTION       : IN          APPLYWHENREQ  : DISABLE
PKT TYPE             : UCAST
APPLICATION DESCRIPTION : -
SNOOP LEVEL          : INTERFACE
$

$CREATE CLFR LIST GENENTRY IFNAME EOA-0 VALUE OXC0A864C8
//192.168.100.200

ENTRY CREATED

IF NAME : EOA-0
VALUE   : OXC0A864C8
VALUE TYPE : U32
$

$

$CREATE CLFR LIST GENENTRY IFNAME EOA-0 VALUE OXC0A864CA
//192.168.100.202

ENTRY CREATED

IF NAME : EOA-0
VALUE   : OXC0A864CA
VALUE TYPE : U32
$

```

## 6.12 DHCP filter

```

//Step 1 : create the filter rule for DHCP filter
//Step 2 : create the subrule
//Step 3 : enable the rule
//Step 4 : create the port to map this filter

$create filter rule entry ruleid 3 action drop ruledir in

Entry Created

Rule Id          : 3          Rule Action   : drop
Set Priority     : -          Admin status  : disable

```

```

Stats admin status      : disable      Rule Priority   : High
Rule Direction         : IN           ApplyWhenReq   : disable
Pkt Type               : Ucast
Application Description : -
Snoop Level            : interface
$
$
Screate filter subrule udp ruleid 3 subruleid 1 dstportfrom 67 dstportto 69
srcportcmp any d
stportcmp inrange subruleprio high

Entry Created

Rule Id                 : 3           Subrule Id      : 1
Start source port       : -           End source port : -
Start destination port : 67         End destination port : 69
Source port comparison : Any         Destination port comparison : InRange
Subrule Priority        : high
Transport Header        : Ethernet

Smodify filter rule entry ruleid 3 status enable

Rule Id                 : 3           Rule Action     : drop
Set Priority            : -           Admin status    : disable
Stats admin status     : disable      Rule Priority   : High
Rule Direction         : IN           ApplyWhenReq   : disable
Pkt Type               : Ucast
Application Description : -
Snoop Level            : interface

Set Done

Rule Id                 : 3           Rule Action     : drop
Set Priority            : -           Admin status    : enable
Stats admin status     : disable      Rule Priority   : High
Rule Direction         : IN           ApplyWhenReq   : disable
Pkt Type               : Ucast
Application Description : -
Snoop Level            : interface
$
Screate filter rule map ifname eoa-0 stageid 1 ruleid 3

Entry Created

Interface : eoa-0      Stage Id : 1
Rule Id   : 3          Order Id : 3
$
$
Screate filter rule map ifname eth-0 stageid 1 ruleid 3

Entry Created

Interface : eth-0     Stage Id : 1
Rule Id   : 3         Order Id : 3
$

```

## 6.13 FTP filter

```

//Step 1 : create the filter rule for FTP filter
//Step 2 : create the subrule
//Step 3 : enable the rule
//Step 4 : create the port to map this filter

$CREATE FILTER RULE ENTRY RULEID 4 ACTION DROP RULEDIR IN

ENTRY CREATED

RULE ID           : 4           RULE ACTION  : DROP
SET PRIORITY      : -           ADMIN STATUS : DISABLE
STATS ADMIN STATUS : DISABLE   RULE PRIORITY : HIGH
RULE DIRECTION    : IN          APPLYWHENREQ : DISABLE
PKT TYPE          : UCAST
APPLICATION DESCRIPTION : -
SNOOP LEVEL       : INTERFACE
$

$CREATE FILTER SUBRULE TCP RULEID 4 SUBRULEID 1 DSTPORTFROM 21 DSTPORTTO
23 SRCP ORTCMP ANY DSTPORTCMP INRANGE SUBRULEPRIO HIGH

ENTRY CREATED

RULE ID           : 4           SUBRULE ID    : 1
START SOURCE PORT : -           END SOURCE PORT : -
START DESTINATION PORT : 21      END DESTINATION PORT : 23
SOURCE PORT COMPARISON : ANY      DESTINATION PORT COMPARISON :
INRANGE
SUBRULE PRIORITY   : HIGH
TRANSPORT HEADER   : ETHERNET
$

$MODIFY FILTER RULE ENTRY RULEID 4 STATUS ENABLE

RULE ID           : 4           RULE ACTION  : DROP
SET PRIORITY      : -           ADMIN STATUS : DISABLE
STATS ADMIN STATUS : DISABLE   RULE PRIORITY : HIGH
RULE DIRECTION    : IN          APPLYWHENREQ : DISABLE
PKT TYPE          : UCAST
APPLICATION DESCRIPTION : -
SNOOP LEVEL       : INTERFACE

SET DONE

RULE ID           : 4           RULE ACTION  : DROP
SET PRIORITY      : -           ADMIN STATUS : ENABLE
STATS ADMIN STATUS : DISABLE   RULE PRIORITY : HIGH
RULE DIRECTION    : IN          APPLYWHENREQ : DISABLE

```

```

PKT TYPE          : UCAST
APPLICATION DESCRIPTION : -
SNOOP LEVEL       : INTERFACE
$

$CREATE FILTER RULE MAP IFNAME EOA-0 STAGEID 1 RULEID 4

ENTRY CREATED

INTERFACE : EOA-0      STAGE ID : 1
RULE ID   : 4          ORDER ID : 4
$

$CREATE FILTER RULE MAP IFNAME EOA-0 STAGEID 1 RULEID 4

ENTRY CREATED
INTERFACE : EOA-1      STAGE ID : 1
RULE ID   : 4          ORDER ID : 4

```

## 6.14 HTTP filter

```

//Step 1 : create the filter rule for HTTP filter
//Step 2 : create the subrule
//Step 3 : enable the rule
//Step 4 : create the port to map this filter

$CREATE FILTER RULE ENTRY RULEID 5 ACTION DROP RULEDIR IN
$

ENTRY CREATED

RULE ID          : 5          RULE ACTION   : DROP
SET PRIORITY     : -          ADMIN STATUS   : DISABLE
STATS ADMIN STATUS : DISABLE  RULE PRIORITY : HIGH
RULE DIRECTION   : IN        APPLYWHENREQ : DISABLE
PKT TYPE         : UCAST
APPLICATION DESCRIPTION : -
SNOOP LEVEL      : INTERFACE
$

$CREATE FILTER SUBRULE TCP RULEID 5 SUBRULEID 1 DSTPORTFROM 80
SRCPORTCMP ANY DS TPORTCMP INRANGE SUBRULEPRIO HIGH

ENTRY CREATED

```



## Dynamix DC-48A/SA

```
RULE ID          : 5          SUBRULE ID       : 1
START SOURCE PORT : -          END SOURCE PORT   : -
START DESTINATION PORT : 80      END DESTINATION PORT : 65535
SOURCE PORT COMPARISON : ANY      DESTINATION PORT COMPARISON :
INRANGE
SUBRULE PRIORITY   : HIGH
TRANSPORT HEADER   : ETHERNET
$
```

**\$MODIFY FILTER RULE ENTRY RULEID 5 STATUS ENABLE**

```
RULE ID          : 5          RULE ACTION      : DROP
SET PRIORITY     : -          ADMIN STATUS       : DISABLE
STATS ADMIN STATUS : DISABLE   RULE PRIORITY    : HIGH
RULE DIRECTION   : IN         APPLYWHENREQ     : DISABLE
PKT TYPE         : UCAST
APPLICATION DESCRIPTION : -
SNOOP LEVEL      : INTERFACE
```

SET DONE

```
RULE ID          : 5          RULE ACTION      : DROP
SET PRIORITY     : -          ADMIN STATUS       : ENABLE
STATS ADMIN STATUS : DISABLE   RULE PRIORITY    : HIGH
RULE DIRECTION   : IN         APPLYWHENREQ     : DISABLE
PKT TYPE         : UCAST
APPLICATION DESCRIPTION : -
SNOOP LEVEL      : INTERFACE
$
```

**\$CREATE FILTER RULE MAP IFNAME EOA-0 STAGEID 1 RULEID 5**

ENTRY CREATED

```
INTERFACE : EOA-0      STAGE ID : 1
RULE ID   : 5          ORDER ID : 5
```

# Appendix-A: Pin Assignment

## CID Pin Assignment

The CID port is configured as DCE. The connection for such link is given below:

Table A-1 Dynamix DC-48A/SA CID port pin assignment

Pin no.	Usage
1	-----
2	TD
3	RD
4	-----
5	-----
6	-----
7	-----
8	CTS
9	-----

**Note:** Connector type is DB9 male

Table A-2 RS-232 DB9 pin assignment (for PC to CID port connection)

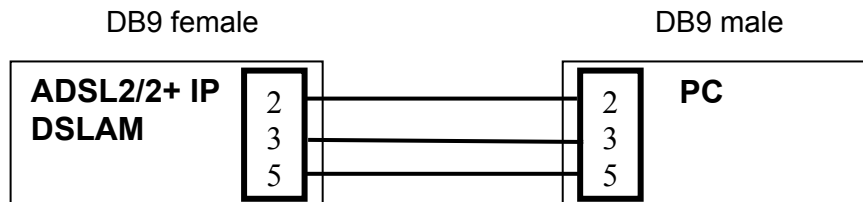


Table A-3 Dynamix DC-48A/SA management port pin assignment

Pin no.	Usage
1	RX+
2	RX-
3	TX+
4	-----
5	-----
6	TX-
7	-----
8	-----

**Note:** Connector type is RJ-45

Table A-4 Uplink and downlink port (Xn) pin assignment

Pin no.	Usage
1	RX+
2	RX-
3	TX+
4	-----
5	-----
6	TX-
7	-----
8	-----

- Note:** (1) Ports are straight.  
(2) Connector type is RJ 45.

### Transceiver connector pin assignment

Table A-524 ports ADSL LINE Connector pin assignment

PIN #	usage	PIN#	usage
1	ADSL loop#24-T	26	ADSL loop#24-R
2	ADSL loop#23-T	27	ADSL loop#23-R
3	ADSL loop#22-T	28	ADSL loop#22-R
4	ADSL loop#21-T	29	ADSL loop#21-R
5	ADSL loop#20-T	30	ADSL loop#20-R
6	ADSL loop#19-T	31	ADSL loop#19-R
7	ADSL loop#18-T	32	ADSL loop#18-R
8	ADSL loop#17-T	33	ADSL loop#17-R
9	ADSL loop#16-T	34	ADSL loop#16-R
10	ADSL loop#15-T	35	ADSL loop#15-R
11	ADSL loop#14-T	36	ADSL loop#14-R
12	ADSL loop#13-T	37	ADSL loop#13-R
13	ADSL loop#12-T	38	ADSL loop#12-R
14	ADSL loop#11-T	39	ADSL loop#11-R
15	ADSL loop#10-T	40	ADSL loop#10-R
16	ADSL loop#9-T	41	ADSL loop#9-R
17	ADSL loop#8-T	42	ADSL loop#8-R
18	ADSL loop#7-T	43	ADSL loop#7-R
19	ADSL loop#6-T	44	ADSL loop#6-R
20	ADSL loop#5-T	45	ADSL loop#5-R
21	ADSL loop#4-T	46	ADSL loop#4-R
22	ADSL loop#3-T	47	ADSL loop#3-R
23	ADSL loop#2-T	48	ADSL loop#2-R
24	ADSL loop#1-T	49	ADSL loop#1-R
25	NOT USED	50	NOT USED

**Note:** Connector type is 50 pin teleco-champ female

Table A-6 24 ports POTS splitter PHONE Connector pin assignment

PIN #	usage	PIN#	usage
1	PHONE#24-T	26	PHONE#24-R
2	PHONE#23-T	27	PHONE#23-R
3	PHONE#22-T	28	PHONE#22-R
4	PHONE#21-T	29	PHONE#21-R
5	PHONE#20-T	30	PHONE#20-R
6	PHONE#19-T	31	PHONE#19-R
7	PHONE#18-T	32	PHONE#18-R
8	PHONE#17-T	33	PHONE#17-R
9	PHONE#16-T	34	PHONE#16-R
10	PHONE#15-T	35	PHONE#15-R
11	PHONE#14-T	36	PHONE#14-R
12	PHONE#13-T	37	PHONE#13-R
13	PHONE#12-T	38	PHONE#12-R
14	PHONE#11-T	39	PHONE#11-R
15	PHONE#10-T	40	PHONE#10-R
16	PHONE#9-T	41	PHONE#9-R
17	PHONE#8-T	42	PHONE#8-R
18	PHONE#7-T	43	PHONE#7-R
19	PHONE#6-T	44	PHONE#6-R
20	PHONE#5-T	45	PHONE#5-R
21	PHONE#4-T	46	PHONE#4-R
22	PHONE#3-T	47	PHONE#3-R
23	PHONE#2-T	48	PHONE#2-R
24	PHONE#1-T	49	PHONE#1-R
25	NOT USED	50	NOT USED

**Note:** Connector type is 50 pin teleco-champ female