



4-Band VDSL CO/CPE Modem USER'S MANUAL

Best viewed at full screen.

VDSL Point to Point Solution

The 4-BAND VDSL CO MODEM works as Ethernet to/from VDSL subscriber-site conversion bridge. The 4-BAND VDSL CO MODEM uses QAM-based 4-band VDSL technology which supports max distance of 1.9km (6333ft) at 5M/5M or 1.3km (4333ft) at 15M/15M, or 800m (2666ft) at 25M/25M symmetrical data service. The 4-BAND VDSL CPE MODEM also works with 4-BAND 8ports & 24ports VDSL IP DSLAM, together to form a cost-effective solution for services such as remote lecturing, telemedicine, video conferencing, Video-on-Demand (VOD), IP-TV, Internet access and various high-speed data applications.

The front-panel provides LED indications of system and interface status. The built-in POTS/ISDN splitter allows a standard POTS phone or ISDN device to be connected. Full or half-duplex mode of LAN operations is automatically sensed and configured. VDSL link rates are configured by local Modem or IP DSLAM over auto speed or fix speed function.

Therefore, 4-BAND VDSL CO MODEM supports plug & play operations on the subscriber-site and can do auto and manual selection of the data speed. An ideal solution for delivering cost-effective, high-performance broadband/multimedia services to Multi-Dwelling Units (MDU) and Multi-Tenant Units (MTU) such as hotels, campuses, hospitals environments.

Table of Contents

VDSL Point to Point Solution.....	2
1. Unpacking Information.....	4
2. Installing the Modem.....	5
Hardware Installation.....	5
Pre-installation Requirements.....	5
General Rules.....	5
Connecting the Modem.....	6
Connecting the RJ-11 / RJ-45 Ports.....	7
3. Hardware Description.....	9
Front Panel.....	9
Rear Panel.....	11
Side Panel.....	12
4. Firmware Description.....	14
Appendix A: Cable Requirements.....	15
Appendix B: Product Features and Specification.....	17
Appendix C: Troubleshooting.....	19
Appendix D: Compliance and Safety Information.....	23
Warranty.....	25

1. Unpacking Information

Check List

Carefully unpack the package and check its contents against the checklist.

Package Contents

- VDSL 4-Band Modem (4-BAND VDSL CO MODEM for CO side/ 4-BAND VDSL CPE MODEM for CPE side)
- AC To DC Power Adapter
- Four plastic feet
- User Manual
- RJ-45 cable
- RJ-11 cable

Please inform your dealer immediately for any missing items or damaged parts.

If possible, retain the carton including the original packing materials.

Use them to repack the unit in case there is a need to return for repairing.

2. Installing the Modem

Hardware Installation

This chapter describes how to install the Modem and establishes network connections and may install the Modem on any level surface (e.g. a table or shelf). However, please take note of the following minimum site requirements before one begin. Stick the 4 plastic feet at the bottom to avoid scratches.

Pre-installation Requirements

Before the start of actual hardware installation, make sure to provide the right operating environment including power requirements, sufficient physical space and proximity to other network devices that are to be connected.

Verify the following installation requirements:

- Power requirements: DC 5V/1A or above.
- The Modem should be located in a cool dry place with at least 10cm/4in of space at the front and back for ventilation.
- Place the Modem out of direct sunlight and away from heat sources or areas with a high amount of electromagnetic interference.
- Check if network cables and connectors needed for installation are available.

General Rules

Before making any connections to the modem, please note the following rules:

- Ethernet port (RJ-45)
All network connections to the modem Ethernet port must be made using Category 5 UTP for 100Mbps; Category 3 and 4 UTP for 10Mbps.
No more than 100 meters of cabling may be use between the MUX and HUB and an end node.
- VDSL port (RJ-11)
All home network connections to the RJ-11 port must use 24-26 gauge phone wiring.
- We do not recommend using 28 gauge or above phone line.

Connecting the Modem

The Modem has one Ethernet port which supports connection to Ethernet operation. The devices attached to these ports must support auto-negotiation or 10Base-T OR 100Base-TX unless they will always operate at half duplex.

Use any of the Ethernet ports to connect to devices such as NIC, Switch, bridge or router. You can also connect to another compatible Modem to an RJ-45 port on the other device.

The RJ11 Line port is used to connect to the wall RJ-11 modular socket (outlet) which is connect to VDSL 4-Band CPE Modem side (Point to point solution).

The RJ11 Phone port of the Modem can connected to a telephone and a computer sharing one telephone wire for making calls and accessing the Internet at the same time.

Connecting the RJ-11/RJ-45 Ports

The Modem's RJ-11 ports support max distance 1.9km at 5M/5M or maximum speed at 25M/25M symmetrical and distances up to 800m data service across existing phone wiring without interfering with standard voice transmissions, easy-to-use does not require the installation of any additional wiring. Every RJ-11 modular phone jack in the home can become a port on the LAN. Networking devices can be installed on a single telephone wire that can span within 1.9km or 800m (depend on speed) between the two farthest points. As shown in [Figure 1](#).

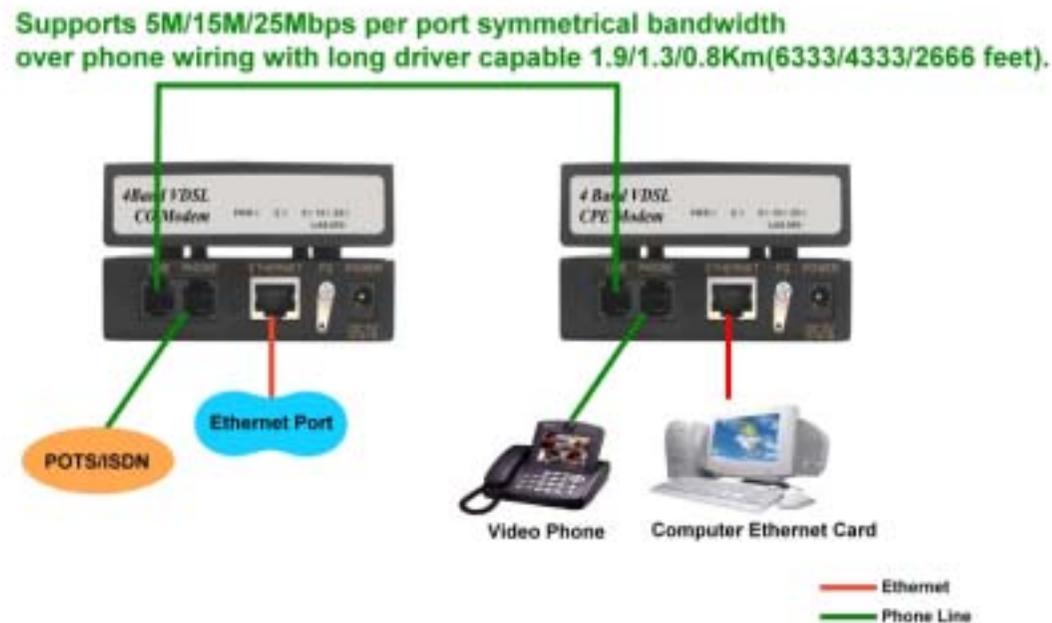


Figure 1: VDSL Point-to-Point application

- 4-BAND VDSL CO MODEM has embedded splitter between every VDSL side (Line) and POTS (Phone) side. It permits you to deliver broadband service on the same lines as Plain Old Telephone Service (POTS), PBX, ISDN traffic and VDSL Signal.
- The RJ-11 port support 1.9km maximum distance at 5M/5M or maximum speed at 25M/25M symmetrical with distance up to 800m data service. When inserting a RJ-11 plug, make sure the tab on the plug clicks into position to ensure that it is properly seated.
- Do not plug a RJ-11 phone jack connector into the Ethernet port (RJ-45 port). This may damage the modem. Instead, use only twisted pair cables with RJ-45 connectors that conform to Ethernet standard.

Note:

- Make sure each twisted pair cable (RJ-45) does not exceed 100 meters (333 feet).
- RJ-11 port should use 24 ~ 26 gauge phone wiring and we do not recommend 28 gauge or above phone wiring.
- We advise using Category 3, 4, 5 cables for cable modem or router connections to avoid any confusion or inconvenience in the future upgrade.
- Be sure phone cable has been installed before 4-BAND VDSL CO MODEM and 4-BAND VDSL CPE MODEM powered on.

3. Hardware Description

This section describes the important parts of the modem. It features the front panel, side panel and rear connectors.

Front Panel

The figure shows the front panel.



Figure 2: 4 BAND VDSL CO/CPE MODEM Front panel

At a quick glance of the front panel, it is easy to tell if the CO modem has power, if it has signal from its Ethernet RJ-45 port and if there is phone line signal on RJ-11 port.

Front Indicators

The modem has **Five** LED indicators. The following Table shows the description. **(Table 1)**

LEDs	Status	Descriptions
PWR (Power LED)	Steady Green	It will light up (ON) to show that the product is power good, and system reset OK.
E (Ethernet LED)	Steady Green Flashing (LINK/ACT)	Each RJ-45 station port on the Ethernet is assigned an LED light for monitoring port “Good Linkage”. LED is normally OFF after the power on operation, but will light up steadily to show good linkage and flashing to show data transmission.
5 (VDSL LED)	Steady Green	RJ-11 station port on the VDSL is assigned an LED light for monitoring port “Good Linkage”. LED is normally OFF after the power on operation, but will light up steadily to show good linkage at 5Mbps data rate.
15 (VDSL LED)	Steady Green	RJ-11 station port on the VDSL is assigned an LED light for monitoring port “Good Linkage”. LED is normally OFF after the power on operation, but will light up steadily to show good linkage at 15Mbps data rate.
25 (VDSL LED)	Steady Green	RJ-11 station port on the VDSL is assigned an LED light for monitoring port “Good Linkage”. LED is normally OFF after the power on operation, but will light up steadily to show good linkage at 25Mbps data rate.

Table 1: LED Indicators Description and Operation

Rear Panel

The following figure shows the rear connectors. (Figure3)

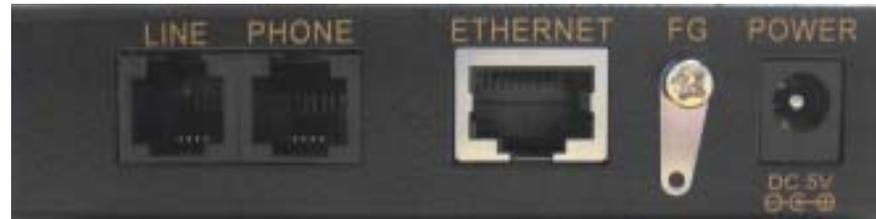


Figure 3: Rear Connectors

The table shows the rear modem connectors, description and type. (Table2)

Connectors	Description	Type
Line	For connecting to the VDSL Modem Using a RJ-11 cable	RJ-11
Phone	For connecting to the telephone or Fax 、 ISDN modem	RJ-11
Ethernet	For connecting to a Ethernet equipped device	RJ-45

Table 2: Description of Rear Modem Connector

Side Panel

The following figure shows the DIP switch connection. (Figure 4)



Figure 4: Side Panel

At quick glance, it is easy to see that the DIP switch pin 1 is switch ON where it is in auto-speed and that is also the default mode.

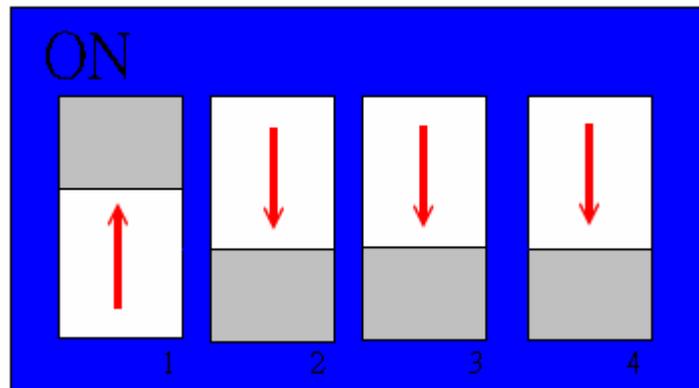


Figure 5: DIP switch

To set the data speed to 25Mbps simply switch ON pin 2 while the other pins are in reset mode. To change it to 15Mbps, switch ON the pin 3 while the other pins are in reset mode and for 5Mbps switch on the pin 4 while other are in reset mode. Remember that no two pins can be activated at the same time or it will result in error and for data speed of 5Mbps. Table shows the summary of DIP switch configuration.

Speed mode	Pin 1	Pin 2	Pin 3	Pin 4
Auto speed	On	Off	Off	Off
25Mbps	Off	On	Off	Off
15Mbps	Off	Off	On	Off
5Mbps	Off	Off	Off	On

Table 3: DIP Switch Configuration

4. Firmware Description

Auto and manual data speed selector description:

4-Band VDSL CO modem is a 4 band VDSL solution which supports real plug & play and can do auto and manual selection of the data speed, the setting of the data speed depends on the phone cable limit, they can support 5M/15M/25M symmetrical data service but depends on installation environment. If 4-Band VDSL CO modem try to link at the data speed of 25Mbps but fails to do so, then 4-Band VDSL CO modem data speed must be lower due to the limitation of the phone cable length. If the cable length is unsure, then auto selection of the data speed at the default setting is recommended. Power must be unplug before changing of data speed, then power on and wait for VDSL to link again at the correct data speed function.

Speed mode limitation:

5M/5M mode within 1.9km (6333ft)

15M/15M mode within 1.3km (4333ft)

25M/25M mode within 800m (2666ft)

Note: We recommend that phone cable must meet CAT 3 standard or above and without clustering, **otherwise the above guarantee will be void.**

Engineering Functions:

These functions is for maintaining and troubleshooting such as firmware upgrade, command line, SNR indicator, Ethernet and VDSL port setting and status monitor and so on, which will be described in engineering manual.

Appendix A: Cable Requirements

A CAT 3, 4 or 5 UTP (Unshielded Twisted Pair) cable is typically used to connect the Ethernet device to the modem.

A 10Base-T cable often consists of four pairs of wires, two of which are used for transmission. The connector at the end of the 10Base-T cable is referred to as an RJ-45 connector and it consists of eight pins.

The Ethernet standard uses pins 1, 2, 3 and 6 for data transmission purposes.

PIN	MNEMONIC	FUNCTION
1	TX+	Ethernet differential Transmit signal(+)
2	TX-	Ethernet differential Transmit signal(-)
3	RX+	Ethernet differential receive signal(+)
4	NC	Unused
5	NC	Unused
6	RX-	Ethernet differential receive signal(-)
7	NC	Unused
8	NC	Unused

Table 4: RJ-45 Ethernet Connector Pin out Assignments

Standard telephone wire of any gauge or flat type, twisted or quad is used to connect the modem to the telephone network. A telephone cable typically consists of three pairs of wires, one of which is used for transmission. The connector at the end of the telephone cable is called an RJ-11 connector and it consists of six pins. POTS (plain old telephone services) use pins 3 and 4 for voice transmission. A telephone cable is shown in Figure 6.

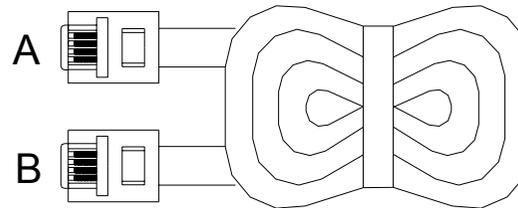


Figure 6: Telephone cable

Connectors A and B on the rear of the modem are RJ-11 connectors. These connectors are identically wired. The RJ-11 connectors have six positions, two of which are wired. The Modem uses the center two pins. The pin out assignment for these connectors is presented in Table 5.

Pin#	MNEMONIC	FUNCTION
1	NC	Unused
2	NC	Unused
3	TIP	POTS
4	RING	POTS
5	NC	Unused
6	NC	Unused

Table 5: RJ-11 Pin out Assignments

Appendix B: Product Features & Specification

Product Name : 4-BAND VDSL CO/CPE MODEM

Features:

- Compliant with IEEE802.3 10BASE-T standard.
- Compliant with IEEE802.3u 100BASE-TX standard.
- Compliant with ETSI, ITU, ANSI standards
- Max speed 5M/5M with distance up to 1.9km(6333ft)
- Max speed 15M/15M with distance up to 1.3km(4333ft)
- Max speed 25M symmetrical and distances up to 800m(2666ft).
- Supports 1 * RJ-11 connector for Ethernet over VDSL.
- Supports 1 * RJ-11 connector for telephone/PBX connection.
- Supports 1 * RJ-45 port for 10/100Mbps Ethernet with Auto MDI/MDIX.
- Supports 1* Dip switch(4-BAND VDSL CO MODEM only) for fix speed mode selection
- Supports Auto-speed and full duplex for VDSL port.
- Supports long packet size up to 1536 bytes
- Supports POTS/ISDN voice pass and PBO(Power Back Off) function.
- Supports 4 wires phone set pass through.
- Supports console port for firmware upgrade and maintain (LT only).
- Voice and Data work on the same telephone line.
- Spectral compatibility with xDSL, ISDN (2B1Q/4B3T).
- Supports flow control IEEE802.3x for Full Duplex & Back Pressure for Half Duplex.
- Supports Surge protection.
- Provides Power LED.
- Provides LED indication Link/Active Status for Ethernet port and Link for VDSL port.
- External switching power adapter Input: AC 85-240 volts/50-60Hz; Output: DC 5V/1A or above.
- Mini size and metal case design

Specifications:

- **Standard**
 - IEEE802.3 standard
 - IEEE802.3u standard
 - Compliant with ETSI, ITU & ANSI standards
- **Interface**
 - 1 * RJ-45 10/100Mbps Ethernet port
 - 1 * RJ-11 connector for EoVDSL
 - 1 * RJ-11 connector for telephone connection
 - Console port: RS-232C / 19200bps(4-BAND VDSL CO Modem only)
- **Cable Connections**
 - RJ-45 (Ethernet): Category 3, 4, 5 UTP/STP
 - RJ-11 (EoVDSL): Twisted Pair phone wire
- Provides LED indication Link/Active Status for Ethernet port and Link for VDSL port.
- VDSL Frequency Spectrum:
 - 4-BAND VDSL CO MODEM_ Transmitter: 900 kHz ~ 3.9MHz
 - Receiver: 4MHz & 7.9MHz
 - 4-BAND VDSL CPE MODEM_ Transmitter: 4MHz ~ 7.9MHz
 - Receiver: 900 kHz ~ 3.9MHz
- POTS/ISDN pass filter Spectrum: 0 ~ 630kHz
- Power Consumption: 4-BAND VDSL CO Modem (LT): 5.4W / 4-BAND VDSL CPE Modem (NT): 6W.
- Operating Temperature: -20°C ~ 70°C (-4F ~ 158F)
- Storage Temperature: -20°C ~ 70°C (-4F ~ 158F)
- Humidity: 10 to 90% (non-condensing)
- Dimensions: 95mm x 110mm x 24mm (3.74" x 4.33" x 0.94").

Appendix C: Troubleshooting

Diagnosing the Modem's Indicators

The Modem can be easily monitored through its comprehensive panel indicators. These indicators assist the network manager in identifying problems the hub may encounter. This section describes common problems you may encounter and possible solutions.

1. **Symptom:** Power indicator does not light up (green) after power on.

Cause: Defective External power supply.

Solution: Check the power plug by plugging in another that is functioning properly. Check the power cord with another device. If these measures fail to resolve the problem, have the unit power supply replaced by a qualified distributor.

2. **Symptom:** Link indicator does not light up (green) after making a connection.

Cause: Network interface (e.g. a network adapter card on the attached device), network cable, or switch port is defective.

Solution:

2.1 Power off and re- power on the VDSL Modem.

2.2 Verify that the switch and attached device are powered on.

2.3 Be sure the cable is plugged into both the switch and corresponding device.

2.4 Verify that the proper cable type is used and its length does not exceed specified limits.

2.5 Check the Modem on the attached device and cable connections for possible defects.

2.6 Make sure phone wire must be connected between 4-BAND VDSL CO Modem and 4-BAND VDSL CPE Modem first, when both are to be power on.

2.7 Replace the defective Modem or cable if necessary.

3. **Symptom:** VDSL Link cannot be established.

Cause: VDSL auto speed failure or phone cable length is over specification with the limit of 1.9km or not a 24 gauge phone wire with twisted pair.

Solution:

3.1 Please make sure phone wire must be connected between 4-BAND VDSL CO Modem and 4-BAND VDSL CPE Modem

when both are power on. 4-BAND VDSL CO Modem will do auto speed function depending on phone wire length, therefore if 4-BAND VDSL CO Modem can't detect 4-BAND VDSL CPE Modem over phone wire while both power on, this will cause the link to fail.

3.2 Please check phone cable must be 24 gauge with twist pair and without rust, and the length is not over 1.9km.

Note: Phone cable must meet Cat 3 standard or above and without clustering, otherwise will cause more cross talk issue to reduce DSL power driver.


4. **Symptom:** VDSL speed mode LED is always flashing.

Cause: VDSL speed mode link is at the limit of phone cable length.

Solution: Please change speed mode through Dip switch.

5. **Symptom:** We tested with a regular S0 bus from an NTBA - data works, but ISDN telephone does not.

Solution: You must connect according to the following chart if you want to connect CO and CPE with NTBA.

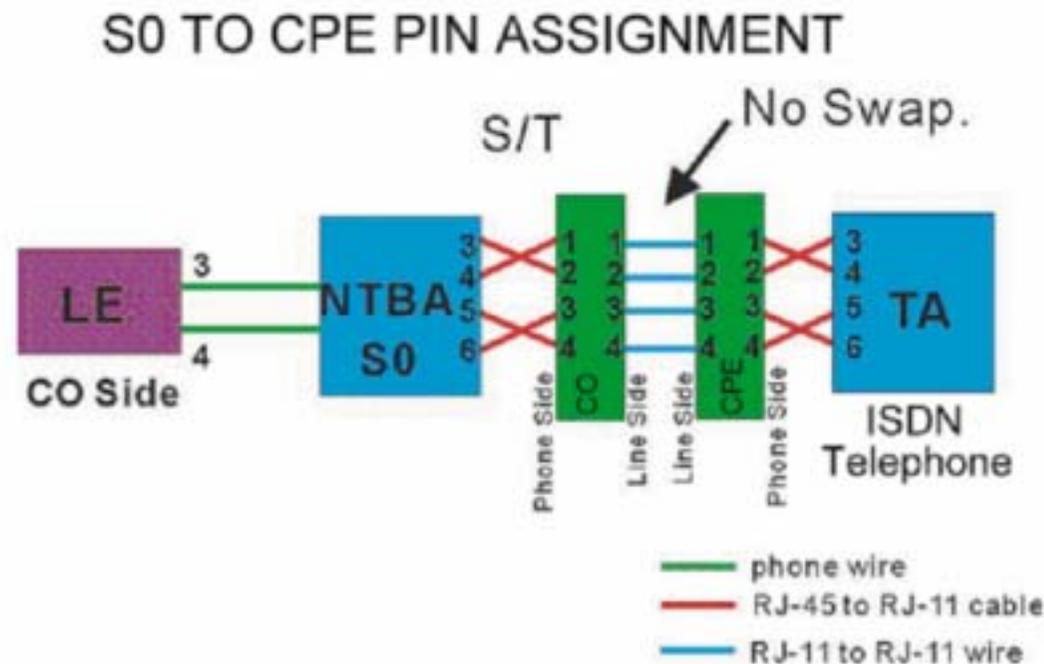

Power and Cooling Problems

If the POWER indicator does not turn on when the power cord is plugged in, you may have a problem with the power outlet, power cord, or internal power supply as explained in the previous section. However, if the unit power is off after running for a while, check for loose power connections, power losses or surges at the power outlet, and verify that the fan on back of the unit is unobstructed and running prior to shutdown. If you still cannot isolate the problem, then the internal power supply may be defective. In this case, contact your dealer.

Installation

Verify that all system components have been properly installed. If one or more components appear to be malfunctioning (e.g. the power cord or network cabling), test them in an alternate environment where you are sure that all the other components are functioning properly.

Transmission Mode

The default method of selecting the transmission mode for RJ-45 ports is 10/100 Mbps Ethernet, for RJ-11 port are 5/15/25Mbps VDSL. Therefore, if the Link signal is disrupted (e.g. by unplugging the network cable and plugging it back in again, or by resetting the power), the port will try to reestablish communications with the attached device via auto-negotiation. If auto-negotiation fails, then communications are set to half duplex by default. Based on this type of industry-standard connection policy, if you are using a full-duplex device that does not support auto-negotiation, communications can be easily lost (i.e. reset to the wrong mode) whenever the attached device is reset or experiences a power fluctuation. The best way to resolve this problem is to upgrade these devices to a version that support Ethernet and VDSL.

Physical Configuration

If problems occur after altering the network configuration, restore the original connections, and try to track the problem down by implementing the new changes, one step at a time. Ensure that cable distances and other physical aspects of the installation do not exceed recommendations

System Integrity

As a last resort verify the switch integrity with a power-on reset. Turn the power to the switch off and then on several times. If the problem still persists and you have completed all the preceding diagnoses, then contact your dealer

Appendix D : Compliance and Safety Information

FCC Radio Frequency Interference Statement

This equipment has been tested and found to comply with the limits for a computing device, pursuant to Part 15 of FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :

- 1.Reorient or relocate the receiving antenna.
- 2.Increase the separation between the equipment and receiver.
- 3.The equipment and the receiver should be connected to outlets on separate circuits.
- 4.Consult the dealer or an experienced radio/television technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

If this telephone equipment causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the proper functioning of your equipment. If they do, you will be notified in advance in order for you to make necessary modifications to maintain uninterrupted service.

This equipment may not be used on coin service provided by the telephone company.
Connection to party lines is subject to state tariffs.

Important Safety Instructions

Caution : The direct plug-in wall transformer serves as the main disconnect for the product. The socket outlet shall be installed near the product and be readily accessible.

Caution : Use only the power supply included with this product. In the event the power supply is lost or damaged : In the United States, use only with CSA certified or UL listed Class 2 power supply, rated 5Vdc 1A or above.

IN Europe, use only with CE certified power supply, rated 5Vdc 1A or above.

Do not use this equipment near water, for example in a wet basement.

Avoid using a telephone during an electrical storm. There may be a remote risk of electrical shock from lightning.

Do not use the telephone to report a gas leak in the vicinity of the leak.

If trouble is experienced with this unit, please contact customer service at the address and phone listed below. Do not disassemble this equipment. It does not contain any user serviceable components.

FCC Warning

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

CE Mark Warning

This is a CE class A product. In a domestic environment, this product may cause radio interference in which case the user may be required to take adequate measures.

Warranty

The original owner that the product delivered in this package will be free from defects in material and workmanship for one year parts after purchase.

There will be a minimal charge to replace consumable components, such as fuses, power transformers, and mechanical cooling devices. The warranty will not apply to any products which have been subjected to any misuse, neglect or accidental damage, or which contain defects which are in any way attributable to improper installation or to alteration or repairs made or performed by any person not under control of the original owner.

The above warranty is in lieu of any other warranty, whether express, implied, or statutory, including but not limited to any warranty of merchantability, fitness for a particular purpose, or any warranty arising out of any proposal, specification, or sample. We shall not be liable for incidental or consequential damages. We neither assume nor authorize any person to assume for it any other liability.

Note: Please do not tear off or remove the warranty sticker as shown, otherwise the warranty will be void.

