

VDSL2 CO&CPE Router USER'S MANUAL

Best viewed at full screen.

VDSL2 Point to Point Solution

VDSL2 (Very-High-Bit-Rate Digital Subscriber Line 2, ITU-T G.993.2 Standard) is an access technology that exploits the existing infrastructure of copper wires that were originally deployed for POTS services. It can be deployed from central offices, from fibre-fed cabinets located near the customer premises or within buildings.

ITU-T G.993.2 VDSL2 is the newest and most advanced standard of DSL broadband wireline communications. Designed to support the wide deployment of Triple Play services such as voice, video, data, high definition television (HDTV) and interactive gaming. VDSL2 enables operators and carriers to gradually, flexibly and cost efficient upgrade on existing xDSL-infrastructure.

ITU-T G.993.2 (VDSL2) is an enhancement to G.993.1 VDSL that permits the transmission of asymmetric and symmetric (Full-Duplex) aggregate data rates up to 200 Mbit/s on twisted pairs using a bandwidth up to 30 MHz.

VDSL2 deteriorates quickly from a theoretical maximum of 250 Mbit/s at 'source' to 100 Mbps at 0.3 km and 50 Mbps at 1 km, but degrades at a much slower rate from there and still outperforms VDSL. Starting from 1.6 km its performance is equal to ADSL2+.

Safety Warnings

For your safety, be sure to read and follow all warning notices and instructions before device use.

- DO NOT open the device or unit. Opening or removing covers can expose you to dangerous high voltage points or other risks. ONLY qualified service personnel can service the device. Please contact your vendor for further information.
- Use ONLY the dedicated power supply for your device. Connect the power cord or power adaptor to the right supply voltage (110V AC in North America or 230V AC in Europe).
- DO NOT use the device if the power supply is damaged as it might cause electrocution.
- If the power supply is damaged, remove it from the power outlet.
- DO NOT attempt to repair the power supply. Contact your local vendor to order a new power supply.
- Place connecting cables carefully so that no one will step on them or stumble over them. DO NOT allow anything to rest on the power cord and do NOT locate the product where anyone can work on the power cord.
- DO NOT install nor use your device during a thoudersstorm. There may be a remote risk of electric shock from lightning.
- DO NOT expose your device to dampness, dust or corrosive liquids.
- DO NOT use this product near water, for example, in a wet basement or near a swimming pool.
- Connect ONLY suitable accessories to the device.
- Make sure to connect the cables to the correct ports.
- DO NOT obstruct the device ventilation slots, as insufficient airflow may harm your device.
- DO NOT store things on the device.
- DO NOT use the device outside, and make sure all the connnections are indoors. There may be a remote risk of electric shock from lightning.
- Be careful when unplugging the power, because the transformer may be very hot.
- Keep the device and all its parts and accessories out of children's reach.
- Clean the device using a soft and dry cloth rather than liquid or atomizers. Power off the equipment before cleansing it.
- This product is recyclable. Dispose of it properly.

Table of Contents

Safety Warnings	2
1.Unpacking Information	7
1.1 <i>Check List</i>	7
2. Complete Installation	8
2.1 <i>Hardware Installation</i>	8
2.2 <i>Pre-installation Requirements</i>	8
2.3 <i>General Rules</i>	9
2.4 <i>VDSL2 CO/CPE Router Connections</i>	9
3. Hardware Description	11
3.1 <i>Front Panel</i>	11
3.2 <i>Six LED indicators</i>	12
3.3 <i>Front Indicators</i>	12
3.4 <i>Rear Panel</i>	13
3.5 <i>Power On</i>	13
4. Configure the VDSL2 CO/CPE Router Via Web Browser	14
4.1 <i>Login</i>	14
4.2 <i>Select the Menu Level</i>	15
4.3 <i>Select Advanced Setup</i>	17
4.4 <i>Select LAN</i>	19

4.4.1 Select LAN Settings and set the IP Address	20
4.4.2 Restart the Settings Dialog	22
5. Configure the VDSL2 CO/CPE Router via Console.....	23
5.1 Setup on Hyperterminal.....	23
5.2 Reset the system to default configuration.....	23
6. Building a VDSL2 System	24
6.1 Connect the VDSL2 CO and CPE ROUTER to the Line.....	25
6.2 Connect the VDSL2 CO and CPE ROUTER to LAN Devices.....	25
6.3 Run Demos and Tests	25
7. Operating the VDSL2 System	26
7.1 Configuration Settings	26
7.1.1 Channel Configuration	27
7.1.2 Line Configuration.....	30
7.1.3 Profile Configuration	31
7.1.4 Band Configuration	37
7.1.5 Loop Back.....	38
7.1.6 Line Activation.....	40
7.2 Status Displays	41
7.2.1 Line Status.....	41
7.2.2 Channel Status	42
7.2.3 Version Info.....	43
7.2.4 SNR Graphs	44
7.2.5 BitsGraphs.....	46
8. Configuration Interface of the Router	47

8.1 Logging in to the VDSL2 CO/CPE Router	48
8.2 Setup Wizard and Advanced Setup	49
8.2.1 Setup Wizard	50
8.2.2 Advanced Setup	51
8.2.3 System	53
8.2.3.1 Administrator Settings	54
8.2.3.2 Firmware Upgrade	56
8.2.3.3 Device Mode	57
8.2.3.4 System Status	58
8.2.3.5 Reboot	59
8.2.3.6 Reset system	60
8.2.4 WAN	61
8.2.4.1 Dynamic IP	62
8.2.4.2 IP Settings	63
8.2.4.3 PPPoE	65
8.2.4.4 DNS	67
8.2.5 LAN	69
8.2.5.1 LAN Settings	70
8.2.5.2 DHCP Client List	72
8.2.5.3 LAN Switch Port Setting	73
8.2.5.4 LAN Port Status	74
8.2.6 NAT	75
8.2.6.1 Virtual Server	76
8.2.6.2 Port Mapping	78
8.2.6.3 DMZ	80
8.2.7 Firewall	81
8.2.7.1 Firewall Options	82
8.2.7.2 Client Filtering	84
8.2.7.3 MAC Control	86
8.2.8 Route Settings	88
8.2.8.1 Static Routing	89

8.2.8.2 Routing Table List	90
8.2.9 UPnP Setting	91
8.2.9.1 Settings.....	92
Appendix A: Product Features & Specification	93
<i>Features:</i>	93
<i>Specifications:</i>	94
Appendix B: Troubleshooting	96
Appendix C : Compliance and Safety Information.....	98
Warranty	101

1.Unpacking Information

1.1 Check List

Carefully unpack the package and check its contents against the checklist.

Package Contents

- VDSL2 Router (VDSL2 for CO router / VDSL2 for CPE router)
- Two rubber feet
- User's Manual
- AC to DC 12V Power Adapter
- RJ-45 cable
- RJ-11 cable

Please inform your dealer immediately for any missing or damaged parts.

If possible, retain the carton including the original packing materials.

Use them to repack the unit in case there is a need to return for repair.

2. Complete Installation

2.1 Hardware Installation

This chapter describes how to install the VDSL2 CO/CPE Router and establishes network connections. This may install the VDSL2 CO/CPE Router on any level surface (e.g, a table or shelf). However, please take note of the following minimum site requirements before you begin.

2.2 Pre-installation Requirements

Before the start actual hardware installation, make sure to provide the right operating environment, including power requirements, sufficient physical space and proximity to other network devices that are to be connected. Verify the following installation requirement:

- Power requirements: DC12V/1A or above.
- The VDSL2 CO/CPE Router should be located in a cool dry place, with at least 10cm/4in of space at the front and back for ventilation.
- Place the VDSL2 CO/CPE Router out of direct sunlight, and away from heat sources or areas with a high amount of electromagnetic interference.
- Check if network cables and connectors needed for installation are available

2.3 General Rules

Before making any connections to the VDSL2 CO/CPE Router, note the following rules:

- Ethernet Port (RJ-45)
All network connections to the Router Ethernet port must be made using Category 5 UTP for 100Mbps;
Category 3, 4 UTP for 10Mbps
No more than 100 meters of cabling may be use between the MUX or HUB and an end node.
- Phone Port (RJ-11)
All Phone set connections to the RJ-11 Port must use 24~26 Gauge phone wiring.

2.4 VDSL2 CO/CPE Router Connections

The VDSL2 CO/CPE Router can be controlled by a PC. For this purpose, a PC is needed with an Ethernet network interface and a DB-9 RS-232 serial interface. Two programs are required: A Web browser is mandatory and a terminal program should be available optionally.

The board has several connectors.

- 4 Ethernet RJ-45 jacks; the Auto MDIX feature of the port switches automatically between MDI and MDI-X (MDI – X = Media Dependant Interface - Crossover). Therefore straight Ethernet cables can be used.
- 2 x RJ-11 jack (Line port is for VDSL client side connection to Line interface, Phone port is for connection to phone set or FAX machine).
- 1 x Console port (access monitoring to operating system for firmware downloads, starting drivers and etc.)
- 1 Power Supply (as described above)

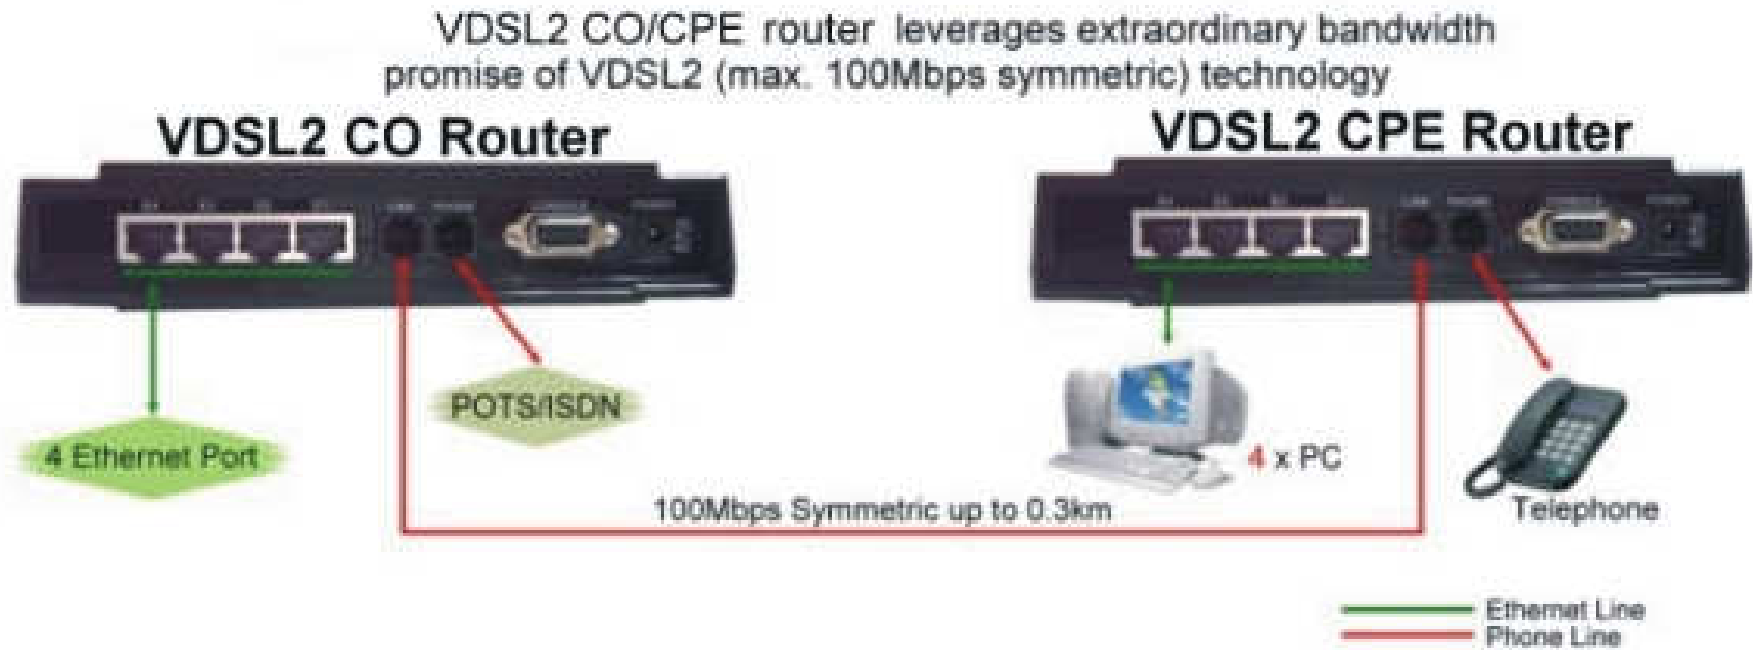


Figure 2.4 VDSL2 Basic Setup

3. Hardware Description

This section describes the important parts of the VDSL2 CO/CPE Router. It features the front indicators and rear connectors.

3.1 Front Panel

The following figure shows the front panel.

Figure 3.1.1 VDSL2 CO ROUTER


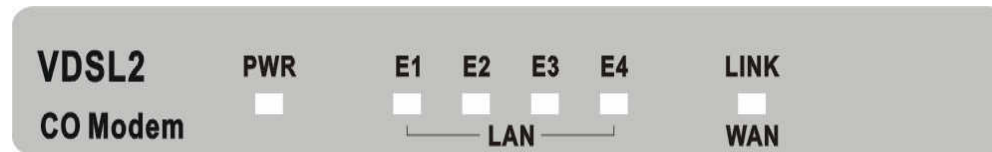


Figure 3.1.2 VDSL2 CPE ROUTER

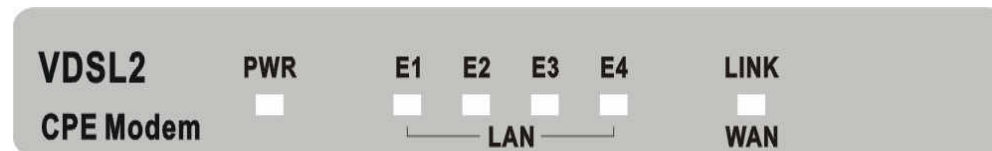

3.2 Six LED indicators

At a quick glance of the front panel, it will be easy to tell if the router has power signal from its Ethernet RJ-45 port or there is phone line signal RJ-11port

3.3 Front Indicators


The following table describes the LEDs.

LEDs	Color	Status	Descriptions
PWR	Green	On	The device is receiving the power and functioning properly.
		Off	The device is not ready or has malfunctioned.
E1~E4 (LAN)	Green	On	The device has a good Ethernet connection.
		Blinking	The device is sending or receiving data.
		Off	The LAN is not connected.
LINK / WAN	Green	On	The Internet or network connection is up.
		Blinking	The device is sending or receiving data.
		Off	The Internet or network connection is down.

3.4 Rear Panel

The following figure shows the rear connectors

Figure 3.4 Rear Connectors

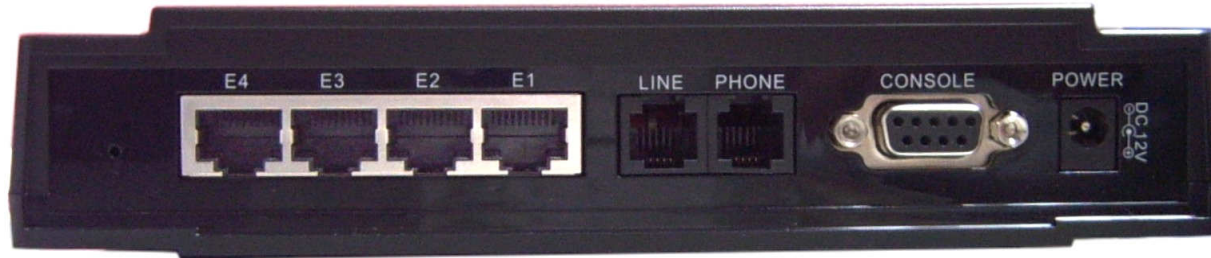

VDSL2 CO/CPE Router Rear Connectors

Connectors	Type	Description
Line	RJ-11	For connecting to the VDSL2 Router Using a RJ-11 cable
Phone	RJ-11	For connecting to the POTS equipment or ISDN router
E1~E4	RJ-45	For connecting to a Ethernet equipped device
Console	RS-232	For connecting to PC with RS-232 serial port over a D-SUB Cable

3.5 Power On

Check the adapter is properly connected.

Verify the power LED is steadily on.

4. Configure the VDSL2 CO/CPE Router Via Web Browser

The VDSL2 CO/CPE Router provides a built-in HTML based management interface that allow user configure the VDSL2 CO/CPE Router via Internet Browser. Recommend using Internet Explorer 6.0 or later version and set screen resolution at 1024 x 768.


In order to use the web browser configure the device, you may need to allow:

- Web browser pop-up windows from your device. Web pop-up blocking is enabled by default in windows XP SP2.
- JavaScripts. (Enabled by default)
- Java permissions. (Enabled by default)

Launch your web browser and input the IP address [192.168.16.249](#) (VDSL2 CO Router) or [192.168.16.250](#) (VDSL2 CPE Router) in the Web page.

4.1 Login

The default password is “[admin](#)“. The password is changeable in Administrator Settings.

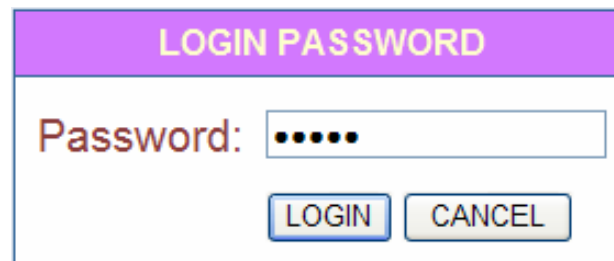

The image shows a web browser window displaying a login form. The form has a purple header bar with the text "LOGIN PASSWORD" in white. Below the header, the word "Password:" is written in a dark red font. To the right of the label is a white text input field with a thin border, containing five black dots. Below the input field are two buttons: "LOGIN" and "CANCEL", both with a light blue gradient and a thin border.

Figure 4.1 Login

4.2 Select the Menu Level

There is an easy Setup Wizard for end users at the VDSL2 CPE Router and an Advanced Setup for more detail configurations. This manual attaches importance to the Advanced Setup.





Figure 4.2 Select the Advanced Setup in the Entry Screen

4.3 Select Advanced Setup

Select the Advanced Setup. The menu below will be used frequently. As an exercise and an example now the IP address will be set.

VDSL2

CO Modem

System

LAN

Route

Vdsl2

Home | Lo

Advanced Setup

The VDSL2 CO Modem supports advanced functions like hacker attackdetection, client filtering, virtual servers, specialapplication access, and a virtual DMZ host.

Netsys recommends you keep the default settings.

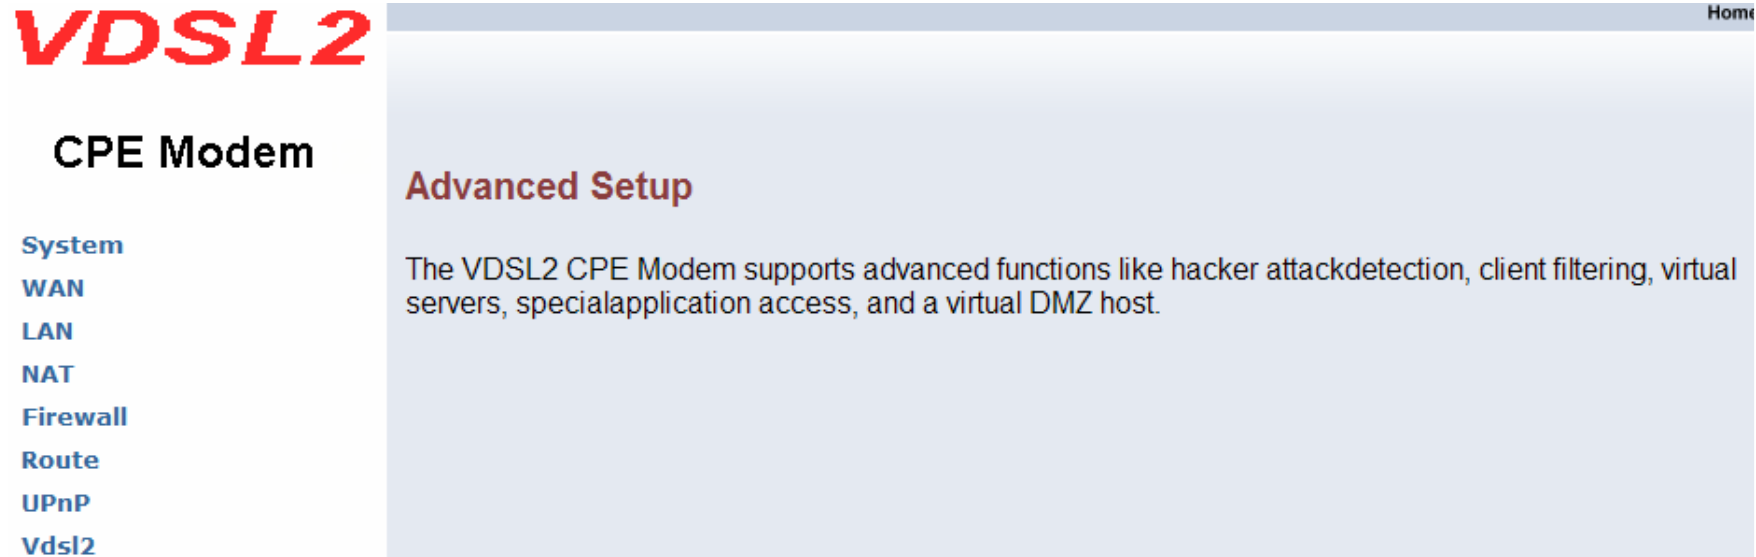


Figure 4.3 Advanced Setup

Attention: The settings in the following [Chapter 4.4](#) only need to be performed in order to change LAN settings. Such a change may be necessary when connecting the VDSL2 CO/CPE Router to a new control PC and/or in order to turn the IP address changed via a shell command into a default address for the next restart of the board.

4.4 Select LAN

The menu below will not be used very often, but when connecting the VDSL2 CO/CPE Router to a new control PC, one may want to go through the following steps in order to make the IP address previously set by ifconfig in the console or on some later occasion one may want to change it again without using the console then the menu below will be helpful. In order to set the IP address, click on “LAN Settings”.

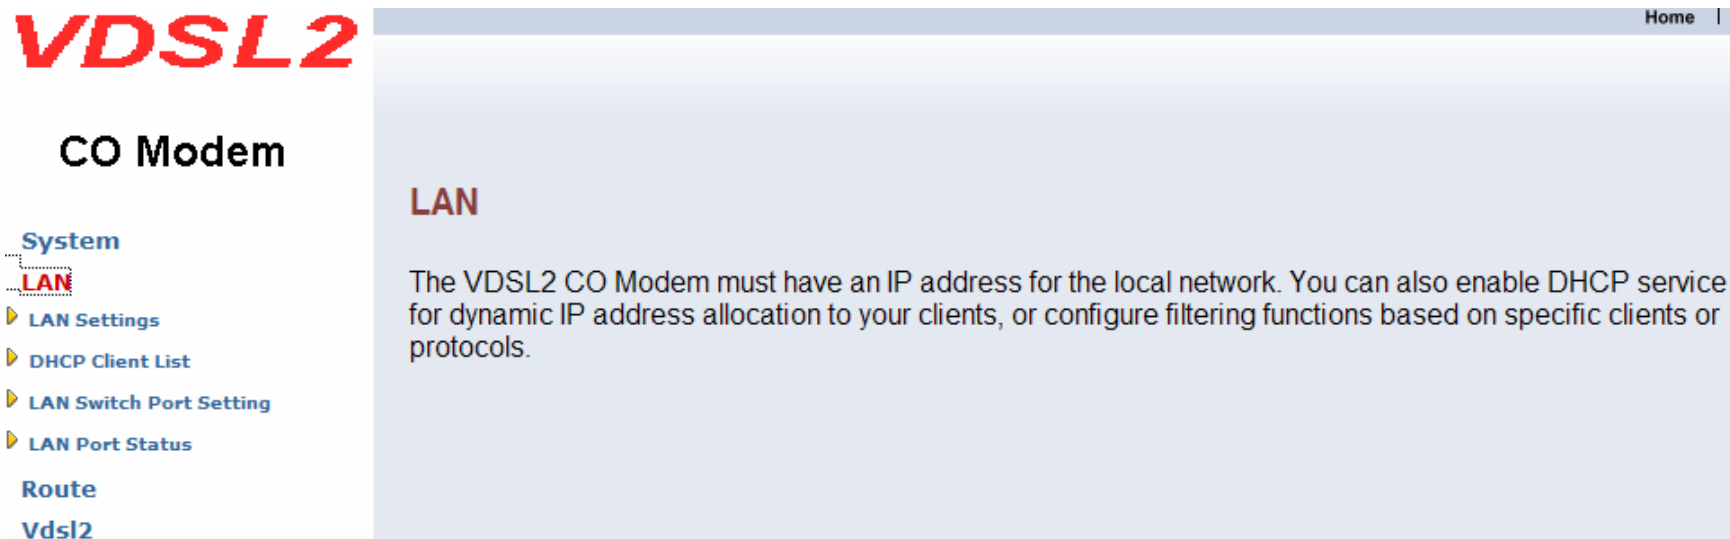


Figure 4.4 LAN menu

4.4.1 Select LAN Settings and set the IP Address

The form below is used to change the IP address of the LAN port “adm0” in the VDSL2 CO/CPE Router.

The proposed IP address is either the default address of adm0 or it is the address changed by an ifconfig command via the shell running in the terminal. The Subnet Mask display can be ignored. In case the DHCP checkbox is checked, some additional data and options will be on display (see [Chapter 8.2.5.1](#) on [Page 70](#)). The DHCP server is not required to work with VDSL2 in a lab environment. It recommend to uncheck the box if it is not unchecked already.

VDSL2

CO Modem

System

LAN

▶ LAN Settings

▶ DHCP Client List

▶ LAN Switch Port Setting

▶ LAN Port Status

Route

Vdsl2

LAN Settings

You can enable DHCP to dynamically allocate IP addresses to your client PCs.

IP Address

Subnet Mask

The Gateway acts as DHCP Server Enable

IP Pool Starting Address

IP Pool Ending Address

Lease Time

Local Domain Name (optional)

VDSL2

CPE Modem

System

WAN

LAN

▶ LAN Settings

▶ DHCP Client List

▶ LAN Switch Port Setting

▶ LAN Port Status

NAT

Firewall

Route

UPnP

Vdsl2

LAN Settings

You can enable DHCP to dynamically allocate IP addresses to your client PCs.

IP Address	<input type="text" value="192"/> <input type="text" value="168"/> <input type="text" value="16"/> <input type="text" value="250"/>
Subnet Mask	<input type="text" value="255.255.255.0"/>
The Gateway acts as DHCP Server	<input checked="" type="checkbox"/> Enable
IP Pool Starting Address	<input type="text" value="192.168.16."/> <input type="text" value="2"/>
IP Pool Ending Address	<input type="text" value="192.168.16."/> <input type="text" value="254"/>
Lease Time	<input type="text" value="Half hour"/> <input type="button" value="v"/>
Local Domain Name	<input type="text"/> (optional)

Figure 4.4.1 LAN Settings

Now the IP address either may be changed or left as it is. If it has been changed in the form or after it has been changed through console ifconfig command, it needs to be “APPLY” in order to make the displayed IP address new default address.

4.4.2 Restart the Settings Dialog

After the “APPLY” button has been hit, the displayed IP address “adm0” port will be stored in a non volatile memory on the VDSL2 CO/CPE Router. Also, the Ethernet link between the control PC and the VDSL2 CO/CPE Router will be re-initialized – even if the IP address has not been changed. Refresh the display of the HTTP browser running on the control PC and login again.

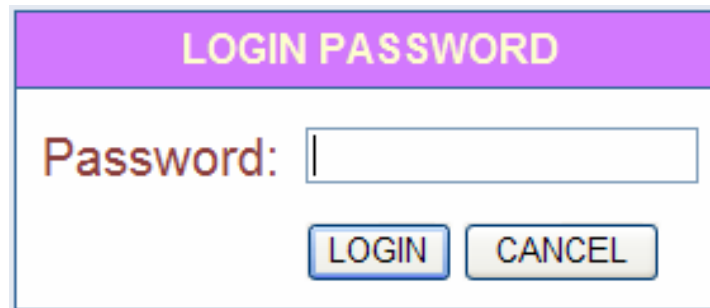
A dialog box titled "LOGIN PASSWORD" with a purple header. Below the header, the text "Password:" is followed by a text input field. At the bottom of the dialog, there are two buttons: "LOGIN" and "CANCEL".

Figure 4.4.2 Login Password

The VDSL2 CO/CPE Router is ready to be controlled by the control PC now.

5. Configure the VDSL2 CO/CPE Router via Console

5.1 Setup on Hyperterminal

Open the Hyperterminal and set the baud rate to 115200, 8N1N to properly set the hyperterminal.

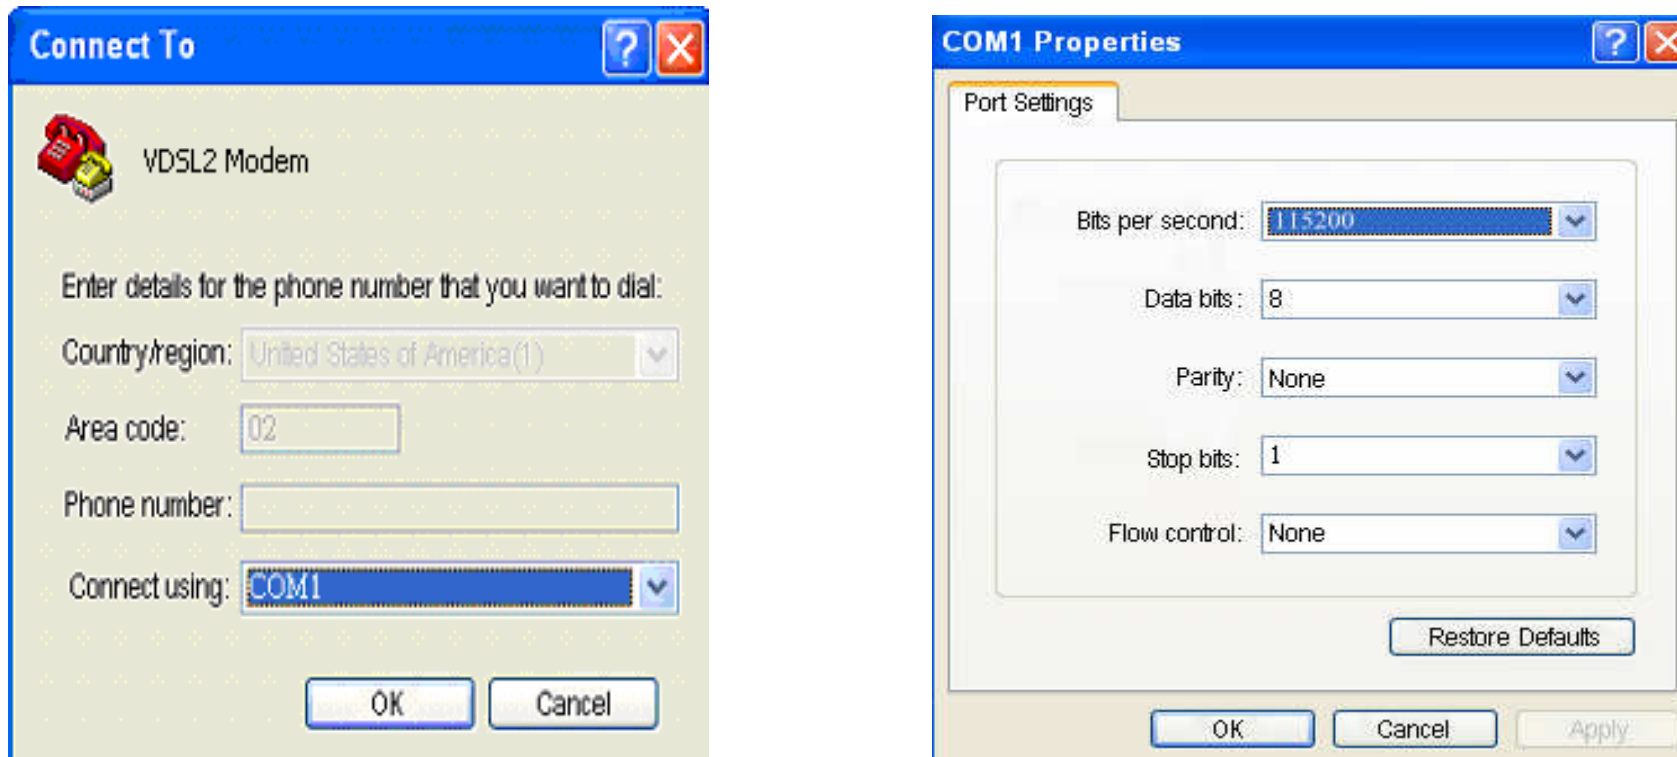


Figure 5 Hyperterminal Configuration

5.2 Reset the system to default configuration.

At the CLI command, write the command “rawaccess –e” to reset the system to default configuration. For it to take effect write the command “reboot” to restart the system.

6. Building a VDSL2 System

First a quick overview on a complete setup of VDSL2 CO/CPE Router.

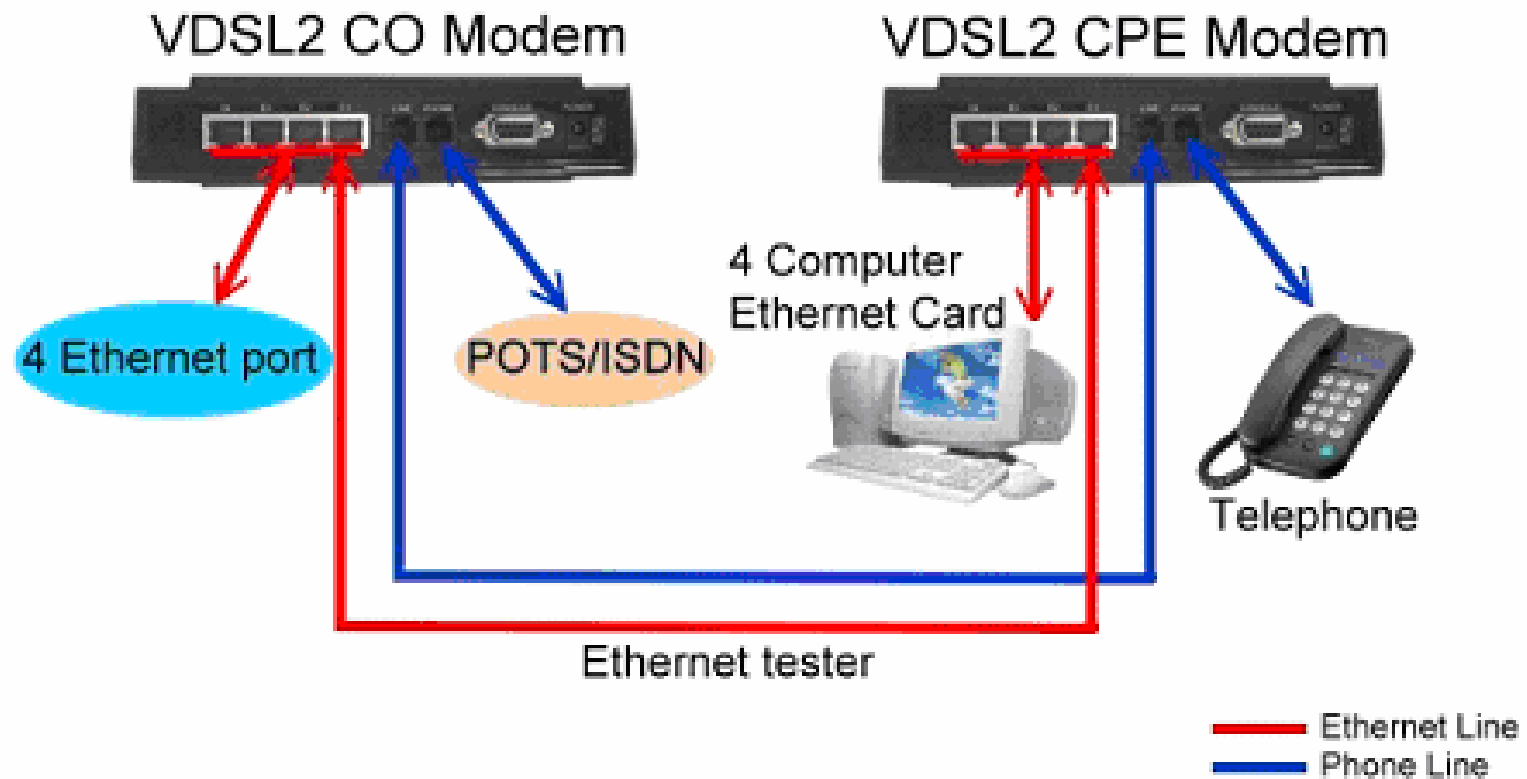


Figure 6 VDSL2 Application

6.1 Connect the VDSL2 CO and CPE ROUTER to the Line

The objective for VDSL2 is to pass high speed data over a twisted pair cable. In the setup, connects VDSL2 CO Router to VDSL2 CPE Router through phone wire or line simulator or any other hardware representation of a cable network, with or without noise injection and crosstalk simulations.

6.2 Connect the VDSL2 CO and CPE ROUTER to LAN Devices

In the setup, usually an Ethernet tester serves as representation of the LAN side as well as representation of the WAN side.

6.3 Run Demos and Tests

The Ethernet tester may send data downstream as well as upstream. It also receives the data in order to check the integrity of the data transmission. Different data rates can be tested under different line conditions.

7. Operating the VDSL2 System

After the VDSL2 system has been set up, one may want to configure the settings that are related to VDSL2. Configuration of operation modes, test modes (loop back) and the display of status information are supported by GUI (Graphical User Interface).

7.1 Configuration Settings

Configure and start the VDSL2 CO Router (CO) and the VDSL2 CPE Router (CPE).

- Configuration: As a minimum configuration, usually selecting the bandplan is required.
See [Chapter 7.1.3, Profile Configuration](#).
- Next, both sides should be activated from the web interface.
See [Chapter 7.1.6, Line Activation](#)
- The connection status of the link can be monitored.
See [Chapter 7.2.1, Line Status](#)

7.1.1 Channel Configuration

This function is for setting VDSL2 channel.

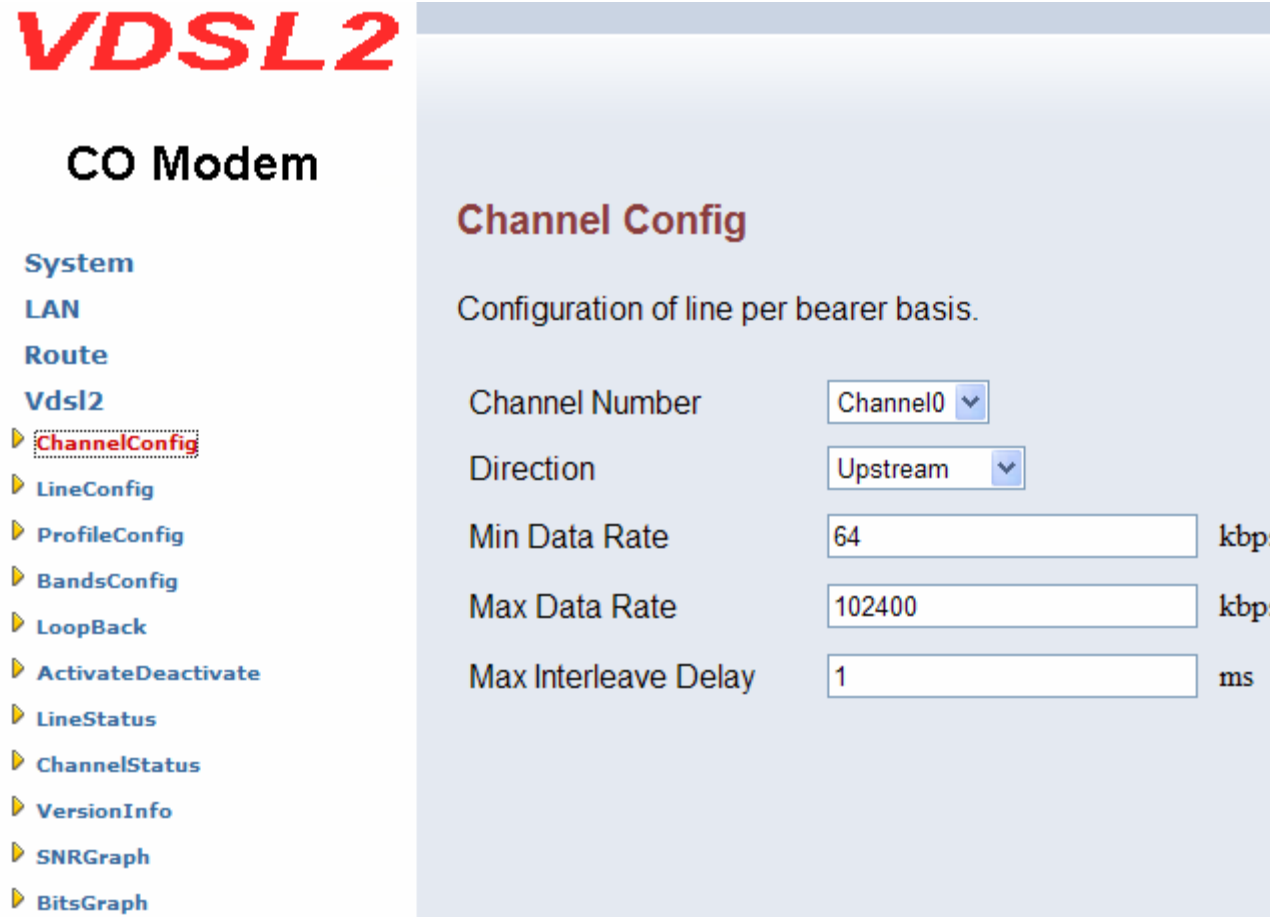



Figure 7.1.1 Channel Configuration Menu

Interleave delay function is used in digital data transmission technology to protect the transmission against noise issue and data error.

If during transit more than a certain amount of data has been lost then the data cannot be correctly decoded. Short bursts of noise on the line can cause these data packets to become corrupt and the router has to re-request data which in turn can slow down the overall rate at which data is transmitted.

Interleaving is a method of taking data packets, chopping them up into smaller bits and then rearranging them so that once contiguous data is now spaced further apart into a non continuous stream. Data packets are re-assembled by your router.

The diagram below is an example of how interleaved traffic is transmitted.

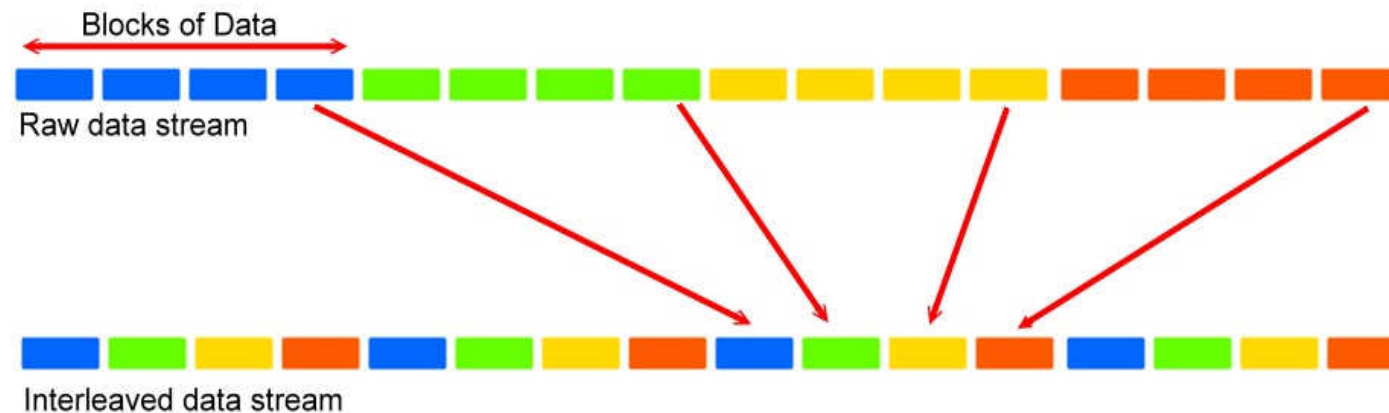

If your line is particularly susceptible to bursts of noise then interleaving should improve your VDSL2 experience simply because if you lose a whole batch of data then this could cause your router to loose sync with the exchange.

Using Interleaving, the router is able to re-assemble the data or if necessary just re-request the part of the data that it is unable to recover. By increasing the interleave depth of each ports that are susceptible to noise, this will improve error performance and stability of marginal lines.

Channel Configuration Settings

Setting	Description
Channel Number	To which bearer channel number shall the settings apply? <ul style="list-style-type: none">• Channel 0
Direction	To which direction shall the settings apply? <ul style="list-style-type: none">• Upstream• Downstream
Min Data Rate	Minimum Payload Data Rate
Max Data Rate	Maximum Payload Data Rate
Max Interleave Delay	Maximum Interleave Delay (set from 1 to 63ms)

Note: The Reboot is needed for saving the new settings.

7.1.2 Line Configuration



Figure 7.1.2 Line Configuration Menu for SNR Margin Selection

Line Configuration

Setting	Description
Direction	Select the target direction.
Target SNRM	Set the required SNR Margin *10 (60=6dB)

7.1.3 Profile Configuration

For this function, VDSL2 CO/CPE Router provides world wide telecom standard band plan, such as meet European telecom standard band plan 998(17a), USA telecom standard band plan 997(8a, 8b) and APAC Telecom standard band plan (30a) etc.

Annex A specifies bandplans for the North American region and enables VDSL2 CO/CPE Router to be deployed with traditional POTS telephony or in an all-digital mode. Annex B specifies bandplans for Europe and enables VDSL2 CO/CPE Router deployment with underlying POTS and ISDN services. Annex C allows VDSL2 CO/CPE Router to coexist with TCM-ISDN services, found primarily in APAC.

VDSL2 CO/CPE Router has numerous configuration profiles and bandplans to meet regional service provider requirements. The frequency bandwidth has increased to 30 MHz, with configuration options at 8.5 MHz, 12 MHz, 17.7 MHz and 30 MHz.

Band profile and band plan can only be configured at VDSL2 CO Router as VDSL2 CPE Router will auto-follow up on the settings of VDSL2 CO Router. The only thing that VDSL2 CPE Router has to be configured so that the routers will link is the tone mode. However, the default tone mode for VDSL2 CO/CPE Router is V43, so at default there's no need to change the tone mode unless it is required by the telecom companies to use different tone mode. Another important thing is that band profile and band plan setting must be compatible to each other if not access error will show when applied. Please deactivate and activate once the setting has been changed.

VDSL2

CO Modem

System

LAN

Route

Vdsl2

▶ ChannelConfig

▶ LineConfig

▶ ProfileConfig

▶ BandsConfig

▶ LoopBack

▶ ActivateDeactivate

▶ LineStatus

▶ ChannelStatus

▶ VersionInfo

▶ SNRGraph

▶ BitsGraph

Profile Config

Configuration of line for specific band plans.

Profile

Band Plan

Filter

ToneMode

VDSL2

CPE Modem

System

WAN

LAN

NAT

Firewall

Route

UPnP

Vdsl2

▶ ChannelConfig

▶ LineConfig

▶ ProfileConfig

▶ LoopBack

▶ ActivateDeactivate

▶ LineStatus

▶ ChannelStatus

▶ VersionInfo

▶ SNRGraph

▶ BitsGraph

Profile Config

Configuration of line for specific band plans.

Filter

ToneMode

Figure 7.1.3.1 Profile Configuration



Figure 7.1.3.2 Band Profile and Plan Setup Error

Profile Region	8a US	8b EU	8c US	8d all	12a all	12b all	17a EU/US	30a APAC
Bandwidth (MHz)	8.832	8.832	8.500	8.832	12.000	12.000	17.664	30.000
Tones	2047	2047	1971	2047	2782	2782	4095	3478
Tone Spacing (kHz)	4.3125	4.3125	4.3125	4.3125	4.3125	4.3125	4.3125	8.625
Line Power (dBm)	+17.5	+20.5	+11.5	+14.5	+14.5	+14.5	+14.5	+14.5
Netsys(Infineon)	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Competitor A	No	No	Yes	Yes	?	Yes	No	No
Competitor B	Yes	No	Yes	Yes	Yes	Yes	CO only	No

Figure 7.1.3.3 Band Profile Region

The following shows the band profile and band plan compatibility:

	Band Profile List		Band Plan List
0	VDSL2 Profile8a	9	Annex A M1_EU32
1	VDSL2 Profile8b	10	Annex A M9_EU64
2	VDSL2 Profile8c	11	Annex B 997-M2x-A (B05)
3	VDSL2 Profile8d	12	Annex B 997-M2x-M (B06)
4	VDSL2 Profile12a	13	Annex B 997-M1c-A-7 (B07)
5	VDSL2 Profile12b	14	Annex B 998-M1x-B (B08)
6	VDSL2 Profile17a	15	Annex B 998-M2x-A (B10)
7	VDSL2 Profile17b	16	Annex B 998-M2x-M (B11)
8	VDSL2 Profile30a	17	Annex B 998-M2x-B (B12)
		18	Annex B 998-M2x-NUS0 (B13)
		19	Annex C
		20	Annex C_8K
		21	Annex B 997-M2x-NUS0
		22	Annex C 1M1
		23	Annex C_8K 1M1
		24	Annex B 998E17-M2x-A
		25	Annex B 998E17-M2x-NUS0

Band Profile \ Band Plan	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25
1	O	O	O	O	O	O	O	O	O	X	X	X	X	X	X	X	X
2	O	O	O	X	O	X	O	O	O	X	X	X	X	X	X	X	X
3	X	X	O	X	O	O	O	O	X	X	X	X	X	X	X	X	X
4	O	O	O	O	O	O	O	O	O	X	X	X	X	X	X	X	X
5	O	O	X	X	O	O	O	O	O	O	X	X	X	X	X	X	X
6	O	X	X	X	O	O	O	O	O	X	O	X	X	O	X	X	O
7	X	X	X	X	X	X	X	O	O	X	X	X	X	X	X	O	X
8	O	X	X	X	X	X	X	X	X	X	X	O	O	X	O	X	X

Note: O = Compatible ; X = Not Compatible

The following phone cable distance and data rates are possible according to the band profile and band plan setup:

Default plan profile and band plan = 30a and C8K

At distance 0-350m, data rates are at 100Mbps for both downstream and upstream

350-450m, data rates are at 70-85/40Mbps for downstream/upstream

450-600m at 40-60/10Mbps for downstream/upstream

600-900m at 20-40/1-5Mbps for downstream/upstream

Note: Using Band profile 30a and band plan C8K for distances beyond 900m is not recommended

Alternative band profile and band plan = 8d and M1_EU32

At distance 0-800m, data rates are at 60-80/15Mbps for both downstream/upstream.

800-1200m, data rates are at 30-50/5-10Mbps for downstream/upstream

1200-1500m, data rates are at 30/2-5Mbps for downstream/upstream

Note: Using Band profile 8d and band plan M1_EU32 for distances beyond 1500m is not recommended

Additional: Downstream: Traffic from Transmitter to Receiver

Upstream: Traffic from Receiver to Transmitter

7.1.4 Band Configuration

This function is for setting tones for each band. This function can only be seen at VDSL2 CO Router web management only.

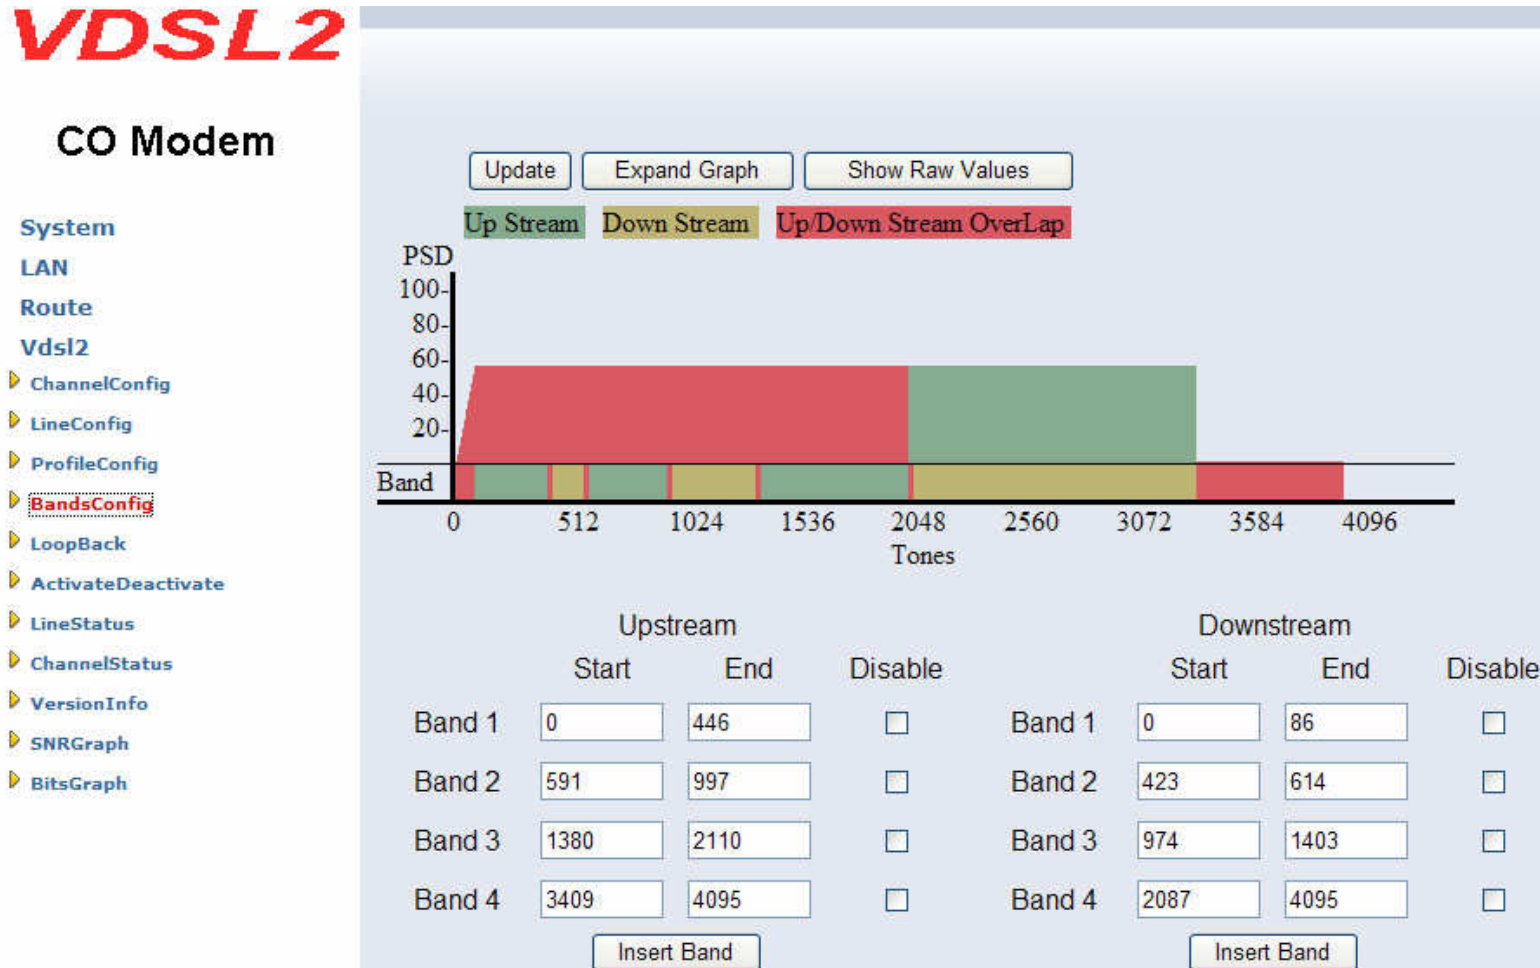


Figure 7.1.4 Band Configuration

7.1.5 Loop Back

The loop back testing function for checking phone wire link problem: 1. System Loop. 2. Line Side Loop

VDSL2

CO Modem

System

LAN

Route

Vdsl2

▶ ChannelConfig

▶ LineConfig

▶ ProfileConfig

▶ BandsConfig

▶ **LoopBack**

▶ ActivateDeactivate

▶ LineStatus

▶ ChannelStatus

▶ VersionInfo

▶ SNRGraph

▶ BitsGraph

Loop Back

Setting Of Loop Backs.(System - System Loop,LoopBack after MAC layer or Line Side LoopBack)

Channel Number

Loop

State



Figure 7.1.5 Loop Back Activation/Deactivation Menu

Loop Back

Setting	Description
Channel No.	To which bearer channel number shall the settings apply? Channel 0
Loop	System loop or line side loop
State	Activate or deactivate loop back within the transmission convergence layer

7.1.6 Line Activation

This function is for enable/disable VDSL2 port.



Figure 7.1.6 Activation and Deactivation of the Line

Line Activation/Deactivation

Setting	Description
Line	Activate or deactivate the line. (Select the activity and the press the APPLY button.)

7.2 Status Displays

7.2.1 Line Status

This function provides SNR value for checking phone wiring quality.

VDSL2

CO Modem

- System
- LAN
- Route
- Vdsl2
 - ▶ ChannelConfig
 - ▶ LineConfig
 - ▶ ProfileConfig
 - ▶ BandsConfig
 - ▶ LoopBack
 - ▶ ActivateDeactivate
 - ▶ **LineStatus**
 - ▶ ChannelStatus
 - ▶ VersionInfo
 - ▶ SNRGraph
 - ▶ BitsGraph

Line Status

Status of the Line.

	Upstream	Downstream
State	showtime tc sync	showtime tc sync
Band1 Actual SNR	7.700000 dB	8.500000 dB
Band2 Actual SNR	6.900000 dB	7.800000 dB
Band3 Actual SNR	8.200000 dB	8.500000 dB
Band4 Actual SNR	-3276.800049 dB	-3276.800049 dB
Band5 Actual SNR	-3276.800049 dB	-3276.800049 dB

Figure 7.2.1 Line Status Display: Actual SNR

The following status messages may occur: not_initialized, exception, idle request, idle, silent request, silent, handshake, full init, discovery, training, analysis, exchange, showtime no sync, showtime tc sync, fast retrain, lowpower I2, loopdiagnostic, loopdiagnostic complete, resync, test, lowpower I3, unknown.

7.2.2 Channel Status

This function shows VDSL2 port status.

VDSL2

CO Modem

System

LAN

Route

Vdsl2

- ▶ ChannelConfig
- ▶ LineConfig
- ▶ ProfileConfig
- ▶ BandsConfig
- ▶ LoopBack
- ▶ ActivateDeactivate
- ▶ LineStatus
- ▶ **ChannelStatus**
- ▶ VersionInfo
- ▶ SNRGraph
- ▶ BitsGraph

Channel Status

Status of the bearer .

Channel Number	Channel0 ▾	
	Upstream	Downstream
Actual Data Rate	92692 kbps	102404 kbps
Actual Interleave Delay	0.000000 ms	0.000000 ms
Total CRC Count	0	2177
Total FEC Count	7	5
Actual INP	0.000000 Symbols	0.000000 Symbols

Figure 7.2.2 Channel Status Display: Data Rate, Delay, Error Counters and Impulse Noise Protection

7.2.3 Version Info

This function shows hardware and firmware version.

VDSL2

CO Modem

System

LAN

Route

Vdsl2

- ▶ ChannelConfig
- ▶ LineConfig
- ▶ ProfileConfig
- ▶ BandsConfig
- ▶ LoopBack
- ▶ ActivateDeactivate
- ▶ LineStatus
- ▶ ChannelStatus
- ▶ **VersionInfo**
- ▶ SNRGraph
- ▶ BitsGraph

Version Info


Version Numbers.

Web Interface Version	D.4n
DSL API Library Version	2.0.12
Chip Set FW Version	9.7.3.11.0.2
Chip Set HW Version	VINAX-DFE_V1.3_mono_reticle
DSL Driver Version	0.1.4.8

Figure 7.2.3 Display of Version Data

7.2.4 SNR Graphs

When VDSL2 CO Router links with VDSL2 CPE Router, this graph will show the SNR value for each band.

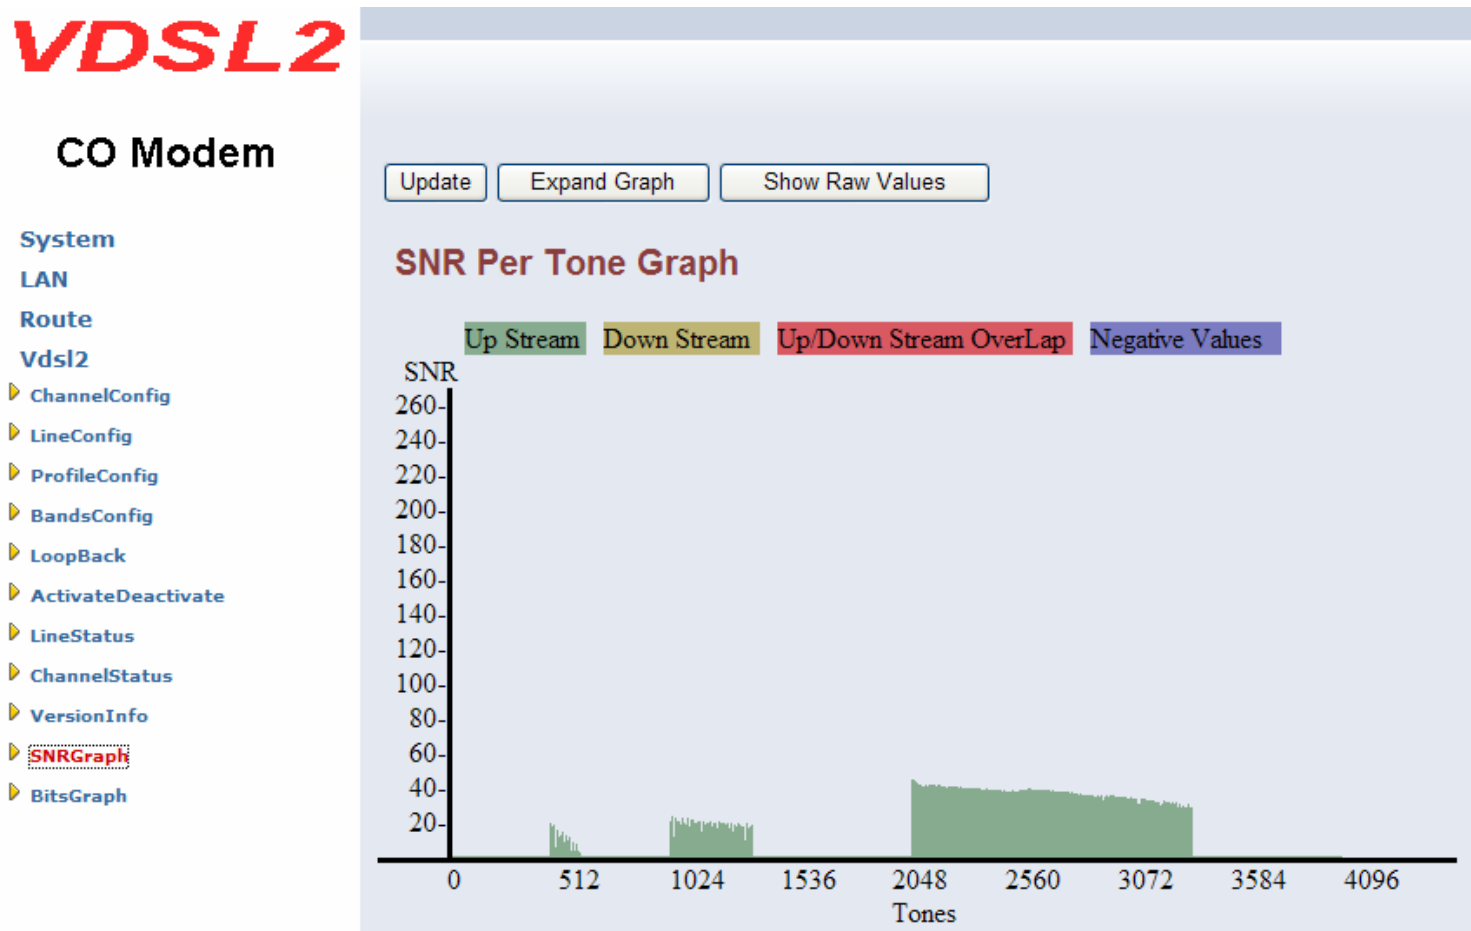

VDSL2

CPE Modem

System

WAN

LAN

NAT

Firewall

Route

UPnP

Vdsl2

▶ ChannelConfig

▶ LineConfig

▶ ProfileConfig

▶ LoopBack

▶ ActivateDeactivate

▶ LineStatus

▶ ChannelStatus

▶ VersionInfo

▶ **SNRGraph**

▶ BitsGraph

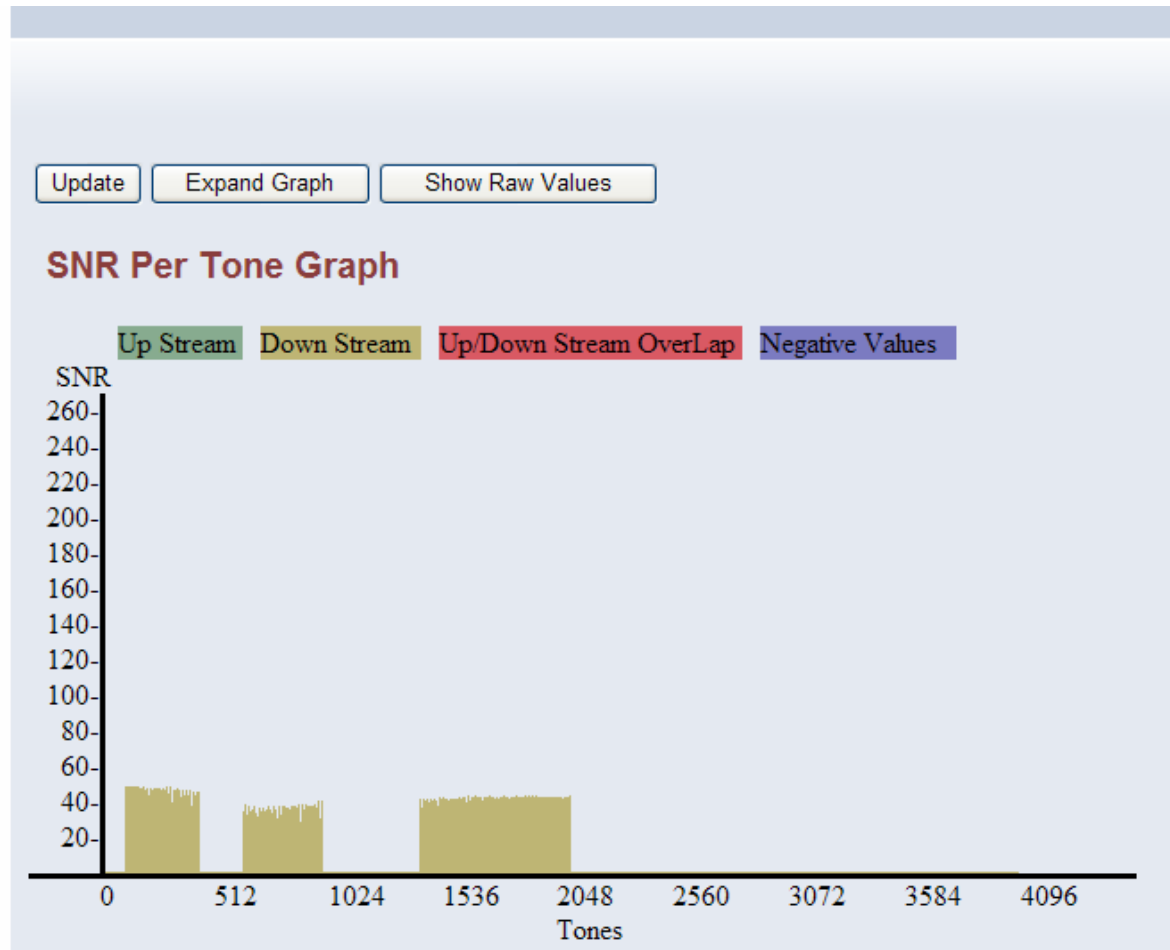


Figure 7.2.4 Display of SNR per Carrier

7.2.5 BitsGraphs

When VDSL2 CO Router links with VDSL2 CPE Router, this graph will show the bits value for each tone.

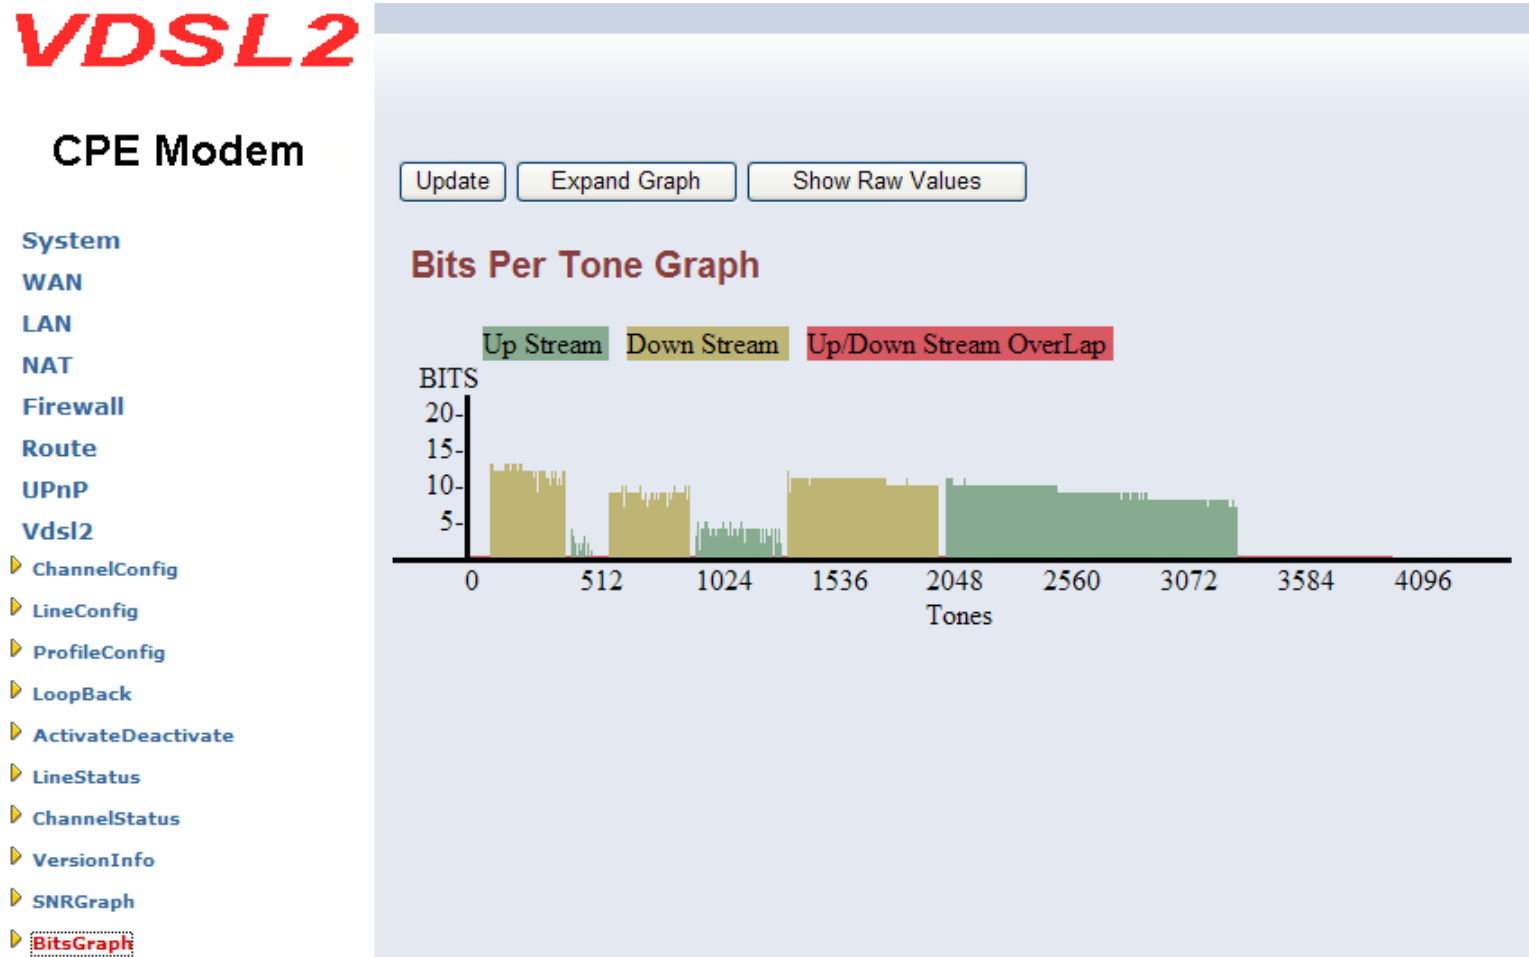


Figure 7.2.5 Display Bits Per Tone Graph

8. Configuration Interface of the Router

This section explains how to configure the router section of the VDSL2 CO/CPE Router using its web-based configuration.

The part of the circuitry as well as the router configuration menu has been ported from that of the reference kit to the VDSL2 CO/CPE Router reference board. As for the menu, there are only a few differences:

- The “adm1” port now is the port to the VDSL2 side. The port on the LAN is “adm0”. It supports four Ethernet connections.
- The IP addresses are used in this chapter are different from the examples in the previous chapters.
- The password used in this chapter is different from the examples in the previous chapters.

8.1 Logging in to the VDSL2 CO/CPE Router

To log on to the VDSL2 CO/CPE Router Web Application, you must have a valid password. The Administrator creates the log on user with its password. When one log on to the VDSL2 CO/CPE Router Web Application, the LOGIN PASSWORD window is displayed as shown in [Figure 8.1](#).



The image shows a web application window titled "LOGIN PASSWORD". The window has a purple header bar with the text "LOGIN PASSWORD" in white. Below the header, the word "Password:" is displayed in a dark font, followed by a white text input field with a blue border. At the bottom of the window, there are two buttons: "LOGIN" and "CANCEL", both with blue borders and light gray backgrounds.

Figure 8.1 VDSL2 CO/CPE Router Web Application

In the LOGIN PASSWORD window:

1. Enter the password in the Password text box. For an Admin user, the default password is “[admin](#)”.
2. Click LOGIN to begin the configuration or click CANCEL in the LOGIN PASSWORD window to cancel this log on operation.

8.2 Setup Wizard and Advanced Setup

There is an easy Setup Wizard for end users at the VDSL2 CPE router and an Advanced Setup for more detail configurations for both VDSL2 CO/CPE Router. This manual gives importance to the Advanced Setup.



Figure 8.2 Select the Advanced Setup in the Entry Screen

8.2.1 Setup Wizard

The Setup Wizard is designed for ease-of-use in order to quickly configure the most common settings. The Admin can view the Setup Wizard link in the homepage. The wizard first step is to allow the admin to configure the system host settings displayed as shown in [Figure 8.2.1](#)

VDSL2

CPE Modem

- 1. Host Settings**
- 2. WAN Type**
- 3. WAN Settings**
- 4. DNS**

The screenshot shows the '1. Host Settings' step of the VDSL2 Setup Wizard. It features two input fields: 'Host Name' with the value 'VDSL2_CPE_modem' and 'Domain Name' with the value 'vdsl2.com.tw'. Below the fields is a blue instruction: 'Enter the unique host name for the , and the domain name of your organization.'

Figure 8.2.1 Setup Wizard's First Step

There are four steps to complete the wizard. Follow the instructions given in each step and enter the desired settings.

8.2.2 Advanced Setup


Click on the Advanced Setup link in the homepage in case you want to configure a wider range of settings. Router setup are only located at VDSL2 CPE ROUTER. So the WAN, NAT, Firewall and UPnP are only seen at VDSL2 CPE router advanced setup menu. The following configuration options are displayed in the left navigation bar, as shown in [Figure 8.2.2](#).

- System
- WAN (VDSL2 CPE Router only)
- LAN
- NAT (VDSL2 CPE Router only)
- Firewall (VDSL2 CPE Router only)
- Route
- UPnP (VDSL2 CPE Router only)
- VDSL2

VDSL2

CO Modem

System
LAN
Route
Vdsl2

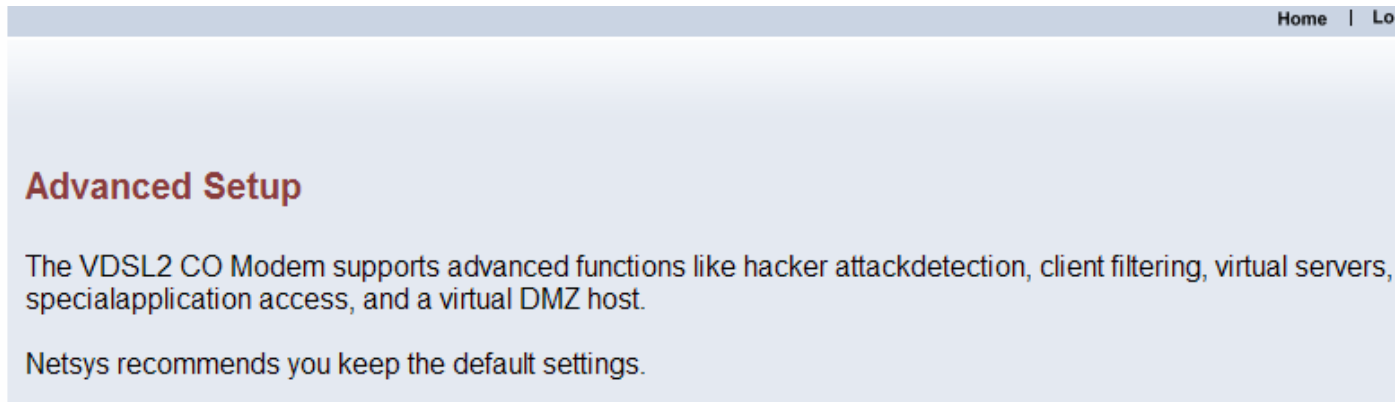

Home | Lo

Advanced Setup

The VDSL2 CO Modem supports advanced functions like hacker attackdetection, client filtering, virtual servers, specialapplication access, and a virtual DMZ host.

Netsys recommends you keep the default settings.

VDSL2

CPE Modem

- System
- WAN
- LAN
- NAT
- Firewall
- Route
- UPnP
- Vdsl2

Advanced Setup

The VDSL2 CPE Modem supports advanced functions like hacker attackdetection, client filtering, virtual servers, specialapplication access, and a virtual DMZ host.

Figure 8.2.2 Advanced Setup

8.2.3 System

The System link can be viewed in the left navigation bar. The following are the options available under System, as shown in [Figure 8.2.3](#).

- Administrator Settings
- Firmware Upgrade
- Device Mode (VDSL2 CPE ROUTER only)
- System Status
- Reboot
- Reset System

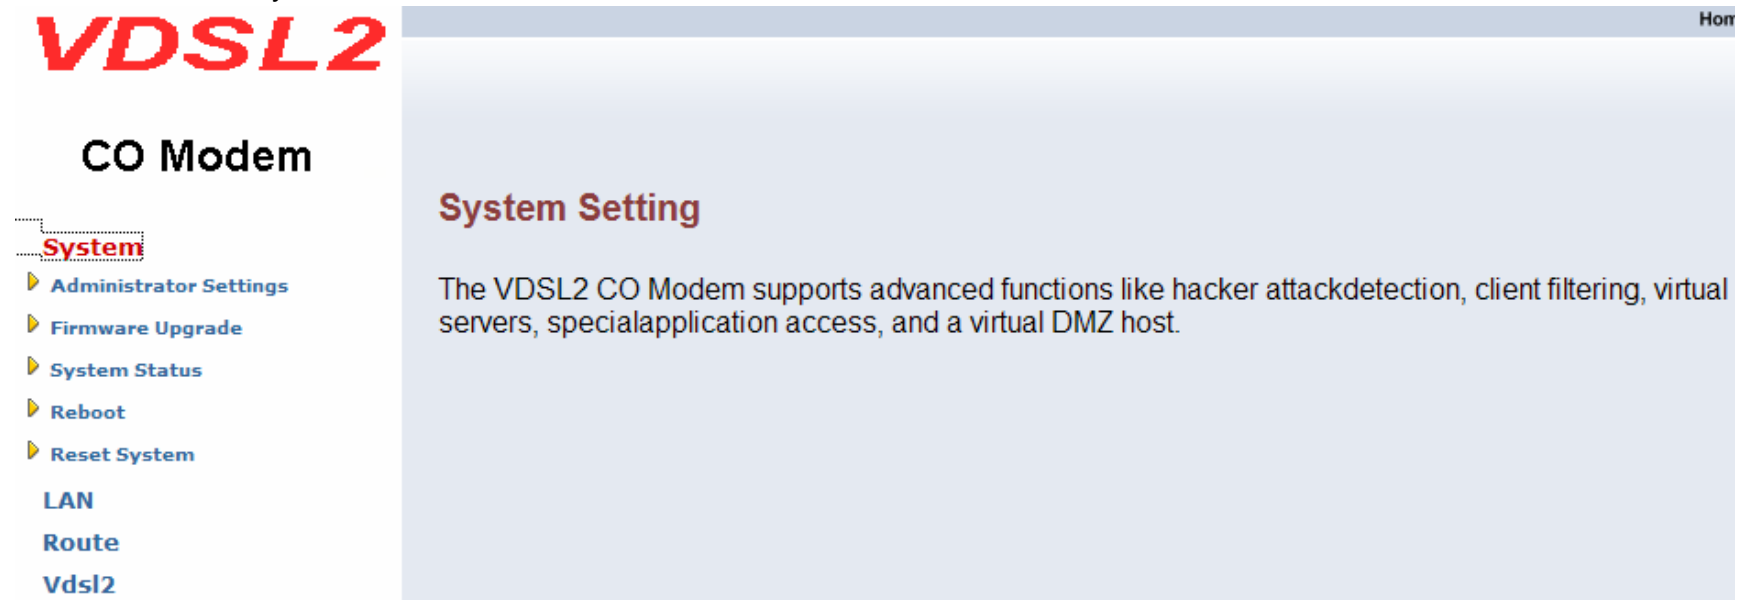


Figure 8.2.3 System in the Left Navigator Bar

8.2.3.1 Administrator Settings

To add a user or change user's password, click on the Administrator Settings link in the left navigation bar. A screen is displayed as shown in [Figure 8.2.3.1](#).

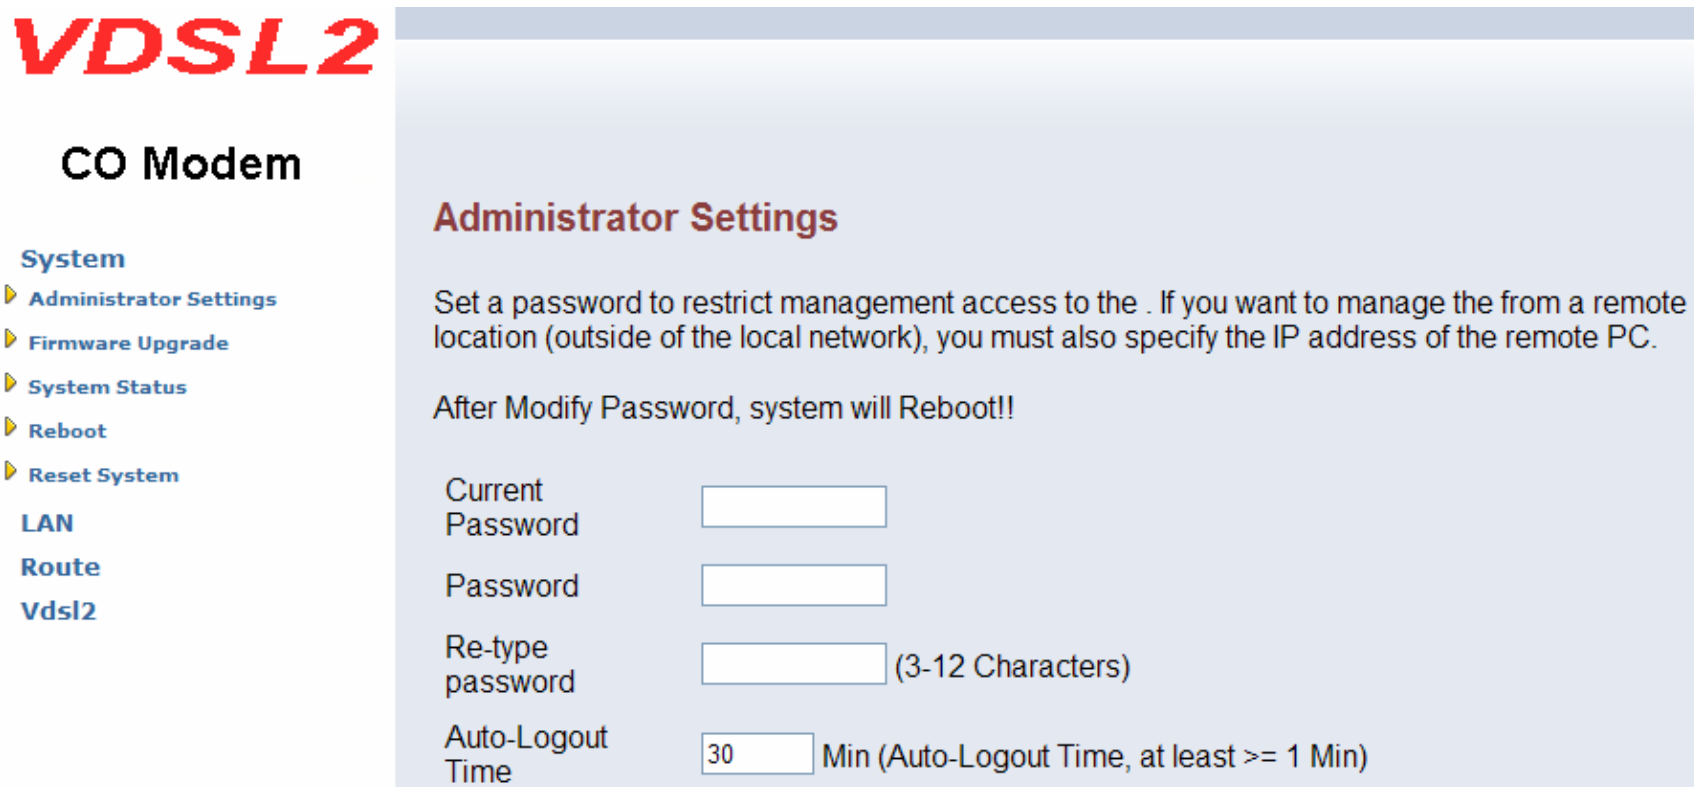


Figure 8.2.3.1 Administrator Settings Configuration

While adding a user, each user must assign a separate port. Hence the number of users that can be added to the system depends on the number of ports available on the VDSL2 CO/CPE Router.

The screen contains the following details:

Fields in User Setting

Field	Description
Current Password	This is the password associated with the administrator. This is enabled only for the user Administrator login.
Password	This is the password of the login administrator.
Re-type Password	This is the password verification.
Auto-Logout Time	The auto-logout time, at least one minute.

- Click APPLY to save the information that has been entered.
- Click CANCEL to exit from this page without saving the changes.

8.2.3.2 Firmware Upgrade

To update the system firmware, click on the Firmware Upgrade link in the left navigation bar. A screen is displayed as shown in 8.2.3.2

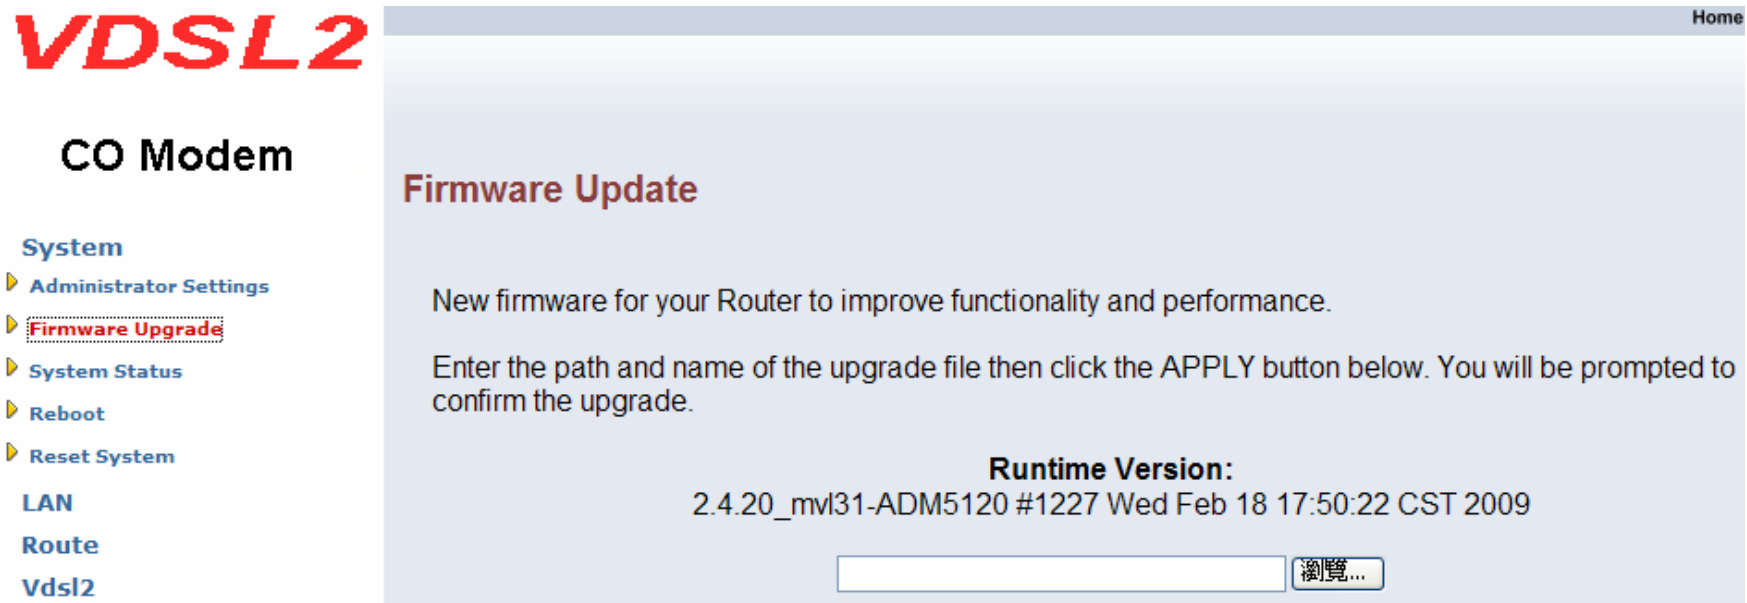


Figure 8.2.3.2 Firmware Update

The screen contains the following detail:

- Click APPLY to start the firmware update.
- Click Browse to select a specified file name to change the File Name.

8.2.3.3 Device Mode

The ADM5120 network processor used in the reference system is able to act as either a switch or a router. Clicking on Device Mode on the left navigation bar allows the user to change the mode of operation, as shown in the following figure.

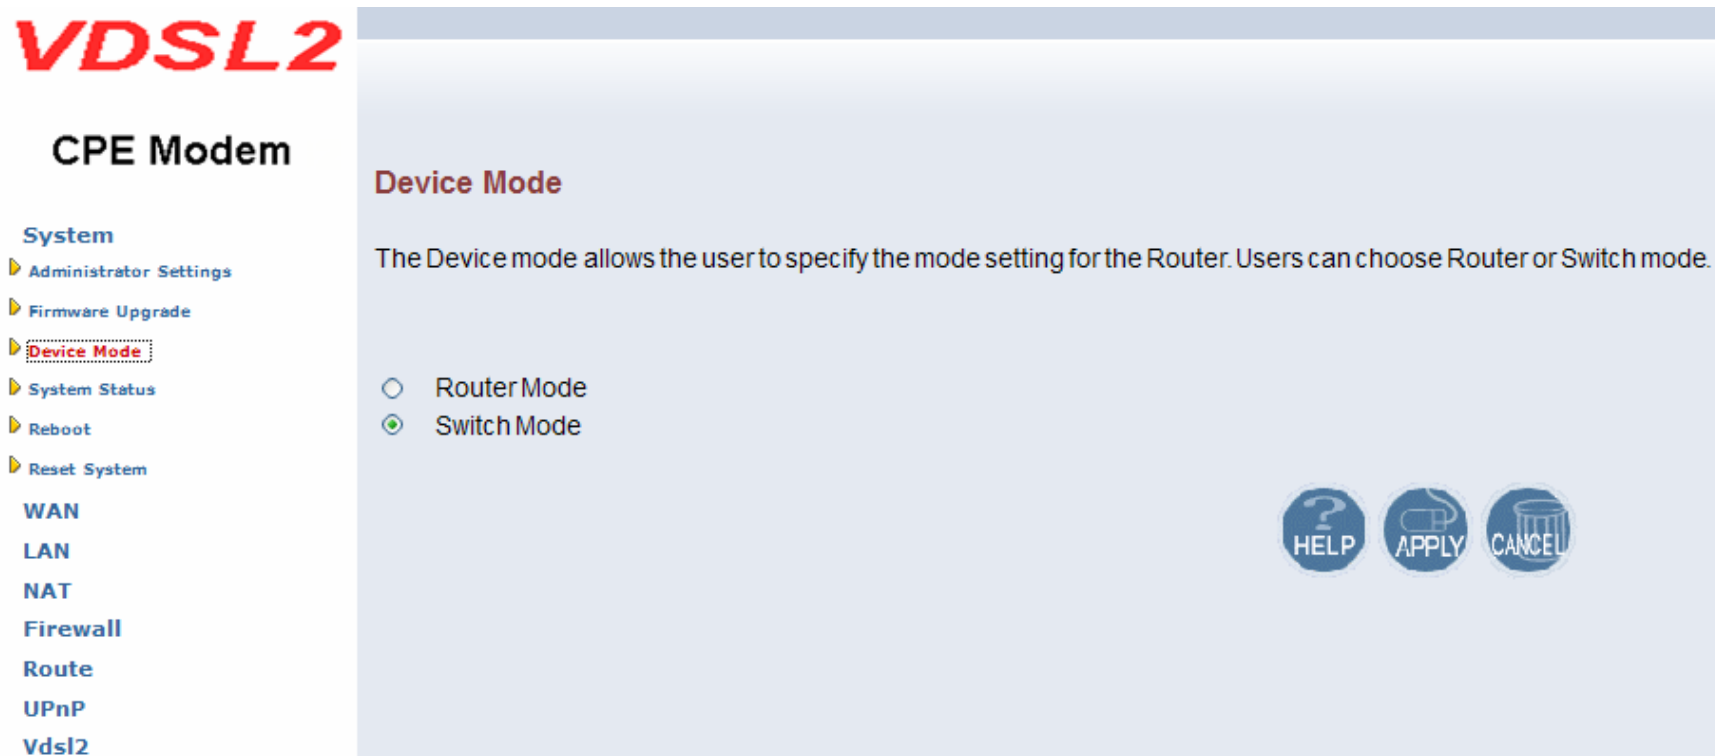


Figure 8.2.3.3 Device Mode

The default setting is in Switch mode, it is not necessary to change the setting in most of the case. In situations, which devices (e.g. PC, Server, VoIP) connected to CPE requires Router function. Hence, set the CPE on Router mode.

8.2.3.4 System Status

To view system status, click on the System Status link in the left navigation bar. A screen is displayed as shown in Figure 8.2.3.4

VDSL2

CO Modem

System

- Administrator Settings
- Firmware Upgrade
- System Status**
- Reboot
- Reset System

LAN

- Route
- Vdsl2

Status

You can use the Status screen to see the connection status for the Routers' WAN/LAN interfaces, firmware and hardware version numbers, and the number of connected clients to your network.

INTERNET

WAN IP	0.0.0.0
SubnetMask	0.0.0.0
Gateway	0.0.0.0
DNS	0.0.0.0
Secondary DNS	0.0.0.0
Connection Type	FIXED

GATEWAY

IP Address	192.168.16.249
SubnetMask	255.255.255.0
DHCP Server	Disable
Firewall	Disable

INFORMATION

Connected Clients	0
Runtime Code Version	2.4.20_mv131-ADM5120 #1227 Wed Feb 18 17:50:22 CST 2009
LAN MAC Address	00:05:6E:00:68:78
WAN MAC Address	00:05:6E:00:68:79
Hardware Version	1.00.00

Figure 8.2.3.4 Status Window

8.2.3.5 Reboot

To reboot the unit, click on the Reboot link in the left navigation bar. A screen is displayed as shown in [Figure 8.2.3.5](#).

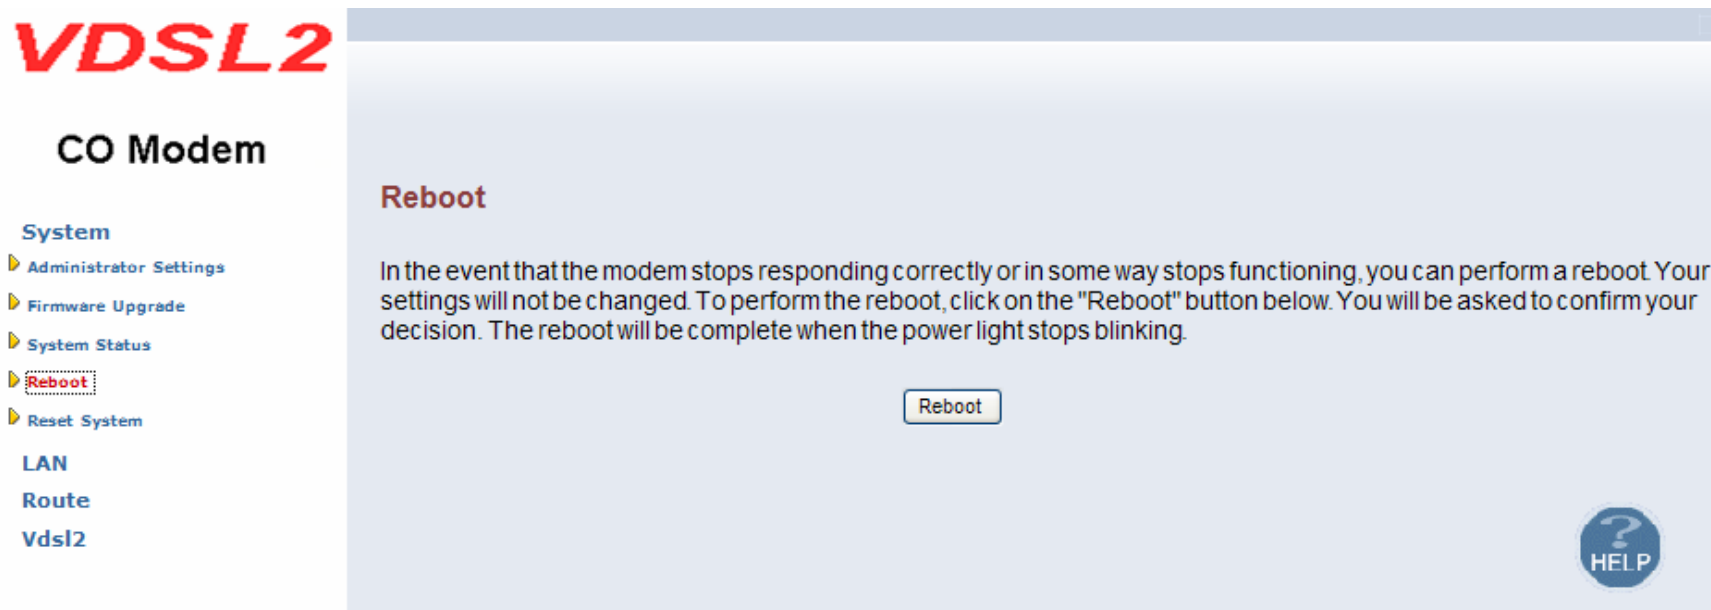


Figure 8.2.3.5 Reboot VDSL2 CO/CPE Router

- Click Reboot to restart the unit.

8.2.3.6 Reset system

To reset the system, click on the Reset link in the left navigation bar. A screen is displayed as shown in [Figure 8.2.3.6](#).

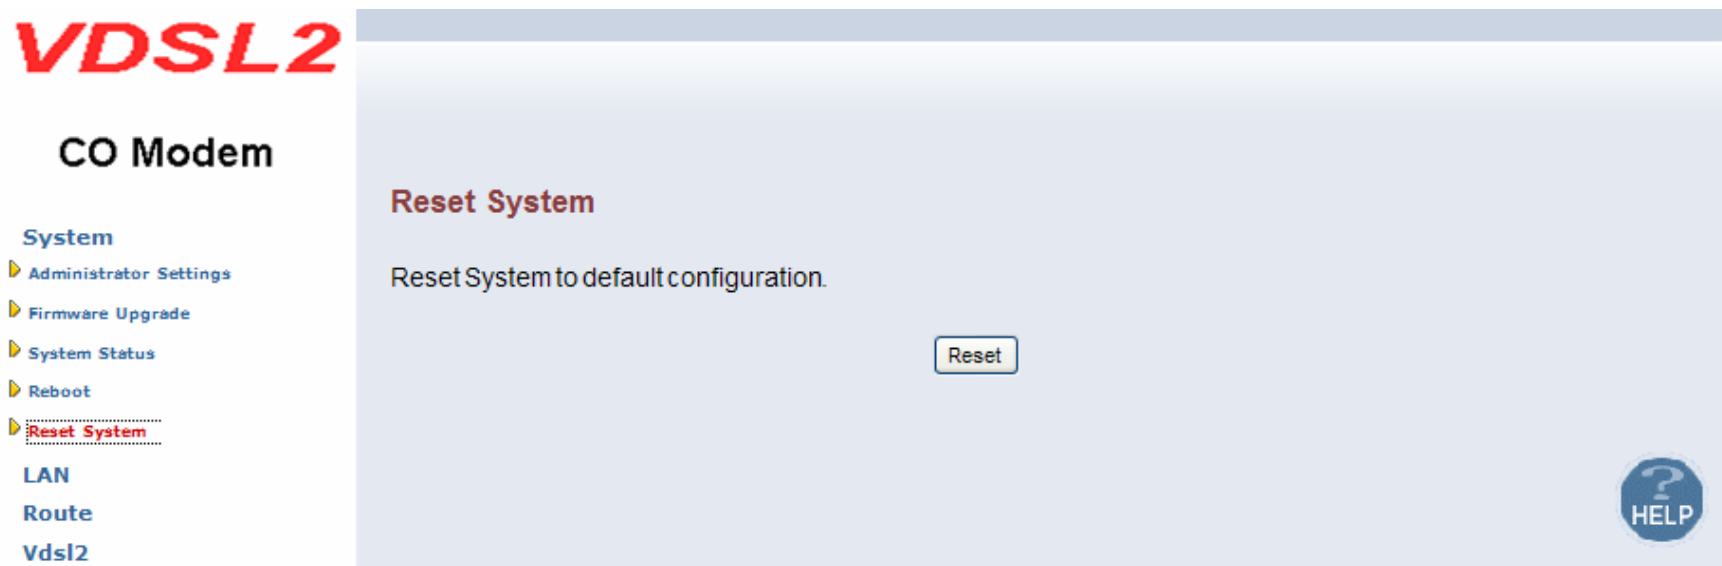


Figure 8.2.3.6 Reset VDSL2 CO/CPE Router

- Click Reset to restart the system to default configuration.

8.2.4 WAN

The WAN settings can be viewed in the left navigation bar of VDSL2 CPE Router only. The following are the options available under WAN, as shown [Figure 8.2.4](#):

- Dynamic IP
- IP Settings
- PPPoE
- DNS

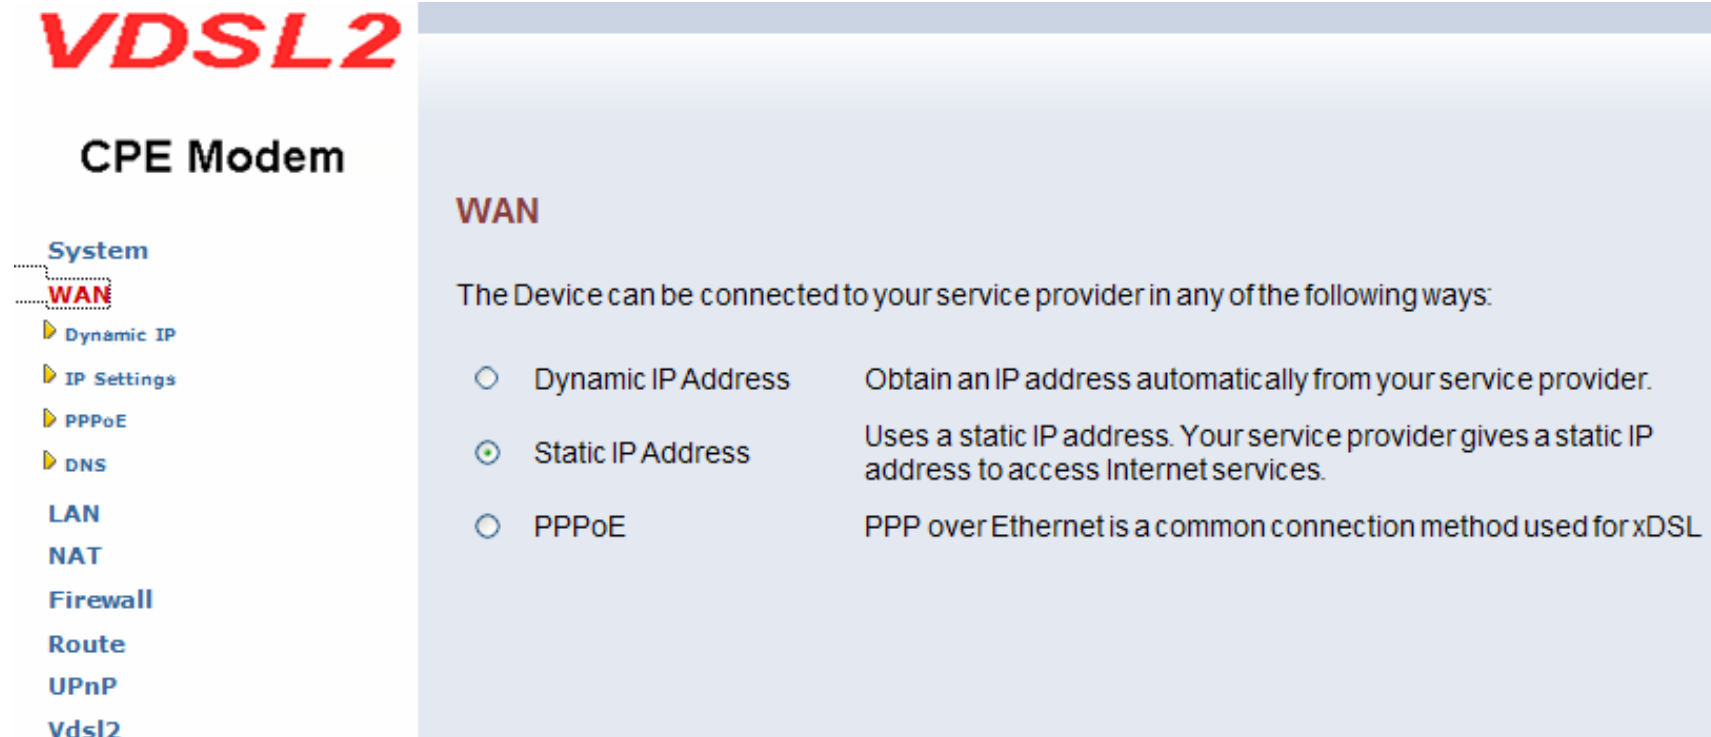


Figure 8.2.4 WAN Setting in Left Navigator Bar

8.2.4.1 Dynamic IP

To configure the WAN interface to dynamically obtain an IP Address, click on the Dynamic IP link in the left navigation bar. A screen is displayed as shown in [Figure 8.2.4.1](#).

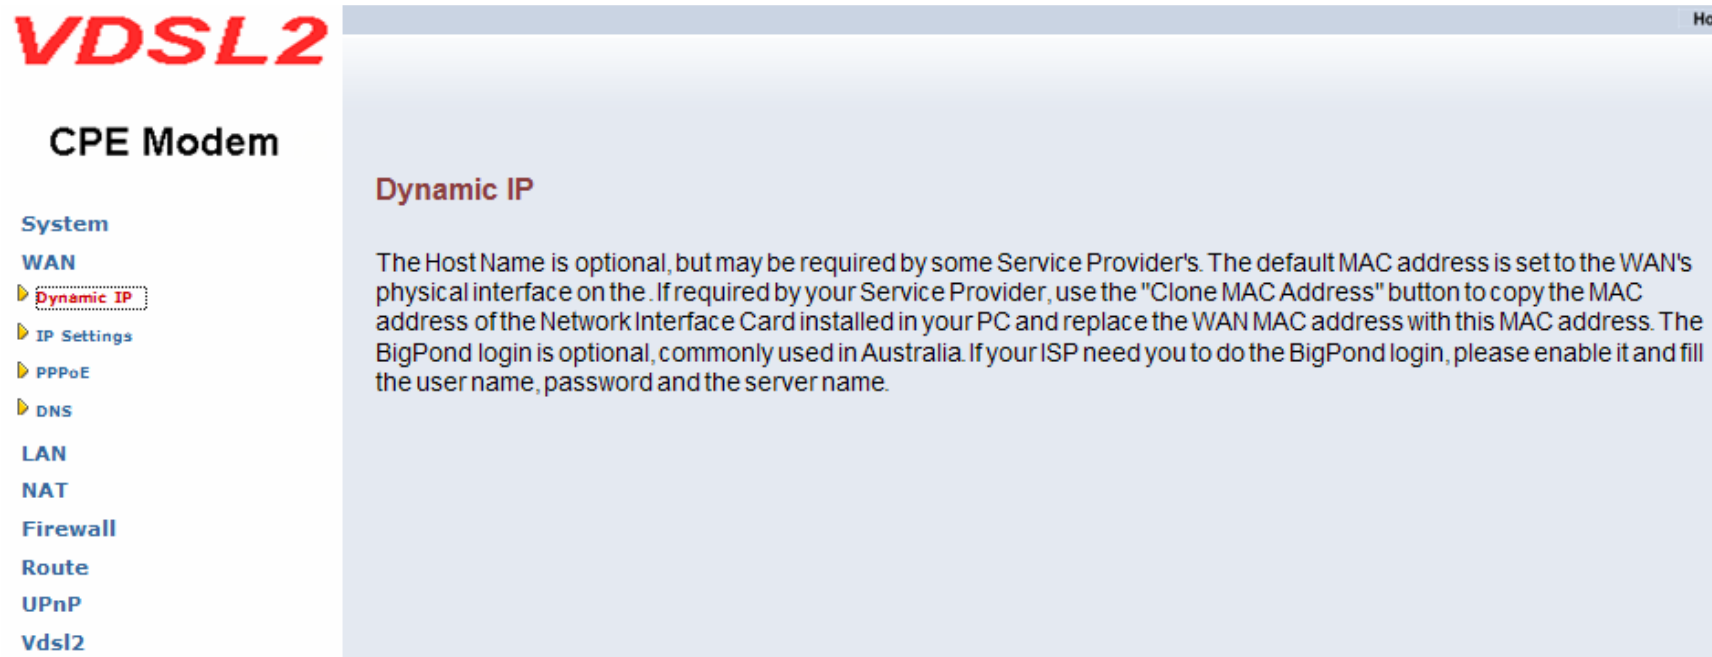


Figure 8.2.4.1 Dynamic IP Configuration

The screen contains the following details:

- Click APPLY to save the information that has been entered.
- Click CANCEL to exit from this page.

8.2.4.2 IP Settings

To configure the WAN interface to use a Static IP Address, click on the Static IP link in the left navigation bar. A screen is displayed as shown in [Figure 8.2.4.2](#).

VDSL2

CPE Modem

- System
- WAN
 - Dynamic IP
 - IP Settings**
 - PPPoE
 - DNS
- LAN
- NAT
- Firewall
- Route
- UPnP
- Vdsl2

Static IP

If your Service Provider has assigned a fixed IP address, enter the assigned IP Address, Subnet Mask and ISP Gateway Address provided.

IP address assigned by your ISP: .

Subnet Mask: .

ISP Gateway Address: .

Does ISP provide more IP addresses Yes

Alias IP Address	Subnet Mask	
<input type="text"/> . <input type="text"/> <input type="text"/> <input type="text"/>	<input type="text"/> . <input type="text"/> <input type="text"/> <input type="text"/>	<input type="button" value=" << Add"/>

Figure 8.2.4.2 Static IP Configuration

The screen contains the following details:

Fields in Static IP

Field	Description
IP Address assigned by your ISP	Enter the IP Address of VDSL2 CO/CPE Router.
Subnet Mask	Enter the Subnet Mask of VDSL2 CO/CPE Router.
ISP Gateway Address	Enter the Gateway address of the VDSL2 CO/CPE Router.
Does ISP provide more IP Address	Provides more IP Addresses of the WAN interface. Select the check box to enable this option. A screen is displayed as shown in Figure 41. Click Add to add IP Address and Subnet Mask.
IP Pool Starting Address	Enter the starting IP Pool Address.
IP Pool Ending Address	Enter the ending IP Pool Address.
Lease Time	Enter the Lease Time from half hour to two weeks.
Local Domain Name	Enter the Local Domain Name but is optional.

- Click APPLY to save the information that has been entered.
- Click CANCEL to exit from this page without saving the changes.

8.2.4.3 PPPoE

To configure the WAN interface to use PPPoE, click on the PPPoE link in the left navigation bar. A screen is displayed as shown in [Figure 8.2.4.3](#).

VDSL2 Home |

CPE Modem

System

WAN

- Dynamic IP
- IP Settings
- PPPoE**
- DNS

LAN

NAT

Firewall

Route

UPnP

Vdsl2

PPPoE

Enter the PPPoE user name and password assigned by your Service Provider. The Service Name is normally optional, but may be required by some service providers. Enter a Maximum Idle Time (in minutes) to define a maximum period of time for which the Internet connection is maintained during inactivity. If the connection is inactive for longer than the defined Maximum Idle Time, then it will be dropped. You can enable the Auto-reconnect option to automatically re-establish the connection as soon as you attempt to access the Internet again..

If your Internet Service Provider requires the use of PPPoE, enter the information below.

User Name	<input type="text"/>
Password	<input type="password"/>
Please retype your password	<input type="password"/>
Service Name	<input type="text"/>
MTU (1400-1492)	<input type="text" value="1492"/>
Maximum Idle Time	<input type="text" value="0"/> (minutes) <input type="checkbox"/> Auto-reconnect

Figure 8.2.4.3 PPPoE Configuration

The screen contains the following details:

Fields in PPPoE

Field	Description
User Name	Enter a name to use the PPPoE session.
Password	Enter the password of the login user.
Retype Password	Enter the password again to reconfirm.
Service Name	Enter a service name.
Field	Description
MTU	Enter the maximum connection units of the PPPoE. The MTU range is 1400 to 1492 bytes. By default, it is 1492.
Maximum Idle Time	This is the period of time required to keep the connection alive if no packets are transmitted. If no packets are transmitted between LAN port and WAN port or between VDSL2 CO/CPE Router and WAN, the connection is disconnected after the 'Maximum idle time. If the Auto-reconnect check box is selected, the PPP connection is re-established if there is some data that is received from the upper layers to be transmitted on this link.

- Click APPLY to save the information that has been entered.
- Click CANCEL to exit from this page without saving the changes.

8.2.4.4 DNS

To configure the DNS address, click on the DNS link in the left navigation bar. A screen is displayed as shown in [Figure 8.2.4.4](#):

VDSL2

CPE Modem

System
WAN
▶ Dynamic IP
▶ IP Settings
▶ PPPoE
▶ **DNS**
LAN
NAT
Firewall
Route
UPnP
Vdsl2

Home |

DNS

A Domain Name system (DNS) server is like an index of IP addresses and Web addresses. If you type a Web address into you browser, a DNS server will find that name in its index and find the matching IP address. Most ISPs provide a DNS server for speed and convenience. Since your Service Provider many connect to the Internet with dynamic IP settings, it is likely that the DNS server IP addresses are also provided dynamically. However, if there is a DNS server that you would rather use, you need to specify the IP address below.

Domain Name Server (DNS) Address

Secondary DNS Address (optional)

Figure 8.2.4.4 DNS Configuration

The screen contains the following details:

Fields in DNS

Field	Description
Domain Name Server(DNS) Address	Enter the DNS address of the primary DNS server.
Secondary DNS Address(optional)	Enter the address of the secondary DNS server, if available.

- Click APPLY to save the information that has been entered.
- Click CANCEL to exit from this page without saving the changes.

8.2.5 LAN

The LAN Setting can be viewed in the left navigation bar. The following are the options available under LAN, as shown in [Figure 8.2.5](#):

- LAN Settings
- DHCP Client List
- LAN Switch Port Setting
- LAN Port Status

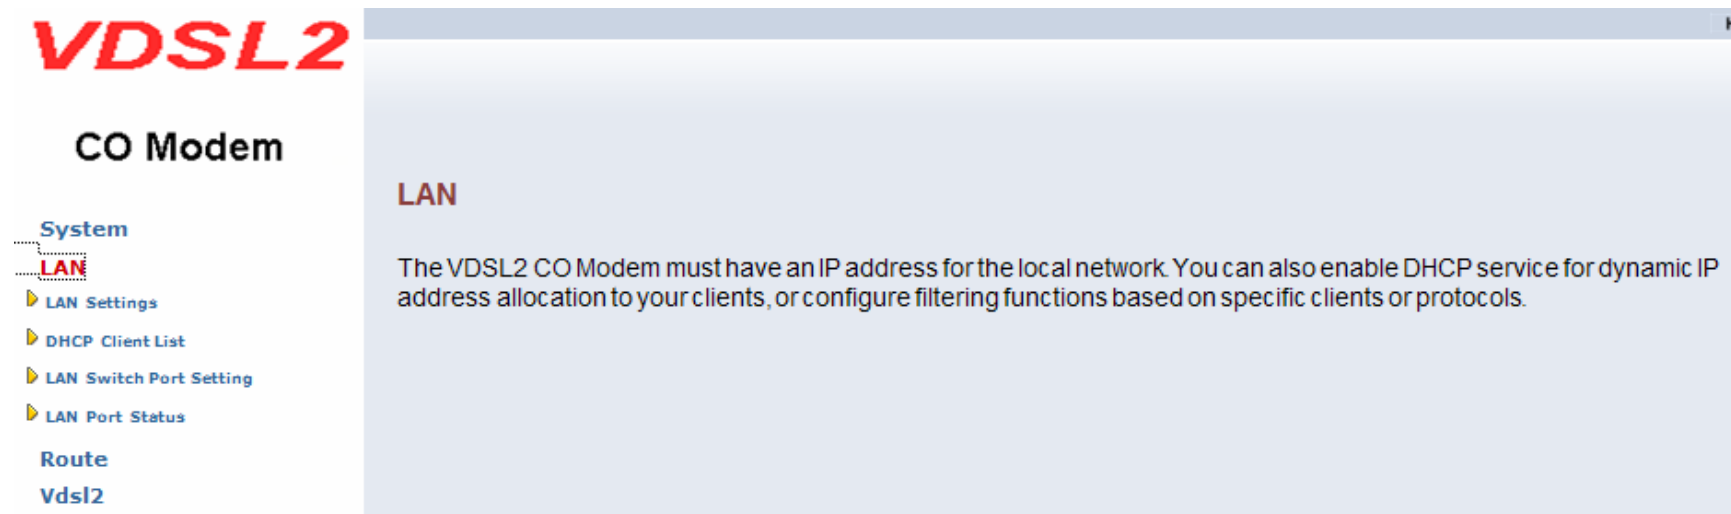


Figure 8.2.5 LAN in Left Navigator Bar

8.2.5.1 LAN Settings

Attention: For the VDSL2 CO/CPE Router, it is recommended to select a simple IP setting suitable to controlled lab environments. Set a static IP address and don't use DHCP. The required steps are explained in Chapter 4.4.1 on Page 21!

To configure the LAN interface, click on the LAN Settings link in the left navigation bar. A screen is displayed as shown in Figure 8.2.5.1 in case of the VDSL2 CO/CPE Router.

The screenshot shows the VDSL2 CO Modem configuration interface. On the left is a navigation menu with categories: System, LAN (expanded), DHCP Client List, LAN Switch Port Setting, LAN Port Status, Route, and Vdsl2. The LAN Settings page is active, displaying the following configuration options:

IP Address	192	168	16	249
Subnet Mask	255.255.255.0			
The Gateway acts as DHCP Server	<input checked="" type="checkbox"/> Enable			
IP Pool Starting Address	192.168.16.	<input type="text" value="2"/>		
IP Pool Ending Address	192.168.16.	<input type="text" value="254"/>		
Lease Time	Half hour <input type="button" value="v"/>			
Local Domain Name	<input type="text"/> (optional)			

Figure 8.2.5.1 LAN Settings

The screen contains the following details:

Fields in LAN Settings

Field	Description
IP Address	Enter the LAN interface IP Address of VDSL2 CO/CPE Router.
Subnet Mask	Enter the LAN Subnet Mask of VDSL2 CO/CPE Router.
The Gateway acts as DHCP Server	Enable or disables the DHCP Server of the VDSL2 CO/CPE Router. Select the check-box to enable this option.

- Click APPLY to save the information that has been entered.
- Click CANCEL to exit from this page without saving the changes.

8.2.5.2 DHCP Client List

To view the DHCP client list, click on the DHCP Client List link in the left navigation bar. A screen is displayed to list all DHCP client connection with IP Address and MAC Address as shown in [Figure 8.2.5.2](#).

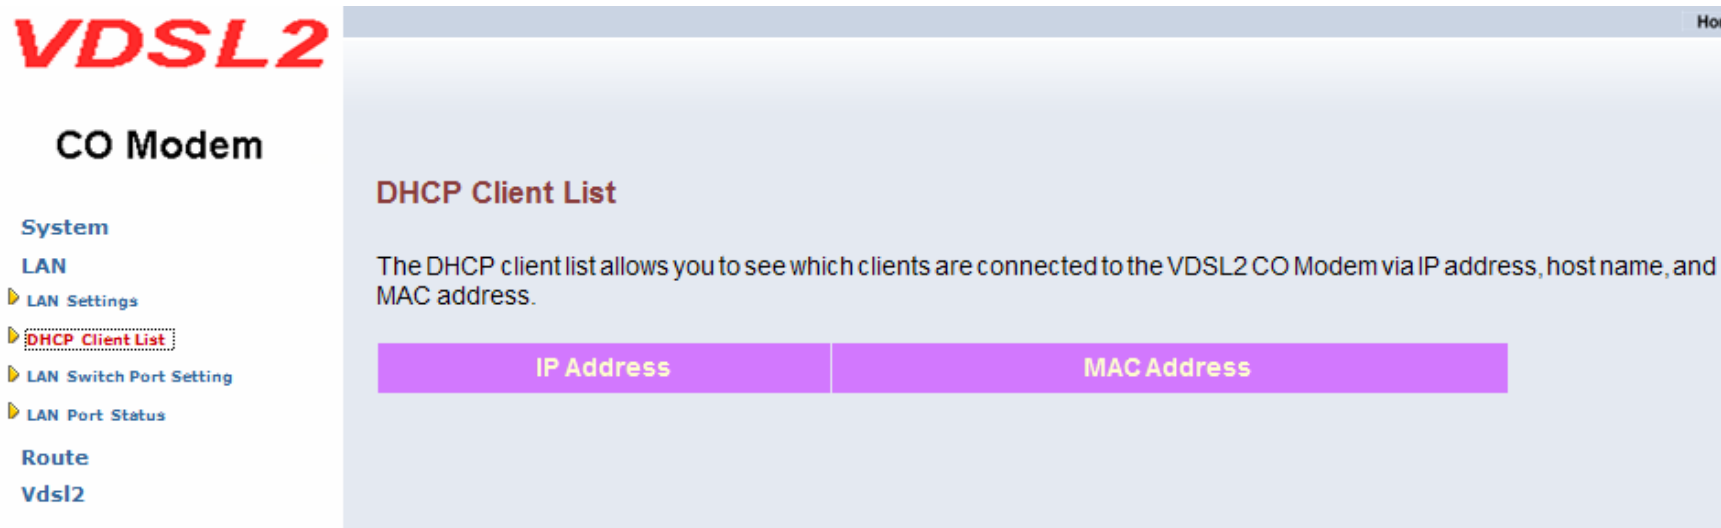


Figure 8.2.5.2 DHCP Client List

8.2.5.3 LAN Switch Port Setting

To view the All LAN Port Setting, click on the All LAN Port Setting link in the left navigation bar. A screen is displayed to all LAN Port Setting as shown in [Figure 8.2.5.3](#).

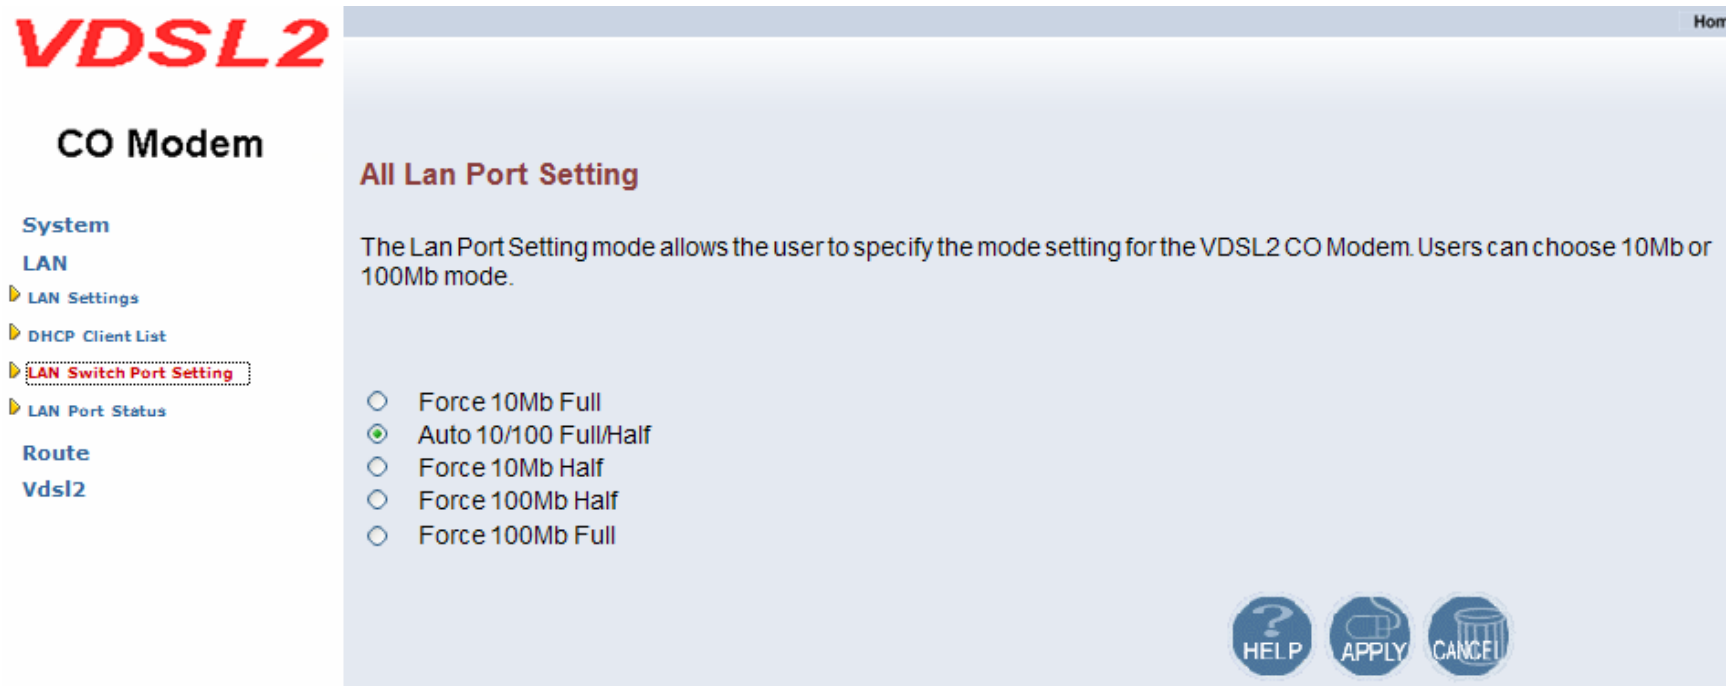


Figure 8.2.5.3 DHCP Client List

8.2.5.4 LAN Port Status

The following information provides a view of the current Ethernet ports status of the unit

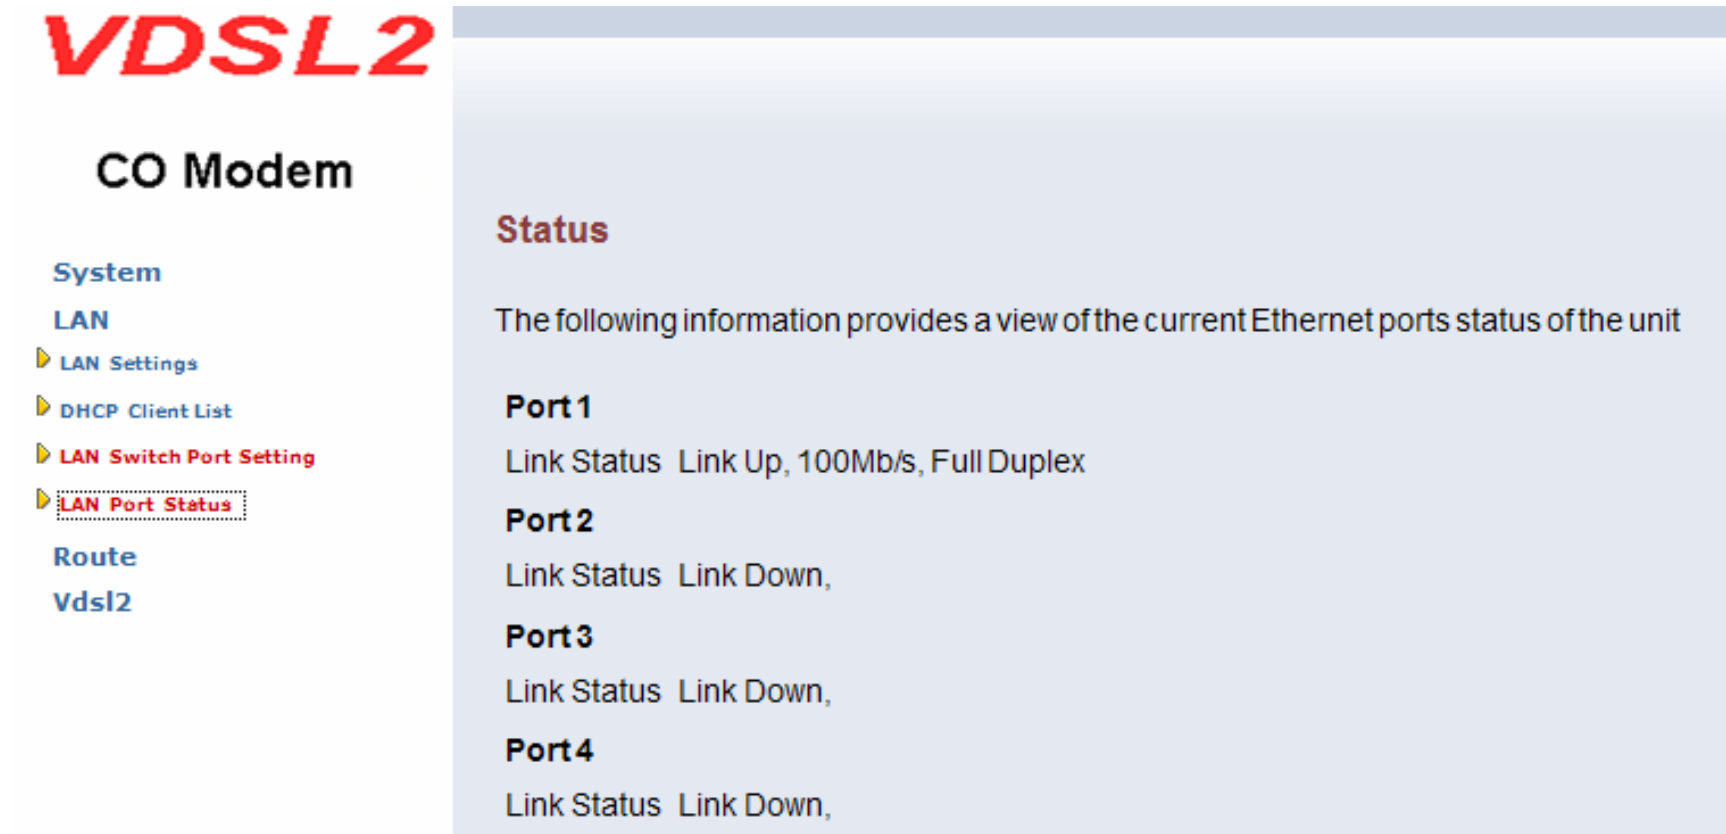


Figure 8.2.5.4 LAN Port Status

8.2.6 NAT

The NAT Settings can be viewed in the left navigation bar of VDSL2 CPE Router only. The following are the options available under NAT, as shown in [Figure 8.2.6](#):

- Virtual Server
- Port Mapping
- DMZ

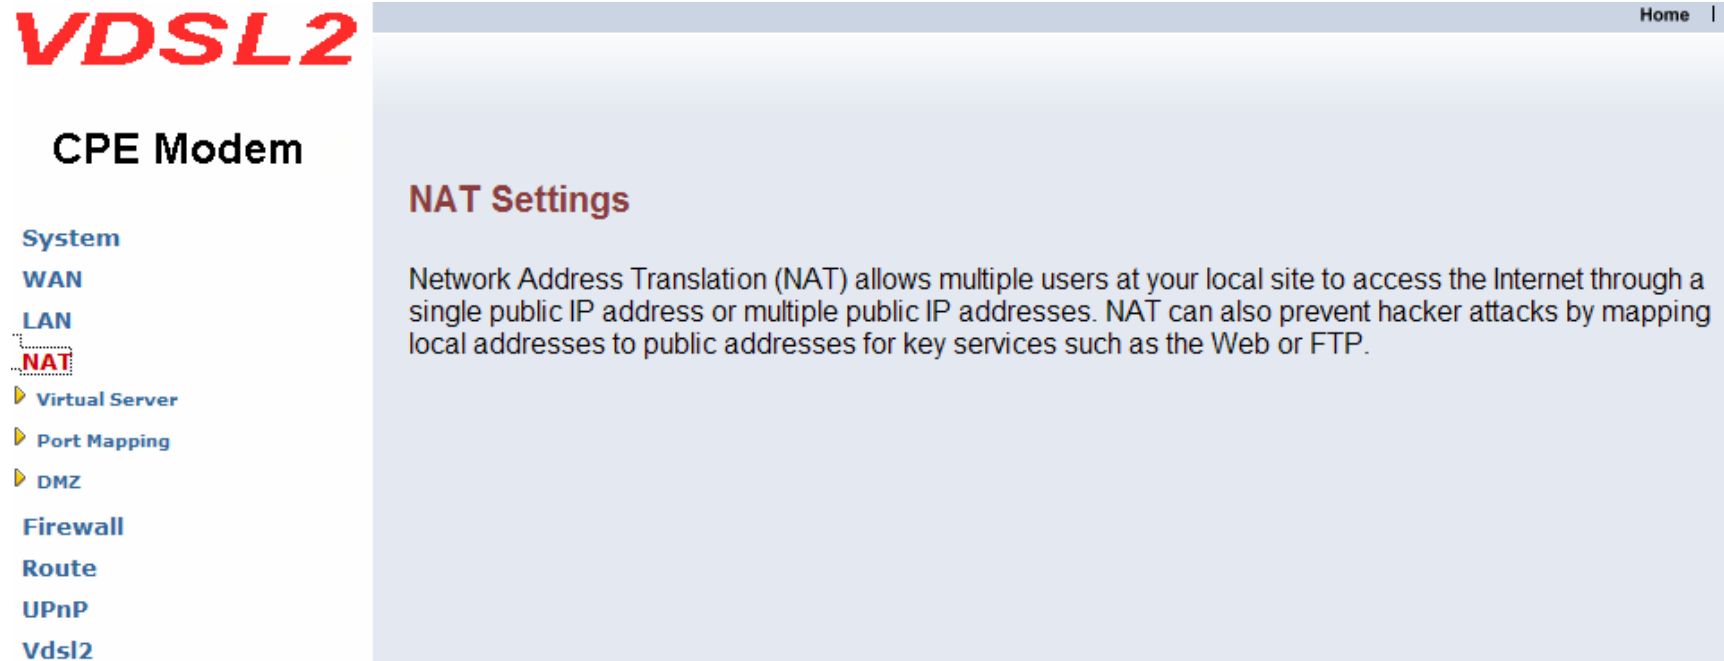


Figure 8.2.6 NAT in Left Navigator Bar

8.2.6.1 Virtual Server

To configure virtual server, click on the Virtual Server link in the left navigation bar. A screen is displayed as shown in Figure 8.2.6.1:

VDSL2

CPE Modem

- System
- WAN
- LAN
- NAT
- Virtual Server**
- Port Mapping
- DMZ
- Firewall
- Route
- UPnP
- Vdsl2

Virtual Server

You can configure the Router as a virtual server so that remote users accessing services such as the Web or FTP at your local site via public IP addresses can be automatically redirected to local servers configured with private IP addresses. In other words, depending on the requested service (TCP/UDP port numbers), the Router redirects the external service request to the appropriate server (located at another internal IP address).

	Private IP	Private Port	Type	Public Port	Enabled
1	192.168.16. <input type="text"/>	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="text"/>	<input type="checkbox"/>
2	192.168.16. <input type="text"/>	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="text"/>	<input type="checkbox"/>
3	192.168.16. <input type="text"/>	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="text"/>	<input type="checkbox"/>
4	192.168.16. <input type="text"/>	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="text"/>	<input type="checkbox"/>
5	192.168.16. <input type="text"/>	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="text"/>	<input type="checkbox"/>

HELP APPLY CANCEL

Figure 8.2.6.1 Virtual Server Configuration

The screen contains the following details:

Fields in Virtual Server

Field	Description
Private IP	Enter a private IP Address of specified entry.
Private Port	Enter a private Port number of the specified entry.
Type	Select virtual server protocol type of the specified entry.
Public Port	Enter a public port number of the internet user to access the virtual server.
Enabled	Enable the specified entry of the virtual server.

- Click APPLY to save the information that has been entered.
- Click CANCEL to exit from this page without saving the changes.

8.2.6.2 Port Mapping

To configure Port Mapping, click on the Port Mapping link in the left navigation bar. A screen is displayed as shown in Figure 8.2.6.2:

VDSL2

CPE Modem

- System
- WAN
- LAN
- NAT
- ▶ Virtual Server
- ▶ **Port Mapping**
- ▶ DMZ
- Firewall
- Route
- UPnP
- Vdsl2

Port Mapping

For some applications, you need to assign a set or a range of ports to a specified local machine to route the packets. Router allows the user to configure the needed port mappings to suit such applications.

	Server IP	Mapping Ports	Enabled
1	192.168.16. <input type="text"/>	<input type="text"/>	<input type="checkbox"/>
2	192.168.16. <input type="text"/>	<input type="text"/>	<input type="checkbox"/>
3	192.168.16. <input type="text"/>	<input type="text"/>	<input type="checkbox"/>
4	192.168.16. <input type="text"/>	<input type="text"/>	<input type="checkbox"/>
5	192.168.16. <input type="text"/>	<input type="text"/>	<input type="checkbox"/>

HELP APPLY CANCEL

Figure 8.2.6.2 Port Mapping Configuration

The screen contains the following details:

Fields in Port Mapping

Field	Description
Server IP	Enter the IP Address of a specified local machine.
Mapping Port	Assign a range of port or specific port number to route the packets.
Enabled	Enable a specified entry of the Port Mapping.

- Click APPLY to save the information that has been entered.
- Click CANCEL to exit from this page without saving the changes.

8.2.6.3 DMZ

To configure the DMZ, click on the DMZ link in the left navigation bar. A screen is displayed as shown in [Figure 8.2.6.3](#):

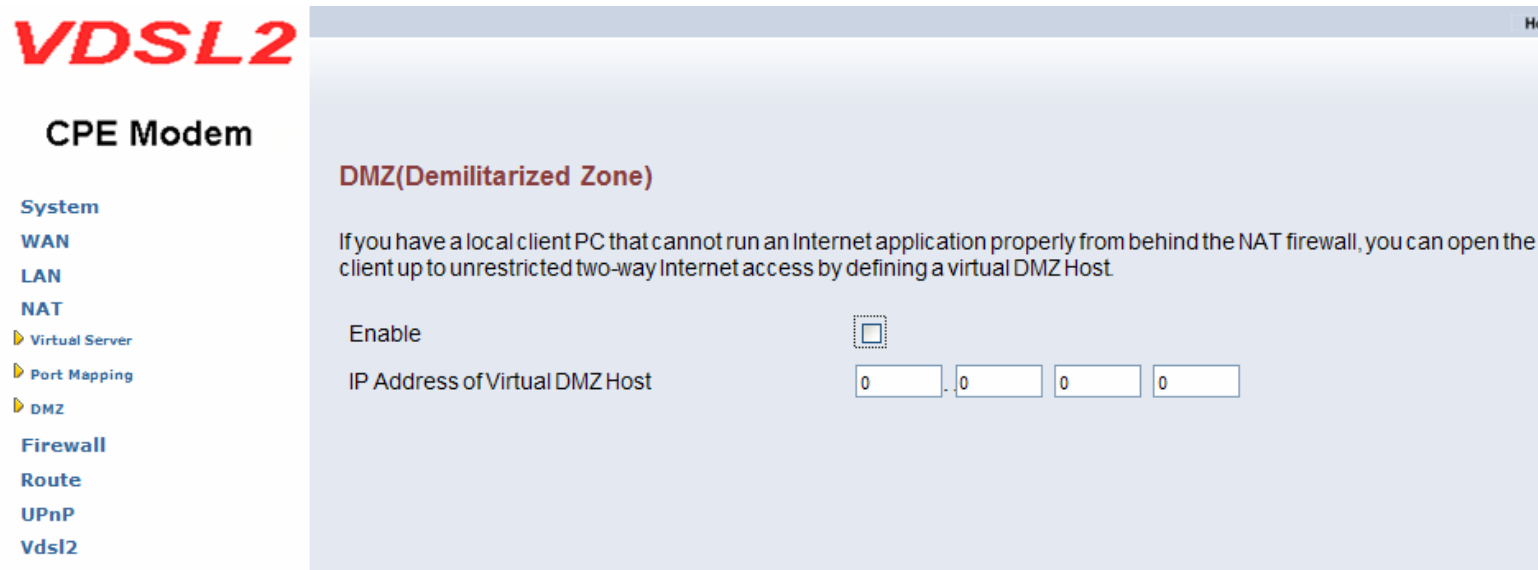


Figure 8.2.6.3 DMZ Configuration

The screen contains the following details:

Fields in DMZ

Field	Description
Enable	Enable or disable the DMZ setting of VDSL2 CO/CPE Router. Select the check box to enable this option.
IP Address	Enter IP Address of the DMZ host.

- Click APPLY to save the information that has been entered.
- Click CANCEL to exit from this page without saving the changes.

8.2.7 Firewall

The Firewall Settings can be viewed in the left navigation bar of VDSL2 CPE Router only. The following are the options available under Firewall, as shown in [Figure 8.2.7](#):

- Firewall Options
- Client Filter MAC Control
- MAC Control



Figure 8.2.7 Firewall in Left Navigator Bar

8.2.7.1 Firewall Options

To enable the firewall options, click on the Firewall Options link in the left navigation bar. A screen is displayed as shown in [Figure 8.2.7.1](#):

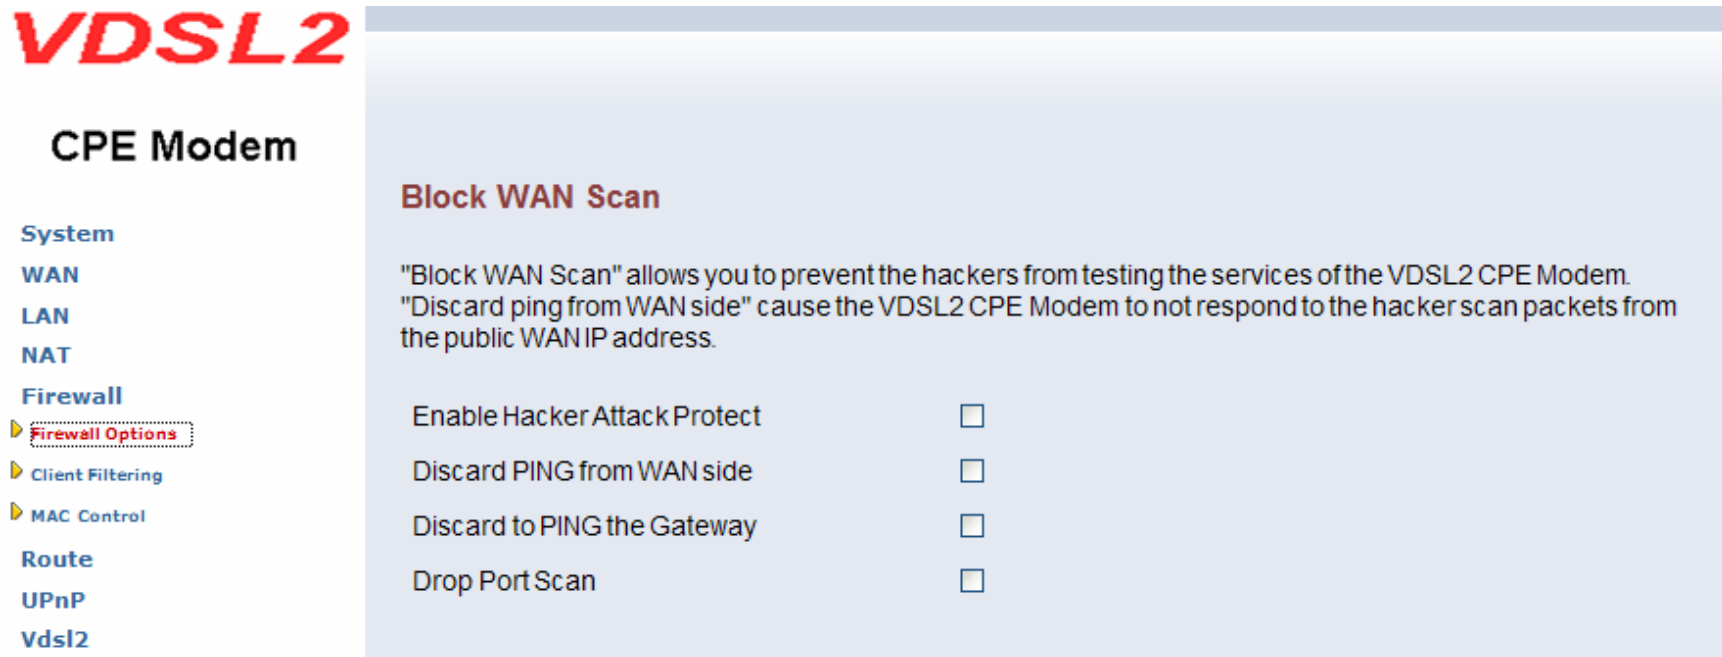


Figure 8.2.7.1 Firewall Options Configuration

The screen contains the following details:

Fields in Firewall Options

Field	Description
Enable Hacker Attack Protect	Select the check box to log and drop all the hacker attack events.
Discard PING from WAN	Select the check box to drop all PING from the WAN side.
Discard PING the Gateway	Select the check box to drop all PING to VDSL2 CO/CPE Router packet for the LAN side.
Drop Port Scan	Select the check box to drop all the port scan packets.

- Click APPLY to save the information that has been entered.
- Click CANCEL to exit from this page without saving the changes.

8.2.7.2 Client Filtering

To enable Client Filter, click on the Client Filter link in the left navigation bar. A screen is displayed as shown in Figure 8.2.7.2.



Figure 8.2.7.2 Client Filter Configuration

The screen contains the following details:

Fields in Client Filter

Field	Description
Enable Client Filter	Enable or disable the Client Filter feature of VDSL2 CO&CPE Router. Select the check box to enable this option.
IP	Enter the filter IP Address range of the local machines under VDSL2 CO&CPE Router.
Port	Enter the filter Port number range of the local machines under VDSL2 CO&CPE Router.
Type	Select TCP or UDP to filter the protocol type packets from the local machines.
Enable	Provides more IP Addresses of the WAN interface.

- Click APPLY to save the information that has been entered.
- Click CANCEL to exit from this page without saving the changes.

8.2.7.3 MAC Control

To configure MAC Control, click on the MAC Control link in the left navigation bar. A screen is displayed as shown in [Figure 8.2.7.3](#)

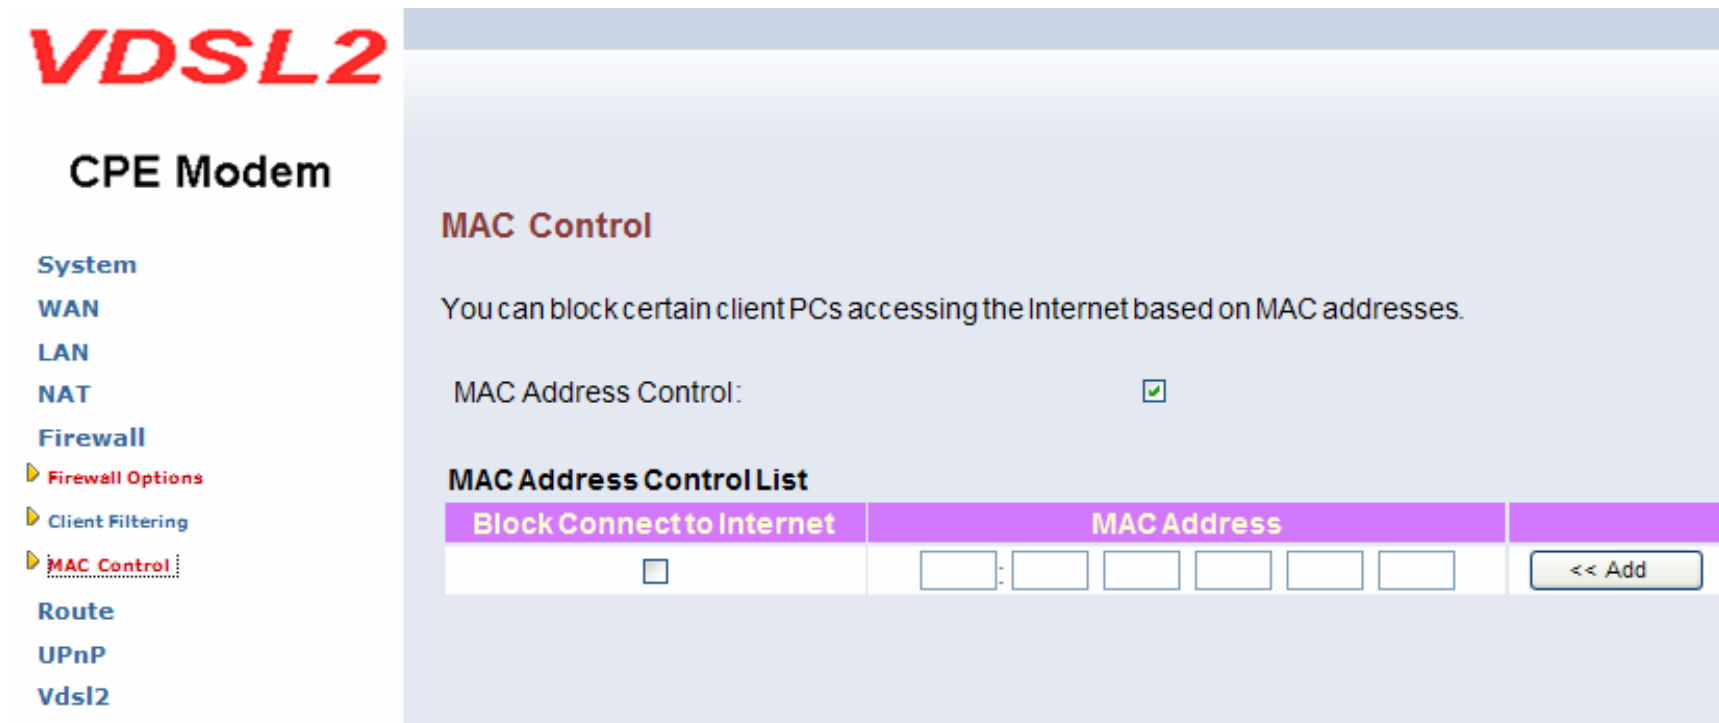


Figure 8.2.7.3 MAC Control Configuration

The screen contains the following details:

Fields in MAC Control

Field	Description
MAC Address Control	Enable or disable the MAC address control.
Block Connection to Internet	Enable or disable block status. If the check box is selected, it blocks the specified MAC address.
MAC Address	Assign the blocking MAC address for local machine.

- Click APPLY to save the information that has been entered.
- Click CANCEL to exit from this page without saving the changes.

8.2.8 Route Settings

The Route Settings can be viewed in the left navigation bar. The following are the options available under Route, as shown in [Figure 8.2.8](#):

- Static Routing
- Routing Table List

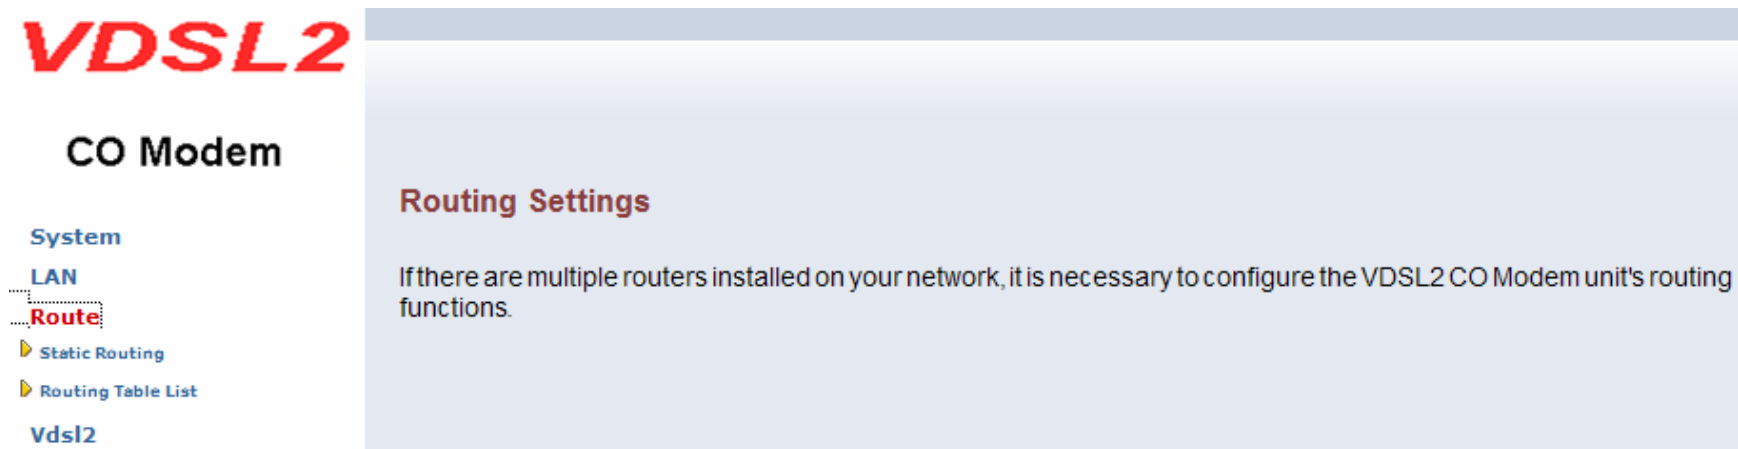


Figure 8.2.8 Route in Left Navigator Bar

8.2.8.1 Static Routing

To setup Static Routing, click on the Static Routing link in the left navigation bar. A screen is displayed as shown in Figure 8.2.8.1.

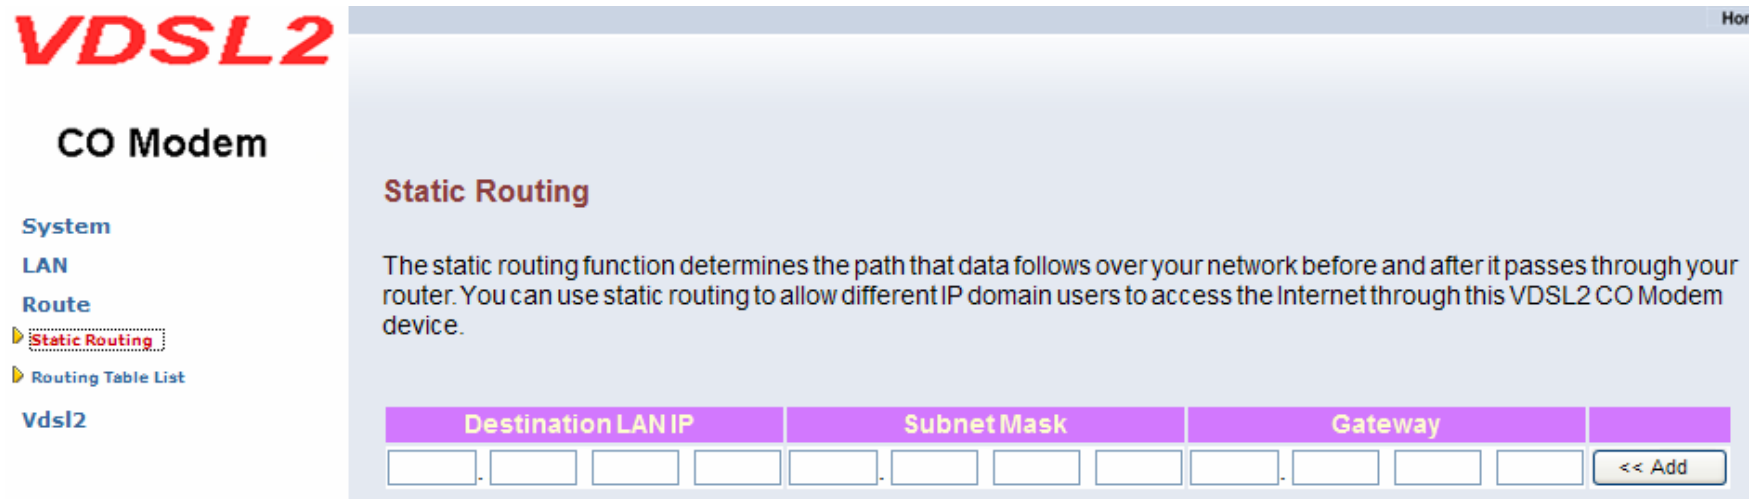


Figure 8.2.8.1 Static Routing Configuration

The screen contains the following details:

Fields in Static Routing

Field	Description
Destination LAN IP	Enter the IP Address of routing entry.
Subnet Mask	Enter the Subnet Mask of routing entry.
Gateway	Enter the Gateway address of routing entry.

- Click Add to add the information that has been entered.

8.2.8.2 Routing Table List

To view the Routing entry table list of VDSL2 CO/CPE Router, click on the Routing Table by link in the left navigation bar. A screen is displayed as shown in [Figure 8.2.8.2](#).

VDSL2

CO Modem

System
LAN
Route
▶ Static Routing
▶ **Routing Table List**
Vdsl2

Routing Table

The Routing table allows you to see how many routings on your VDSL2 CO Modem routing table and interface information.

Destination LAN IP	Subnet Mask	Gateway	Metric	Interface
192.168.16.0	255.255.255.0	0.0.0.0	0	adm0

Refresh

HELP

Figure 8.2.8.2 Routing Table List

The screen contains the following details:

- Click Refresh to update currently routing list of the VDSL2 CO/CPE Router.

8.2.9 UPnP Setting

The UPnP Settings can be viewed in the left navigation bar of VDSL2 CPE Router only. The following are the options available under UPnP, as shown in Figure 8.2.9.

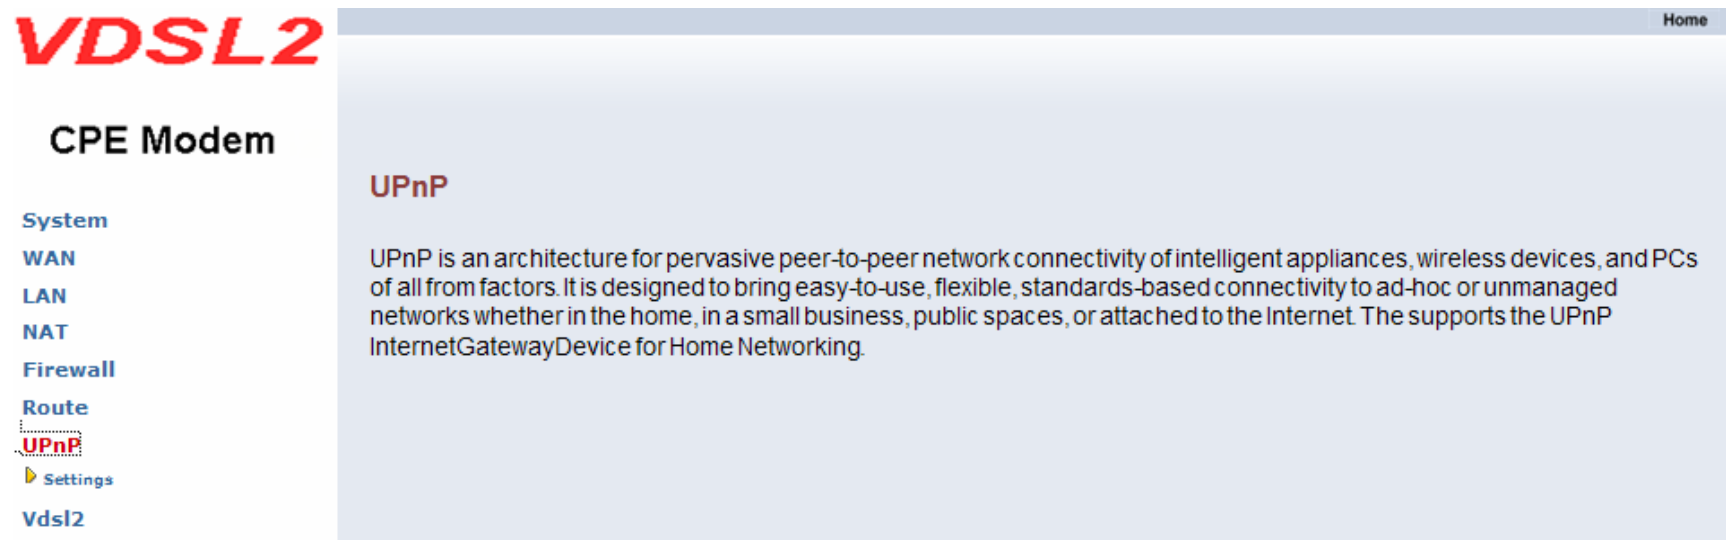


Figure 8.2.9 UPnP in Left Navigator Bar

8.2.9.1 Settings

To enable or disable the UPnP Settings, click on the Settings link in the left navigation bar. A screen is displayed as shown in Figure 8.2.9.1.

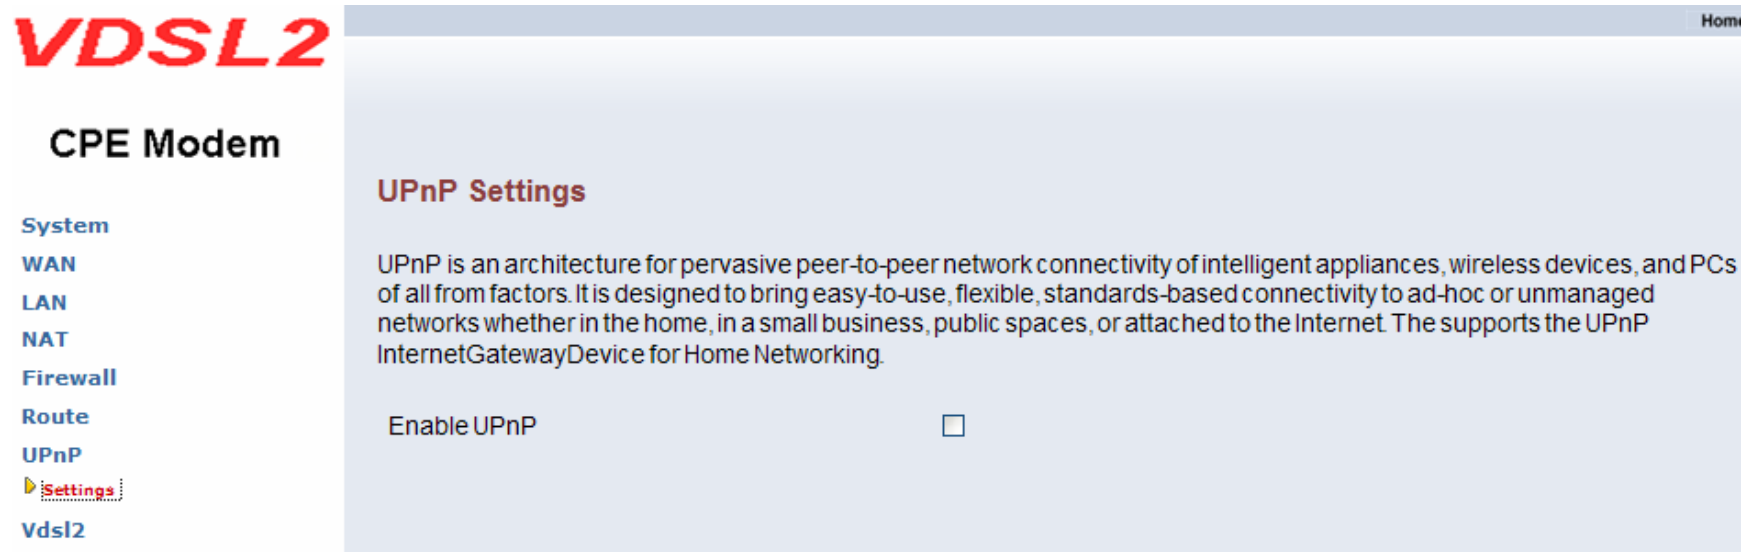


Figure 8.2.9.1 UPnP Configuration

The screen contains the following details:

Fields in UPnP Settings

Field	Description
Enable UPnP	To enable or disable UPnP Setting. Select the check box to Enable or Disable the UPnP function of SPEED-VDSL2 CO&CPE Router.

- Click APPLY at any time during configuration to save the information that you have entered.
- Click CANCEL to exit from this page without saving the changes.

Appendix A: Product Features & Specification

Features:

- Compliant with IEEE 802.3 & 802.3u Ethernet Standards
- Compliant with G993.2 VDSL2 standards
- Provides 4 x 10/100M auto-sensing RJ-45 Ethernet ports
- Supports Bandwidth setup with 100 Mbps VDSL RJ-11 ports
- POTS / ISDN Splitter port RJ-11 x 1 (Splitter on board)
- Support Downstream Power Back-Off(DPBO)
- Supports auto speed for VDSL2 port
- Supports Web management (HTTP)
- Supports TFTP
- Supports Console (RS-232C)
- Supports PPPOE
- Supports NAT/DHCP/DMZ
- Supports Firewall
- Supports Route & Switch (Bridge) mode
- Supports UPnP
- Supports Loop back
- Supports SNR indicator for checking phone wiring quality
- Supports Interleave Delay to prevent against noise and data errors
- Support 8a, 8b, 8c, 8d, 12a, 12b, 17a, 17b, and 30a band profile
- Support 997, 998 band plan
- Provides surge protection for VDSL2 port

Specifications:

Standard:	IEEE802.3 standard IEEE802.3u standard Compliant G993.2 VDSL2 standard
Interface:	4 * RJ-45 10/100Mbps Ethernet port 1 * RJ-11 connector for VDSL2 1 * RJ-11 connector for POTS/ISDN device
Band Profile:	8a, 8b, 8c, 8d, 12a, 12b, 17a, 17b, 30a
Band Plan:	997, 998
Max. Bandwidth:	Symmetric 100 Mbps / 0.3 km
LED indication:	Power LED Link/Active Status for Ethernet port * 4 Link LED for VDSL2 port
Switch method:	Store and forward
Console port:	RS-232C/115200bps
Flow control:	Full duplex: IEEE 802.3x Half duplex: Back pressure
Power Consumption:	VDSL2 CO Router (LT): 5.52W VDSL2 CPE Router (NT): 6.12W
Operating Temperature:	0°C ~ 50°C (32°F ~ 122°F)

Storage Temperature:	-20℃ ~ 70℃ (-4℉ ~ 158℉)
Humidity:	10 to 90% (non-condensing)
Weight:	0.96kg & 1.03kg (for metal case)
Dimensions:	184 x 146 x 40 mm (7.2" x 5.74" x 1.57")
AC to DC adapter:	Input range: 85VAC~240VAC/50~60Hz Output: 12VDC/1A
EMI Compliant:	CE, FCC, VCCI
Chipset:	Infineon

Appendix B: Troubleshooting

- 1. Symptom:** Connected the Co-Router with CPE-Router within 300 meters RJ-11 phonecable got only less than 10 Mbit/s.

Cause: Some testing program which is base on TCP/IP protocol such as FTP, Iperf, NetIQ, the bandwidth of testing outcome will be limited by TCP window size.

Solution: We recommend to test VDSL2 bandwidth best by Smartbit equipment, if you don't have Smartbit, we recommend test that by IPERF program, and TCP window size must be setted max. 64k, the parameter as iperf -c server IP address -i 1 -t 50 -w 65535 for client side.
- 2. Symptom:** VDSL2 CO router cannot link with CPE router.

Cause:

 1. The VDSL2 CO/CPE mode settings of VDSL2 router become unknown.
 2. VDSL2 CO and CPE router tone mode is different due to mixed use of new and old hardware VDSL2 routers.

Solution:

 1. Using the console, reboot the system and go to loader menu. Select set boot parameters and choose the VDSL2 CO/CPE mode correctly. Choose "1" if it is CO router and "0" if it is CPE router. Do not just press enter to skip the setting as it will not retain even if the setting is correct, then it will become unknown causing the VDSL2 router not to link.
 2. Update the old hardware to D series firmware so that you can set the same tone mode for both CO and CPE router.
- 3. Symptom:** VDSL2 web management that uses public IP address cannot be accessed.

Cause: It can be affected by some incoming traffic perhaps web crawlers, worms or other automated activity..

Solution: Open a command prompt and log in to telnet by writing "telnet xxx.xxx.xxx.xxx", xxx is the IP address of your router, then write "cd /etc/rc.d/init.d" to go to this folder, then write "./httpd start" to open the web management, so that it can be accessed again.

Appendix C : Compliance and Safety Information

FCC Radio Frequency Interference Statement

This equipment has been tested to comply with the limits for a computing device, pursuant to Part 15 of FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment can generate, use and radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by taking one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the distance between the equipment and receiver.
3. The equipment and the receiver should be connected to outlets on separate circuits.
4. Consult the dealer or an experienced radio/television technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

If this telephone equipment causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the proper functioning of your equipment. If they do, you will be notified in advance in order for you to make necessary modifications to maintain uninterrupted service.

This equipment may not be used on coin service provided by the telephone company. Connection to party lines is subject to state tariffs.

Important Safety Instructions

Caution: The direct plug-in wall transformer serves as the main product for disconnecting. The socket outlet shall be installed near the product and be readily accessible.

Caution: Use only the power supply included with this product. In the event the power supply is lost or damaged: In the United States, use only with CSA certified or UL listed Class 2 power supply, rated 12Vdc 1A or above.

IN Europe, use only with CE certified power supply, rated 12Vdc 1A or above.

Do not use this equipment near water, for example in a wet basement.

Avoid using a telephone during an electrical storm. There may be a remote risk of electrical shock from lightning.

Do not use the telephone to report a gas leak in the vicinity of the leaking area.

If you experience trouble with this unit, please contact customer service at the address and phone listed below.

DO NOT DISASSEMBLE THIS EQUIPMENT. It does not contain any user serviceable components.

FCC Warning

This equipment has been tested to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment can generate, use, and radiate radio frequency energy and, if not installed and used in accordance

with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at owner's expense.

CE Mark Warning

This is a CE class A product. In a domestic environment, this product may cause radio interference in which case the user may be required to take adequate measures.

Warranty

The original owner of this package will be free from defects in material and workmanship for one year parts after purchase. For the warranty to apply, you must register your purchase by returning the registration card indicating the date of purchase.

There will be a minimal charge to replace consumable components, such as fuses, power transformers, and mechanical cooling devices. The warranty will not apply to any products which have been subjected to any misuse, neglect or accidental damage, or which contain defects which are in any way attributable to improper installation or to alteration or repairs made or performed by any person not under control of the original owner.

The above warranty is in lieu of any other warranty, whether express, implied, or statutory, including but not limited to any warranty of merchantability, fitness for a particular purpose, or any warranty arising out of any proposal, specification, or sample. We shall not be liable for incidental or consequential damages. We neither assume nor authorize any person to assume for it any other liability.



**WARNING:
DO NOT TEAR OFF OR REMOVE THE WARRANTY STICKER AS SHOWN, OR THE WARRANTY IS VOID.**